


**DAIKIN**

# OPERATING MANUAL

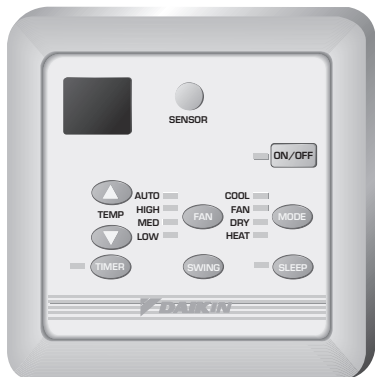

Operating Manual  
Handset Wired

**English**

Mode D'emploi  
Combiné Câblé

**Français**

Bedienungsanleitung  
Verdrahtetes Handgerät

**Deutsch**

Manuale Di Funzionamento  
Ricevitore Cablato

**Italiano**

Manual De Instruccion  
Auricular Alámbrico

**Español**

Руководство По Эксплуатации  
Проводное Дистанционное Управление

**Русский**

Kullanım Kilavuzu  
Kablolu Kumanda

**Türkçe**

**OM-SLM-0512(1)-DAIKIN  
Part No.: R08019037794A**

**SLM Controller Indication**

**SLM Indication De Contrôleur**


**SLM Controller-Anzeige**

**SLM Indicazione Del Regolatore**

**SLM Indicación Del Regulador**

**Показания устройства SLM**

**SLM Denetleyici Gösterimi**

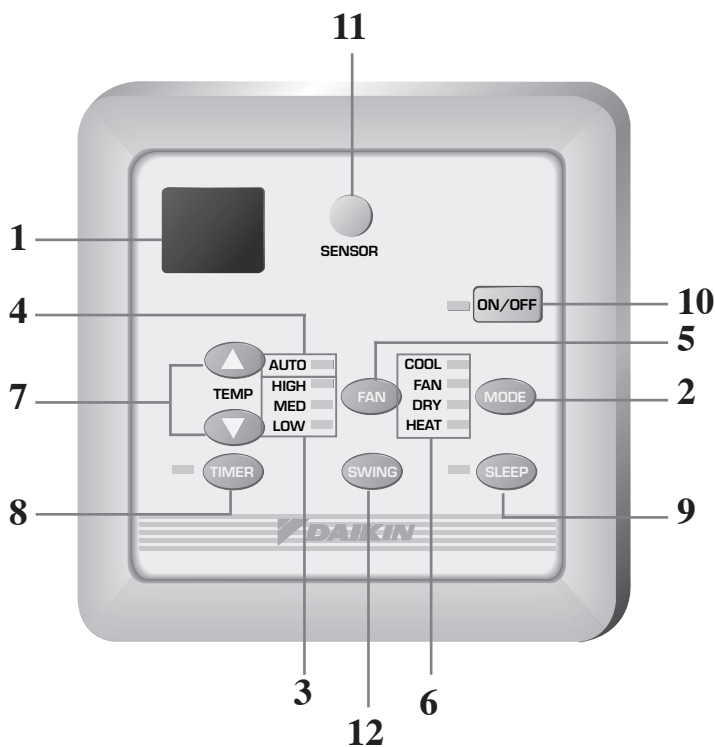

## 1. TEMPERATURE (Seven Segments)

- To indicate the ambient temperature set by the user.

## 2. MODE

- To indicate the selected operating mode: HEAT & DRY / COOL / FAN (LED green / yellow / red).

## 3. VENTILATION SPEED

- To indicate the selected ventilation speed: LOW / MED / HIGH
- For U1-SB125 only have single speed: HIGH.

## 4. AUTO SELECTION

- Automatic selection for speed, whereby the speed is automatically adjusted according to the room temperature.

## 5. FAN AND VENTILATION MODE

- Press the fan button to set the desired selection.

## 6. OPERATION SELECTION MODE

- Press the mode button to select the type of operation mode.
- Cooling unit: COOL, DRY, FAN.
- Heat pump unit: AUTO, COOL, DRY, FAN, HEAT.

The Auto mode is unavailable for Chilled Water (CW) 2 pipe system.

It is available for Chilled Water (CW) 4 pipe system.

## 7. TEMPERATURE SETTING

- Set the desired temperature.
- Press ▲ or ▼ button to increase or decrease the set temperature. The setting range is between 16°C to 30°C (60°F to 80°F).

## 8. TIMER SWITCH SETTING

- Press the set button to activate the switch timer of the air conditioner unit (the setting range is between 1 to 10 hours). The unit will be at ON or OFF state in function of operating mode.

## 9. “SLEEP” FUNCTION

- Press the sleep button to select the sleep function. This function cannot be selected if the air conditioner unit is operating under FAN mode only or dry mode. For SLEEP function operating under COOL mode, the set temperature increases by 0.5°C after 30 minutes, another 0.5°C after the next 30 minutes and 1°C after the following 1 hour. When the unit is operating under heating mode, the set temperature decreases by 1°C after 30 minutes, another 1°C after the next 30 minutes and 1°C after the following 1 hour.

## 10. “ON/OFF” SWITCH

- Press once, the air conditioner unit starts.
- Press again, the air conditioner unit stops.

## 11. IR RECEIVER

## 12. AUTOMATIC AIR SWING (OPTIONAL)

- Press the SWING button to activate the automatic air swing function.
- To distribute the air to a specific direction, press the button and wait until the louver move to the desired direction and press the SWING button once again.

### **DX Error Code**

<b>Error Description</b>	
Room Sensor Open or Short	E1
Indoor Coil Sensor Open	E2
Outdoor Coil Sensor Open	E3
Compressor Overload/ Indoor Coil Sensor Short/ Outdoor Coil Sensor Short	E4
Low Refrigerant Charge/ Gas Leak/ Outdoor Abnormal	E5
Water Pump Fault	E6
Outdoor Coil Sensor Exist (MS mode)	E7
Hardware Error (Tact Switch Pin Short)	E8
Indoor Fan Feedback Error	E9
EEPROM Error	EE

### **CW Error Code**

<b>Error Description</b>	
Room Sensor Open or Short	E1
Pipe Water Sensor Open or Short	E2
Pipe Water Temperature Poor	E4
Pipe Water Temperature Bad/ Fault	E5
Water Pump Error	E6
Hardware Error (Tact Switch Pin Short)	E8
Indoor Fan Feedback Error	E9

**NOTE:**

- Function 3, 4, 5, 12 are not applicable for Roof Top models.
- Function 6 (Dry Mode) is not applicable for Roof Top models.
- Function 12 (Automatic Air Swing) mode is not applicable for ducted models.

## **13. CONNECTION WIRES GUIDE**

<b>Mainboard</b>	<b>Wire Type</b>	<b>Maximum Wire Length (m)</b>
SB 125 board	UL 2547 AWG 26	10
08A board	UL 2547 AWG 26	15
UCW W2 board	UL 2547 AWG 26	15

**MEMO / LE MÉMO / MITTEILUNG / PROMEMORIA /  
EL MEMORÁNDUM / ΠΑΜΥΤΚΑ / NOT**

- In the event that there is any conflict in the interpretation of this manual and any translation of the same in any language, the English version of this manual shall prevail.
- The manufacturer reserves the right to revise any of the specification and design contain herein at any time without prior notification.
- En cas de désaccord sur l'interprétation de ce manuel ou une de ses traductions, la version anglaise fera autorité.
- Le fabricant se réserve le droit de modifier à tout moment et sans préavis la conception et les caractéristiques techniques des appareils présentés dans ce manuel.
- Im Falle einer widersprüchlichen Auslegung der vorliegenden Anleitung bzw. einer ihrer Übersetzungen gilt die Ausführung in Englisch.
- Änderungen von Design und technischen Merkmalen der in dieser Anleitung beschriebenen Geräte bleiben dem Hersteller jederzeit vorbehalten.
- Nel caso ci fossero conflitti nell'interpretazione di questo manuale o delle sue stesse traduzioni in altre lingue, la versione in lingua inglese prevale.
- Il fabbricante mantiene il diritto di cambiare qualsiasi specificazione e disegno contenuti qui senza precedente notifica.
- En caso de conflicto en la interpretación de este manual, y en su traducción a cualquier idioma, prevalecerá la versión inglesa.
- El fabricante se reserva el derecho a modificar cualquiera de las especificaciones y diseños contenidos en el presente manual en cualquier momento y sin notificación previa.
- В случае противоречия перевода данного руководства с другими переводами одного и того же текста, английский вариант рассматривается как приоритетный.
- Завод-изготовитель оставляет за собой право изменять характеристики и конструкцию в любое время без предварительного уведомления.
- Bu kılavuzun anlaşılmasında bir çatişim olduğunda ve farklı dillerdeki tercüme ler farklılık gösterdiğinde, bu kılavuzun İngilizce sürümü üstün tutulacaktır.
- Üretici burada bulunan herhangi teknik özellikleri ve tasarımları herhangi bir zamanda ve önceden haber vermeden değıştirme hakkını saklı tutar.

---

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende,  
Belgium

**DAIKIN MCQUAY MIDDLE EAST FZE**

P.O.Box 18674, Galleries 4, 11th Floor,  
Downtown Jebel Ali, Dubai, UAE.

Importer for Turkey:

**DAIKIN ISITMA VE SOĞUTMA SİSTEMLERİ  
SANAYİ TİCARET A.Ş.**

Hürriyet Mah. E-5 Yan Yol Üzeri No:57/2  
34876 KarztaI – İstanbul Türkiye

**DAIKIN INDUSTRIES, LTD.**

Head office:

Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

JR Shinagawa East Bldg., 2-18-1, Konan,  
Minato-ku, Tokyo, 108-0075 Japan  
<http://www.daikin.com/global/>

- إذا حدث أي تعارض في تفسير هذا الكتيب وأي اختلاف في الترجمة نفسها بأية لغة كانت. تكون النسخة الانكليزية هي السائدة.
- يحتفظ المصنع بحق تعديل التصميم وأي مواصفات موجودة هنا في أي وقت من دون إشعار مسبق.

---

**DAIKIN INDUSTRIES, LTD.**

Head office:  
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:  
JR Shinagawa East Bldg., 2-18-1, Konan,  
Minato-ku, Tokyo, 108-0075 Japan  
<http://www.daikin.com/global/>

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende,  
Belgium

**DAIKIN MCQUAY MIDDLE EAST FZE**

P.O.Box 18674, Galleries 4, 11th Floor,  
Downtown Jebel Ali, Dubai, UAE.

Importer for Turkey:

**DAIKIN ISITMA VE SOĞUTMA SİSTEMLERİ  
SANAYİ TİCARET A.Ş.**

Hürriyet Mah. E-5 Yan Yol Üzeri No:57/2  
34876 Karztal – İstanbul Türkiye