




User reference guide

# Packaged air-cooled water chillers and packaged air to water heat pumps

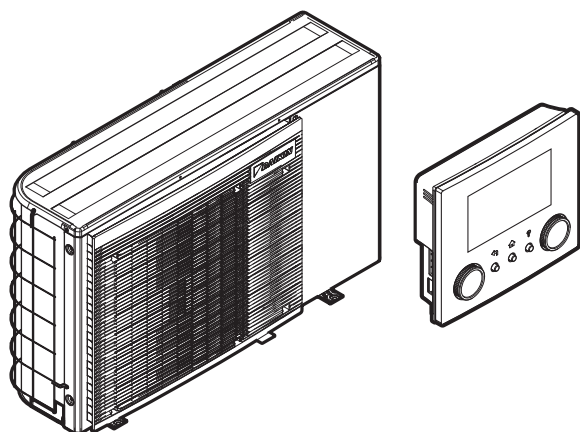

EWAA004D2V3P  
EWAA006D2V3P  
EWAA008D2V3P

EWYA004D2V3P  
EWYA006D2V3P  
EWYA008D2V3P

# Table of contents

<b>1</b>	<b>About this document</b>	<b>4</b>
1.1	Meaning of warnings and symbols	5
<b>2</b>	<b>User safety instructions</b>	<b>7</b>
2.1	General	7
2.2	Instructions for safe operation	8
<b>3</b>	<b>About the system</b>	<b>10</b>
3.1	Components in a typical system layout	10
<b>4</b>	<b>Quick guide</b>	<b>11</b>
4.1	User permission level	11
4.2	Space heating/cooling	12
<b>5</b>	<b>Operation</b>	<b>16</b>
5.1	User interface: Overview	16
5.2	Menu structure: Overview user settings	18
5.3	Possible screens: Overview	19
5.3.1	Home screen	19
5.3.2	Main menu screen	21
5.3.3	Setpoint screen	22
5.3.4	Detailed screen with values	23
5.4	Turning operation ON or OFF	24
5.4.1	Visual indication	24
5.4.2	To turn ON or OFF	24
5.5	Reading out information	25
5.6	Space heating/cooling control	26
5.6.1	About space heating/cooling control	26
5.6.2	Setting the space operation mode	26
5.6.3	Determining which temperature control you are using	28
5.6.4	To change the desired room temperature	28
5.6.5	To change the desired leaving water temperature	29
5.7	Preset values and schedules	30
5.7.1	Using preset values	30
5.7.2	Using and programming schedules	31
5.7.3	Schedule screen: Example	33
5.7.4	Setting the energy prices	38
5.8	Weather-dependent curve	40
5.8.1	What is a weather-dependent curve?	40
5.8.2	2-points curve	40
5.8.3	Slope-offset curve	41
5.8.4	Using weather-dependent curves	43
5.9	Other functionalities	44
5.9.1	To configure time and date	44
5.9.2	Using quiet mode	44
5.9.3	Using holiday mode	45
5.9.4	Using WLAN	46
<b>6</b>	<b>Energy saving tips</b>	<b>49</b>
<b>7</b>	<b>Maintenance and service</b>	<b>50</b>
7.1	Overview: Maintenance and service	50
<b>8</b>	<b>Troubleshooting</b>	<b>52</b>
8.1	To display the help text in case of a malfunction	52
8.2	To check the malfunction history	52
8.3	Symptom: You are feeling too cold (hot) in your living room	53
8.4	Symptom: Unit failure	53
8.5	Symptom: The system is making gurgling noises after commissioning	54
<b>9</b>	<b>Relocation</b>	<b>55</b>
9.1	Overview: Relocation	55
<b>10</b>	<b>Disposal</b>	<b>56</b>
<b>11</b>	<b>Glossary</b>	<b>57</b>
<b>12</b>	<b>Installer settings: Tables to be filled in by installer</b>	<b>58</b>

12.1	Configuration wizard.....	58
12.2	Settings menu .....	58

# 1 About this document

Thank you for purchasing this product. Please:

- Read the documentation carefully before operating the user interface to ensure the best possible performance.
- Request the installer to inform you about the settings that he used to configure your system. Check if he has filled in the installer settings tables. If NOT, request him to do so.
- Keep the documentation for future reference.

## Target audience

End users

## Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
  - Safety instructions that you must read before installing
  - Format: Paper (in the box of the outdoor unit)
- **Operation manual:**
  - Quick guide for basic usage
  - Format: Paper (in the box of the outdoor unit)
- **User reference guide:**
  - Detailed step-by-step instructions and background information for basic and advanced usage
  - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.
- **Installation manual:**
  - Installation instructions
  - Format: Paper (in the box of the outdoor unit)
- **Installer reference guide:**
  - Preparation of the installation, good practices, reference data, ...
  - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.
- **Addendum book for optional equipment:**
  - Additional info about how to install optional equipment
  - Format: Paper (in the box of the outdoor unit) + Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your installer.

The original documentation is written in English. All other languages are translations.

## ONECTA app



If set up by your installer, you can use the ONECTA app to control and monitor the status of your system. For more information, see:

<http://www.onlinecontroller.daikineurope.com/>



## Breadcrumbs

Breadcrumbs (example: **[4.3]**) help you to locate where you are in the menu structure of the user interface.

<b>1</b>	To <b>enable</b> the breadcrumbs: In the home screen or main menu screen, press the help button. The breadcrumbs appear in the top left corner of the screen.	<b>?</b>
<b>2</b>	To <b>disable</b> the breadcrumbs: Press the help button again.	<b>?</b>

This document also mentions these breadcrumbs. **Example:**

<b>1</b>	Go to <b>[4.3]: Space heating/cooling &gt; Operation range</b> .	
----------	--	--

This means:

<b>1</b>	Starting from the home screen, turn the left dial and go to <b>Space heating/cooling</b> .	
<b>2</b>	Press the left dial to enter the submenu.	
<b>3</b>	Turn the left dial and go to <b>Operation range</b> .	
<b>4</b>	Press the left dial to enter the submenu.	

## 1.1 Meaning of warnings and symbols

**DANGER**

Indicates a situation that results in death or serious injury.

**DANGER: RISK OF ELECTROCUTION**

Indicates a situation that could result in electrocution.



## **DANGER: RISK OF BURNING/SCALDING**

Indicates a situation that could result in burning/scalding because of extreme hot or cold temperatures.



## **DANGER: RISK OF EXPLOSION**

Indicates a situation that could result in explosion.



## **WARNING**

Indicates a situation that could result in death or serious injury.



## **WARNING: FLAMMABLE MATERIAL**



## **CAUTION**

Indicates a situation that could result in minor or moderate injury.



## **NOTICE**

Indicates a situation that could result in equipment or property damage.



## **INFORMATION**

Indicates useful tips or additional information.

Symbols used on the unit:

Symbol	Explanation
	Before installation, read the installation and operation manual, and the wiring instruction sheet.
	Before performing maintenance and service tasks, read the service manual.
	For more information, see the installer and user reference guide.
	The unit contains rotating parts. Be careful when servicing or inspecting the unit.

Symbols used in the documentation:

Symbol	Explanation
	Indicates a figure title or a reference to it. <b>Example:</b> "▲ 1–3 Figure title" means "Figure 3 in chapter 1".
	Indicates a table title or a reference to it. <b>Example:</b> "■ 1–3 Table title" means "Table 3 in chapter 1".

## 2 User safety instructions

Always observe the following safety instructions and regulations.

### 2.1 General



#### **WARNING**

If you are NOT sure how to operate the unit, contact your installer.



#### **WARNING**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children SHALL NOT play with the appliance.

Cleaning and user maintenance SHALL NOT be made by children without supervision.



#### **WARNING**

To prevent electrical shocks or fire:

- Do NOT rinse the unit.
- Do NOT operate the unit with wet hands.
- Do NOT place any objects containing water on the unit.



#### **CAUTION**

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.

- Units are marked with the following symbol:



This means that electrical and electronic products may NOT be mixed with unsorted household waste. Do NOT try to dismantle the system yourself: the dismantling of the system, treatment of the refrigerant, of oil and of other parts MUST be done by an authorised installer and MUST comply with applicable legislation.

Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.

- Batteries are marked with the following symbol:



This means that the batteries may NOT be mixed with unsorted household waste. If a chemical symbol is printed beneath the symbol, this chemical symbol means that the battery contains a heavy metal above a certain concentration.

Possible chemical symbols are: Pb: lead (>0.004%).

Waste batteries MUST be treated at a specialised treatment facility for reuse. By ensuring waste batteries are disposed of correctly, you will help to prevent potential negative consequences for the environment and human health.

## 2.2 Instructions for safe operation



### **WARNING: MILDLY FLAMMABLE MATERIAL**

The refrigerant inside this unit is mildly flammable.



### **WARNING**

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).



### **WARNING**

- Do NOT pierce or burn refrigerant cycle parts.
- Do NOT use cleaning materials or means to accelerate the defrosting process other than those recommended by the manufacturer.
- Be aware that the refrigerant inside the system is odourless.



**WARNING**

- The refrigerant inside the unit is mildly flammable, but normally does NOT leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.
- Turn OFF any combustible heating devices, ventilate the room, and contact the dealer where you purchased the unit.
- Do NOT use the unit until a service person confirms that the part from which the refrigerant leaked has been repaired.

**WARNING**

**Air purging heat emitters or collectors.** Before you purge air from heat emitters or collectors, check if 🔔 or ⚠️ is displayed on the home screen of the user interface.

- If not, you can purge air immediately.
- If yes, make sure that the room where you want to purge air is sufficiently ventilated. **Reason:** Refrigerant might leak into the water circuit, and subsequently into the room when you purge air from the heat emitters or collectors.

## 3 About the system

Depending on the system layout, the system can:

- Heat up a space
- Cool down a space



### INFORMATION


Heating is only applicable in case of reversible models.



### INFORMATION

If underfloor heating is installed in the main zone, then in cooling mode the main zone can only provide refreshment. Real cooling is then NOT allowed.

### 3.1 Components in a typical system layout

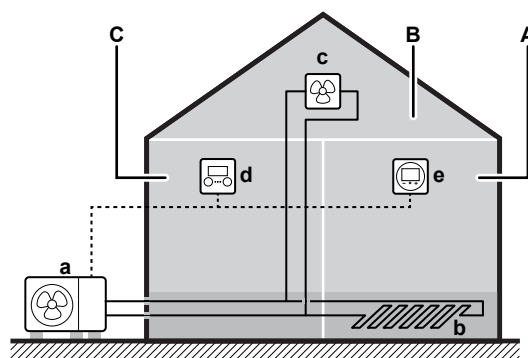

- A** Main zone. **Example:** Living room.
- B** Additional zone. **Example:** Bedroom.
- C** Technical room. **Example:** Garage.
- a** Outdoor unit
- b** Underfloor heating
- c** Fan coil units
- d** User interface
- e** Dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)


 

 
 
## 4 Quick guide

### 4.1 User permission level

The amount of information you can read and edit in the menu structure depends on your user permission level:


- **User:** Standard mode
- **Advanced user:** You can read and edit more information

#### To change the user permission level
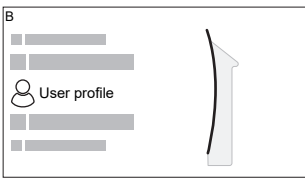
<b>1</b>	Go to [B]: User profile. 	
<b>2</b>	Enter the applicable pin code for the user permission level.	—
	▪ Browse through the list of digits and change the selected digit.	
	▪ Move the cursor from left to right.	
	▪ Confirm the pin code and proceed.	


#### User pin code

The **User** pin code is **0000**.

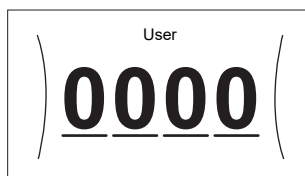


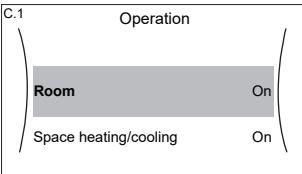

#### Advanced user pin code

The **Advanced user** pin code is **1234**. Additional menu items for the user are now visible.

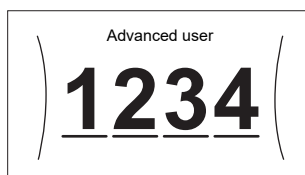

## 4.2 Space heating/cooling

### To turn room temperature control ON or OFF

1	Go to [C.1]: Operation > Room.	
		
2	Set operation to On or Off.	

### To turn space heating/cooling operation ON or OFF



 


#### NOTICE

**Room frost protection.** Even if you turn OFF space heating/cooling operation ([C.2]: Operation > Space heating/cooling), room frost protection operation –if enabled– can still activate. However, for leaving water temperature control and external room thermostat control, the protection is NOT guaranteed.



 

#### NOTICE



**Water pipe freeze prevention.** Even if you turn OFF space heating/cooling operation ([C.2]: Operation > Space heating/cooling), water pipe freeze prevention –if enabled– will remain active.

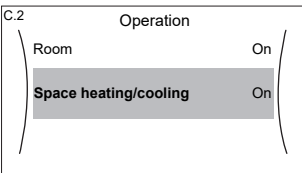1	Go to [C.2]: Operation > Space heating/cooling.	
		
2	Set operation to On or Off.	

### To change the desired room temperature


 

 
During room temperature control, you can use the room temperature setpoint screen to read out and adjust the desired room temperature.

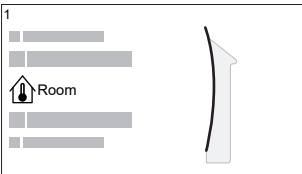1	Go to [1]: Room.	
		

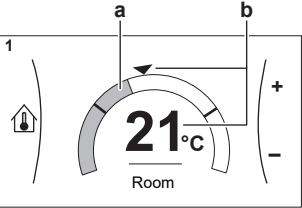2	<p>Adjust the desired room temperature.</p>  <p><b>a</b> Actual room temperature <b>b</b> Desired room temperature</p>	
---	---	---

### To change the desired leaving water temperature

You can use the leaving water temperature setpoint screen to read out and adjust the desired leaving water temperature.

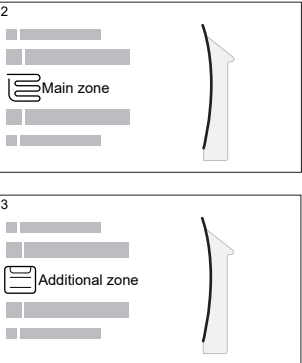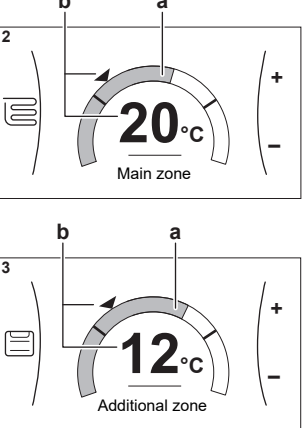1	<p>Go to [2]: <b>Main zone</b> or [3]: <b>Additional zone</b>.</p> 	
2	<p>Adjust the desired leaving water temperature.</p>  <p><b>a</b> Actual leaving water temperature <b>b</b> Desired leaving water temperature</p>	

### To change the weather-dependent curve for the space heating/cooling zones

- 1 Go to the applicable zone:

Zone	Go to ...
<b>Main zone – Heating</b>	[2.5] Main zone > Heating WD curve
<b>Main zone – Cooling</b>	[2.6] Main zone > Cooling WD curve


Zone	Go to ...
<b>Additional zone – Heating</b>	[3.5] Additional zone > Heating WD curve
<b>Additional zone – Cooling</b>	[3.6] Additional zone > Cooling WD curve

## 2 Change the weather-dependent curve.


There are 2 types of WD curves: **slope-offset curve** (default), and **2-points curve**. If needed, you can change the type in [2.E] Main zone > WD curve type. The way to adjust the curve depends on the type.

### Slope-offset curve

**Slope.** When slope is changed, the new preferred temperature at X1 is unequally higher than the preferred temperature at X2.

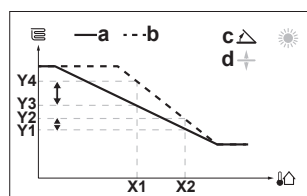


**Offset.** When offset is changed, the new preferred temperature at X1 is equally higher as the preferred temperature at X2.

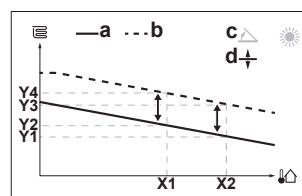

- X1, X2** Outdoor ambient temperature  
**Y1~Y4** Desired leaving water temperature  
**a** WD curve before changes  
**b** WD curve after changes  
**c** Slope  
**d** Offset

Possible actions on this screen	
	Select slope or offset.
	Increase or decrease the slope/offset.
	When slope is selected: set slope and go to offset. When offset is selected: set offset.
	Confirm changes and return to the submenu.

### 2-points curve

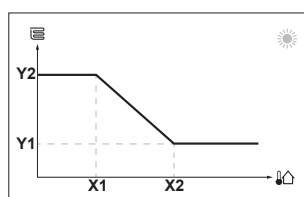

- X1, X2** Outdoor ambient temperature  
**Y1, Y2** Desired leaving water temperature

Possible actions on this screen	
	Go through the temperatures.
	Change the temperature.
	Go to the next temperature.
	Confirm changes and proceed.

### More information

For more information, see also:

- ["5.4 Turning operation ON or OFF" \[▶ 24\]](#)
- ["5.6 Space heating/cooling control" \[▶ 26\]](#)
- ["5.7 Preset values and schedules" \[▶ 30\]](#)
- ["5.8 Weather-dependent curve" \[▶ 40\]](#)

## 5 Operation




### INFORMATION

Heating is only applicable in case of reversible models.

### 5.1 User interface: Overview

The user interface has the following components:

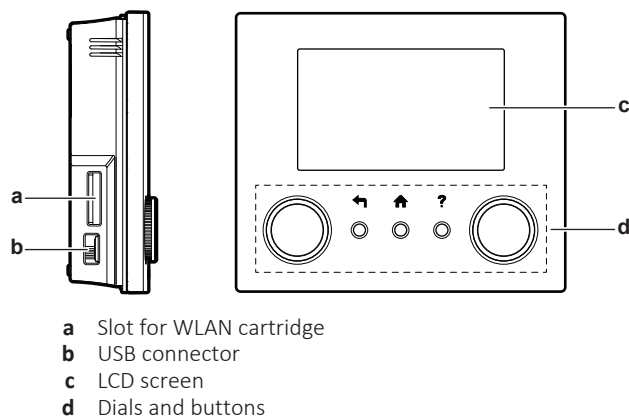

#### Slot for WLAN cartridge

With the WLAN cartridge, the installer can connect the system to the internet. As user you can then control the system via the ONECTA app. **Note:** This slot cannot be used for SD cards.

#### USB connector

With a USB memory stick, the installer can:

- Update the software. This requires a correct config file on the USB memory stick.
- Import the settings generated by E-Configurator (Heating Solutions Navigator) from the USB memory stick to the user interface (MMI). This requires a correct config file on the USB memory stick.
- Export the current settings (i.e. field settings, MMI EEPROM settings, schedule timers) from the user interface (MMI) to the USB memory stick.

#### LCD screen


The LCD screen has a sleeping function. After 15 min of non-interaction with the user interface, the screen darkens. Pressing any button or rotating any dial awakens the display.

#### Dials and buttons

You use the dials and buttons:


- To navigate through the screens, menus and settings of the LCD screen
- To set values



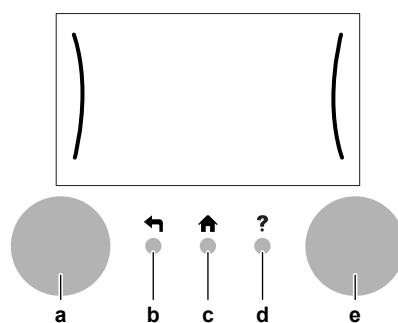

Item		Description
<b>a</b>	Left dial	<p>The LCD shows an arc on the left side of the display when you can use the left dial.</p> <ul style="list-style-type: none"> <li>◀○: Turn, then press the left dial. Navigate through the menu structure.</li> <li>○▶: Turn the left dial. Choose a menu item.</li> <li>○◀: Press the left dial. Confirm your choice or go to a submenu.</li> </ul>
<b>b</b>	Back button	◀: Press to go back 1 step in the menu structure.
<b>c</b>	Home button	🏠: Press to go back to the home screen.
<b>d</b>	Help button	?: Press to show a help text related to the current page (if available).
<b>e</b>	Right dial	<p>The LCD shows an arc on the right side of the display when you can use the right dial.</p> <ul style="list-style-type: none"> <li>○▶: Turn, then press the right dial. Change a value or setting, shown at the right side of the screen.</li> <li>○◀: Turn the right dial. Navigate through the possible values and settings.</li> <li>○▶: Press the right dial. Confirm your choice and go to the next menu item.</li> </ul>

## 5.2 Menu structure: Overview user settings

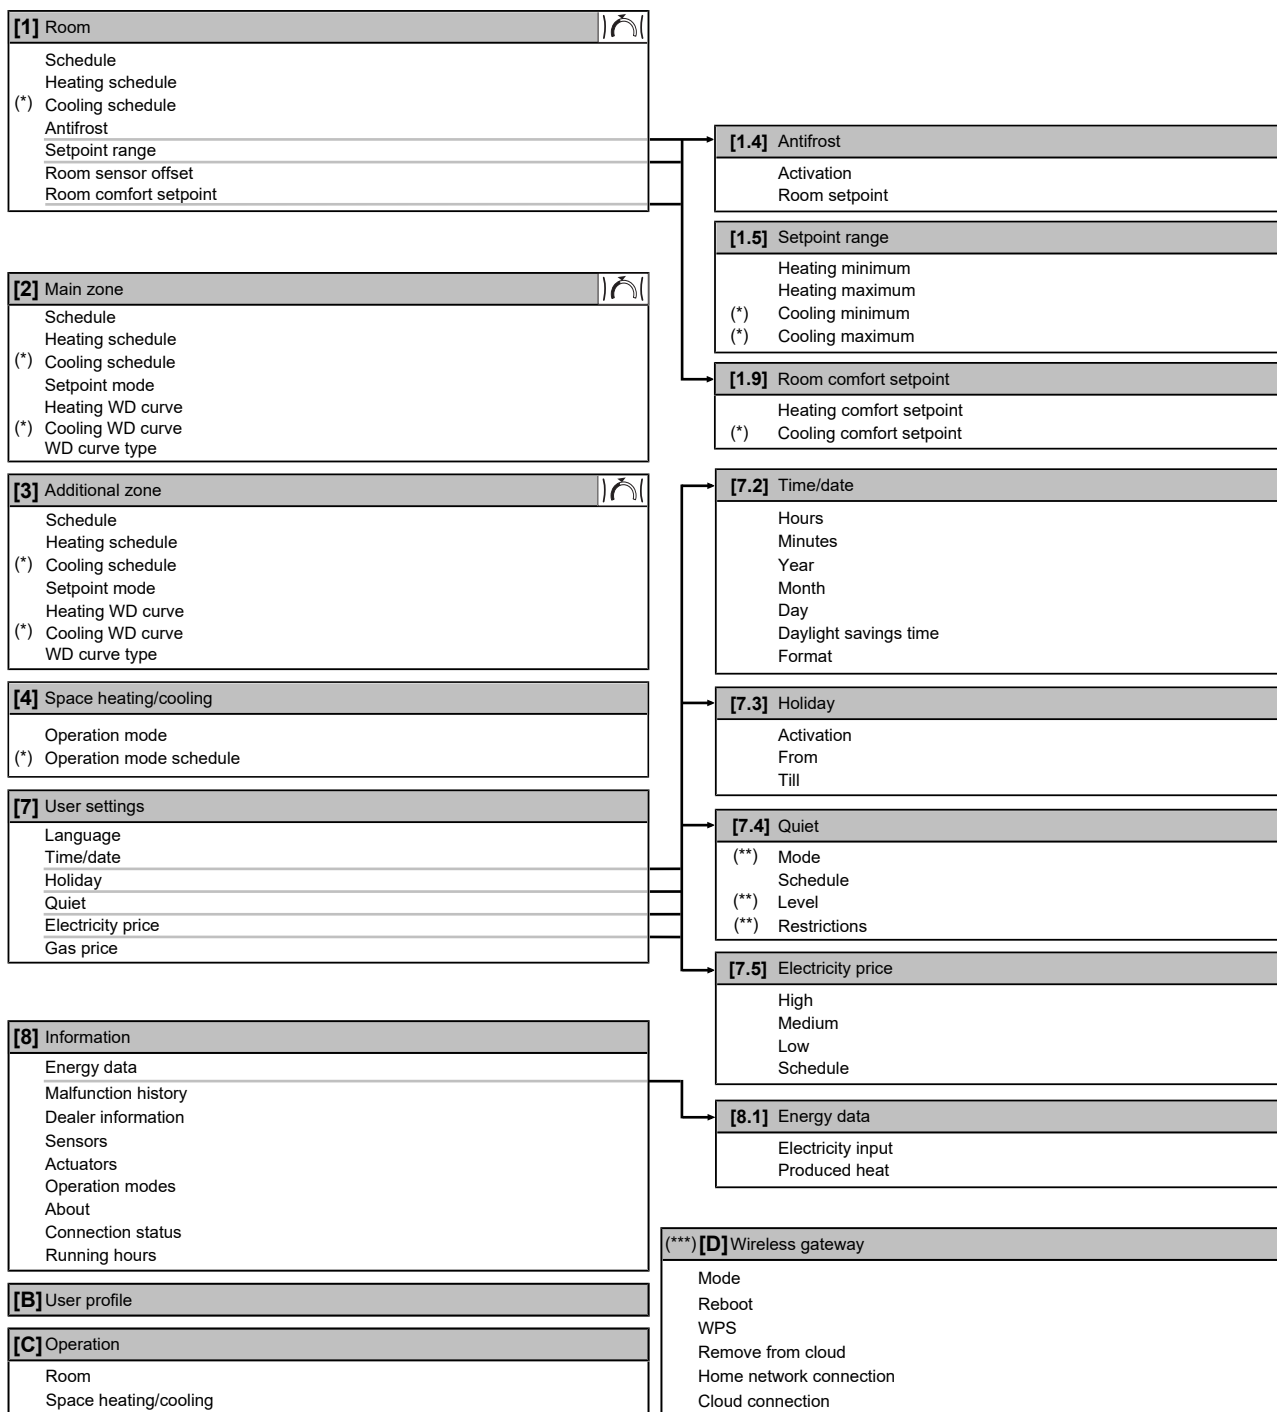

Setpoint screen

(\*)

Only applicable for models where cooling is possible

(\*\*)

Only accessible by installer

(\*\*\*)


Only applicable when WLAN is installed

**INFORMATION**

Depending on the selected installer settings and unit type, settings will be visible/invisible.

5.3 Possible screens: Overview


The most common screens are as follows:

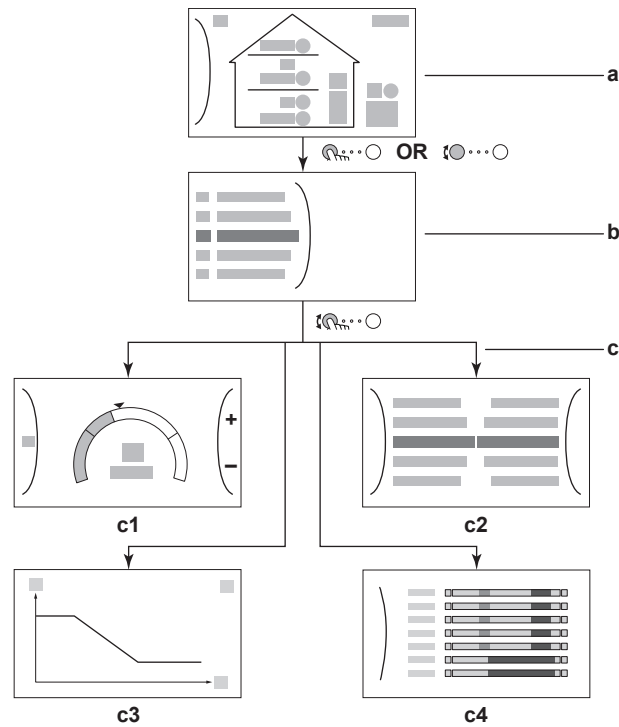




 




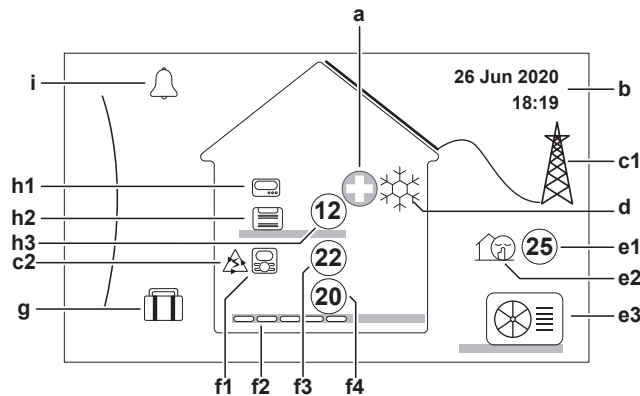



 



- a Home screen
- b Main menu screen
- c Lower level screens:
  - c1: Setpoint screen
  - c2: Detailed screen with values
  - c3: Screen with weather-dependent curve
  - c4: Screen with schedule








5.3.1 Home screen

Press the button to go back to the home screen. You see an overview of the unit configuration and the room and setpoint temperatures. Only symbols applicable for your configuration are visible on the home screen.





Possible actions on this screen	
	Go through the list of the main menu.
	Go to the main menu screen.
?	Enable/disable breadcrumbs.


Item		Description
<b>a</b>	<b>Emergency</b>	
		Heat pump failure and system operates in <b>Emergency</b> mode or heat pump is forced off.
<b>b</b>	<b>Current date and time</b>	
<b>c</b>	<b>Smart energy</b>	
	<b>c1</b>	 Smart energy is available via solar panels or smart grid.
	<b>c2</b>	 Smart energy is currently being used for space heating.
<b>d</b>	<b>Space operation mode</b>	
		Cooling
		Heating
<b>e</b>	<b>Outdoor / quiet mode</b>	
	<b>e1</b>	 Measured outdoor temperature <sup>(a)</sup>
	<b>e2</b>	 Quiet mode active
	<b>e3</b>	 Outdoor unit
<b>f</b>	<b>Main zone</b>	
	<b>f1</b>	Installed room thermostat type:
		 Unit operation is decided based on the ambient temperature of the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat).
		 Unit operation is decided by the external room thermostat (wired or wireless).
		— No room thermostat installed or set. Unit operation is decided based on the leaving water temperature regardless of the actual room temperature and/or heating demand of the room.
	<b>f2</b>	Installed heat emitter type:
		 Underfloor heating
		 Fancoil unit
		 Radiator
	<b>f3</b>	 Measured room temperature <sup>(a)</sup>
	<b>f4</b>	 Leaving water temperature setpoint <sup>(a)</sup>
<b>g</b>	<b>Holiday mode</b>	
		Holiday mode active

Item	Description
<b>h</b>	<b>Additional zone</b>
<b>h1</b>	Installed room thermostat type:
	Unit operation is decided by the external room thermostat (wired or wireless).
—	No room thermostat installed or set. Unit operation is decided based on the leaving water temperature regardless of the actual room temperature and/or heating demand of the room.
<b>h2</b>	Installed heat emitter type:
	Underfloor heating
	Fancoil unit
	Radiator
<b>h3</b>	 Leaving water temperature setpoint <sup>(a)</sup>
<b>i</b>	<b>Malfunction</b>
	A malfunction occurred.
	See "8.1 To display the help text in case of a malfunction" [▶ 52] for more information.



<sup>(a)</sup> If the corresponding operation (for example: space heating) is not active, the circle is greyed out.

### 5.3.2 Main menu screen

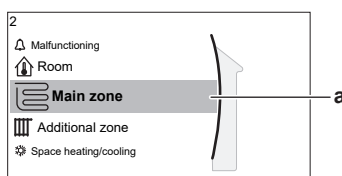

Starting from the home screen, press () or turn () the left dial to open the main menu screen. From the main menu, you can access the different setpoint screens and submenus.














**a** Selected submenu

Possible actions on this screen	
	Go through the list.
	Enter the submenu.
?	Enable/disable breadcrumbs.

Submenu	Description
[0]  or  Malfunctioning	<b>Restriction:</b> Only displayed if a malfunction occurs.  See "8.1 To display the help text in case of a malfunction" [▶ 52] for more information.


Submenu		Description
[1]	 Room	<b>Restriction:</b> Only displayed if a dedicated Human Comfort Interface (BRC1HHDA used as room thermostat) is controlling the outdoor unit. Set the room temperature.
[2]	 Main zone	Shows the applicable symbol for your main zone emitter type. Set the leaving water temperature for the main zone.
[3]	 Additional zone	<b>Restriction:</b> Only displayed if there are two leaving water temperature zones. Shows the applicable symbol for your additional zone emitter type. Set the leaving water temperature for the additional zone (if present).
[4]	 Space heating/cooling	Shows the applicable symbol of your unit. Put the unit in heating mode or cooling mode. You cannot change the mode on cooling only models.
[7]	 User settings	Gives access to user settings such as holiday mode and quiet mode.
[8]	 Information	Displays data and information about the outdoor unit.
[9]	 Installer settings	<b>Restriction:</b> Only for the installer. Gives access to advanced settings.
[A]	 Commissioning	<b>Restriction:</b> Only for the installer. Perform tests and maintenance.
[B]	 User profile	Change the active user profile.
[C]	 Operation	Turn heating/cooling functionality on or off.
[D]	 Wireless gateway	<b>Restriction:</b> Only displayed if a wireless LAN (WLAN) is installed. Contains settings needed when configuring the ONECTA app.

### 5.3.3 Setpoint screen


The setpoint screen is displayed for screens describing system components that need a setpoint value.

Examples


[1] Room temperature screen

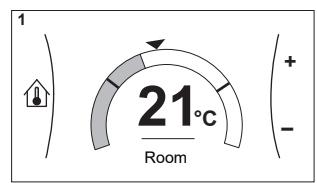


[2] Main zone screen

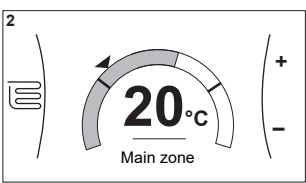

[3] Additional zone screen

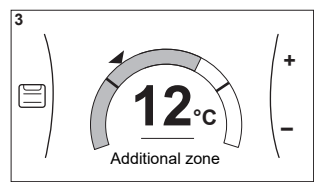


Explanation

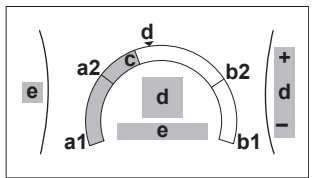

Possible actions on this screen	
	Go through the list of the submenu.
	Go to the submenu.
	Adjust and automatically apply the desired temperature.


Item	Description	
Minimum temperature limit	<b>a1</b>	Fixed by the unit
	<b>a2</b>	Restricted by the installer
Maximum temperature limit	<b>b1</b>	Fixed by the unit
	<b>b2</b>	Restricted by the installer
Current temperature	<b>c</b>	Measured by the unit
Desired temperature	<b>d</b>	Turn the right dial to increase/decrease.
Submenu	<b>e</b>	Turn or press the left dial to go to the submenu.

5.3.4 Detailed screen with values

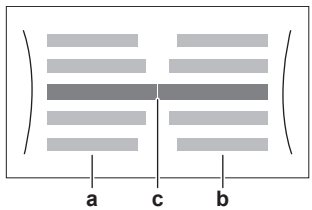
 
 



a Settings  
b Values

Example:

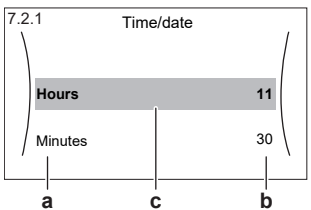

c Selected setting and value


Possible actions on this screen	
	Go through the list of settings.
	Change the value.
	Go to the next setting.
	Confirm changes and proceed.

5.4 Turning operation ON or OFF

5.4.1 Visual indication


Certain functionalities of the unit can be enabled or disabled separately. If a functionality is disabled, the corresponding temperature icon in the home screen will be greyed out.

Room temperature control

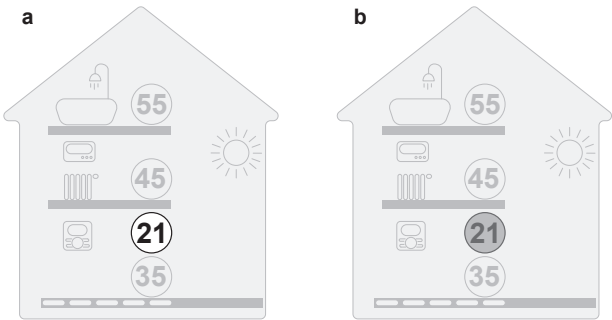

a Room temperature control ON  
b Room temperature control OFF


Space heating/cooling operation

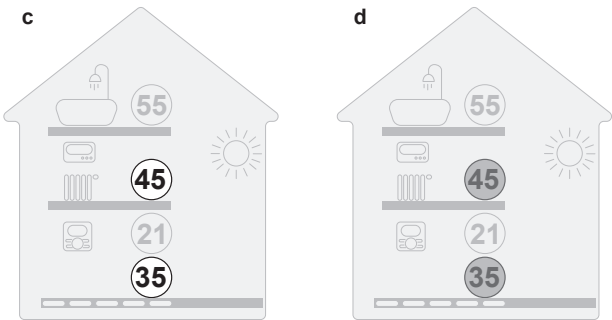

c Space heating/cooling operation ON  
d Space heating/cooling operation OFF

5.4.2 To turn ON or OFF

Room temperature control

1	Go to [C.1]: Operation > Room.	
<div><div>C.1</div><div>Operation</div><div><div>Room</div><div>On</div></div><div><div>Space heating/cooling</div><div>On</div></div></div>		



2	Set operation to On or Off.	
---	-----------------------------	--

### Space heating/cooling operation



#### NOTICE

**Room frost protection.** Even if you turn OFF space heating/cooling operation ([C.2]: Operation > Space heating/cooling), room frost protection operation –if enabled– can still activate. However, for leaving water temperature control and external room thermostat control, the protection is NOT guaranteed.



#### NOTICE

**Water pipe freeze prevention.** Even if you turn OFF space heating/cooling operation ([C.2]: Operation > Space heating/cooling), water pipe freeze prevention –if enabled– will remain active.

1	Go to [C.2]: Operation > Space heating/cooling.	
2	Set operation to On or Off.	

## 5.5 Reading out information

### To read out information

1	Go to [8]: Information.	
---	-------------------------	--

### Possible read-out information

In menu...	You can read out...
[8.1] Energy data	Produced energy, consumed electricity, and consumed gas
[8.2] Malfunction history	Malfunction history
[8.3] Dealer information	Contact/helpdesk number
[8.4] Sensors	Room temperature, outside temperature, leaving water temperature,...
[8.5] Actuators	Status/mode of each actuator <b>Example:</b> Unit pump ON/OFF
[8.6] Operation modes	Current operation mode <b>Example:</b> Defrost/oil return mode
[8.7] About	Version information about the system
[8.8] Connection status	Information about the connection status of the unit, the room thermostat and WLAN.

In menu...	You can read out...
[8.9] Running hours	Running hours of specific system components

## 5.6 Space heating/cooling control

### 5.6.1 About space heating/cooling control

Controlling space heating/cooling typically consists of the following stages:

- 1 Setting the space operation mode
- 2 Controlling the temperature

Depending on the system layout and installer configuration, you use a different temperature control:

- Room thermostat control
- Leaving water temperature control
- External room thermostat control



### 5.6.2 Setting the space operation mode

#### About space operation modes

Your unit can be a cooling or a heating/cooling model:

- If your unit is a cooling model, it can cool down a space.
- If your unit is a heating/cooling model, it can both heat up and cool down a space. You have to tell the system which operation mode to use.

#### To determine if a heating/cooling heat pump model is installed


 
1	Go to [4]: Space heating/cooling.	
2	Check if [4.1] Operation mode is listed and editable. If so, a heating/cooling heat pump model is installed.	

To tell the system which space operation to use, you can:

You can...	Location
Check which space operation mode is currently used.	Home screen
Set the space operation mode permanently.	Main menu
Restrict automatic changeover according to a monthly schedule.	

#### To check which space operation mode is currently used

The space operation mode is displayed on the home screen:

- When the unit is in heating mode, the  icon is shown.
- When the unit is in cooling mode, the  icon is shown.

The status indicator shows if the unit is currently in operation:



- When the unit is not in operation, the status indicator will show a blue pulsation with an interval of approximately 5 seconds.
- While the unit is in operation, the status indicator will light up blue constantly.

### About space operation modes

Your unit can be a cooling or a heating/cooling model:

- If your unit is a cooling model, it can cool down a space.
- If your unit is a heating/cooling model, it can both heat up and cool down a space. You have to tell the system which operation mode to use.

### To determine if a heating/cooling heat pump model is installed


 
<b>1</b>	Go to [4]: <b>Space heating/cooling</b> .	
<b>2</b>	Check if [4.1] <b>Operation mode</b> is listed and editable. If so, a heating/cooling heat pump model is installed.	

To tell the system which space operation to use, you can:

You can...	Location
Check which space operation mode is currently used.	Home screen
Set the space operation mode permanently.	Main menu
Restrict automatic changeover according to a monthly schedule.	

### To check which space operation mode is currently used



The space operation mode is displayed on the home screen:

- When the unit is in heating mode, the  icon is shown.
- When the unit is in cooling mode, the  icon is shown.

The status indicator shows if the unit is currently in operation:




- When the unit is not in operation, the status indicator will show a blue pulsation with an interval of approximately 5 seconds.
- While the unit is in operation, the status indicator will light up blue constantly.

### To set the space operation mode

<b>1</b>	Go to [4.1]: <b>Space heating/cooling &gt; Operation mode</b>	
<b>2</b>	Select one of the following options: <ul style="list-style-type: none"> <li>▪ <b>Heating:</b> Only heating mode</li> <li>▪ <b>Cooling:</b> Only cooling mode</li> <li>▪ <b>Automatic:</b> The operation mode changes automatically between heating and cooling based on the outdoor temperature. Restricted per month according to the <b>Operation mode schedule</b> [4.2].</li> </ul>	

### To restrict automatic changeover according to a schedule

**Conditions:** You set the space operation mode to **Automatic**.

<b>1</b>	Go to [4.2]: <b>Space heating/cooling &gt; Operation mode schedule</b> .	
<b>2</b>	Select a month.	
<b>3</b>	For each month, select an option: <ul style="list-style-type: none"> <li>▪ <b>Reversible:</b> Not restricted</li> <li>▪ <b>Heating only:</b> Restricted</li> <li>▪ <b>Cooling only:</b> Restricted</li> </ul>	

**4** Confirm the changes.



#### Example: Changeover restrictions

When	Restriction
During cold season. <b>Example:</b> October, November, December, January, February and March.	Heating only
During warm season. <b>Example:</b> June, July and August.	Cooling only
In-between. <b>Example:</b> April, May and September.	Reversible


### 5.6.3 Determining which temperature control you are using

#### To determine which temperature control you are using (method 1)

Check the installer settings table filled in by the installer.

#### To determine which temperature control you are using (method 2)

You can see on the home screen which temperature control you are using.

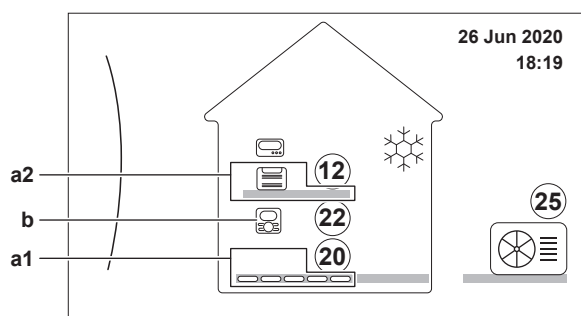
 
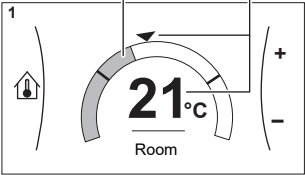



- a1** Heat emitter of the main zone (in this example Underfloor heating)  
**a2** Heat emitter of the additional zone (in this example Fancoil unit). If no icon is displayed, there is no additional zone.  
**b** Room thermostat type of the main zone:

If b=...	Then the temperature control is...	
	Main zone	Additional zone (if any)
	Room thermostat control	External room thermostat control
	External room thermostat control	
No icon	Leaving water temperature control	Leaving water temperature control

### 5.6.4 To change the desired room temperature

During room temperature control, you can use the room temperature setpoint screen to read out and adjust the desired room temperature.

 
 
1	Go to [1]: Room. 	
2	Adjust the desired room temperature.  <b>a</b> Actual room temperature <b>b</b> Desired room temperature	

#### If scheduling is on after changing the desired room temperature

- The temperature will stay the same as long as there is no scheduled action.
- The desired room temperature will return to its scheduled value whenever a scheduled action occurs.

You can avoid scheduled behaviour by (temporarily) turning off scheduling.

#### To turn off room temperature scheduling

1	Go to [1.1]: Room > Schedule.	
2	Select No.	



 
### 5.6.5 To change the desired leaving water temperature





#### INFORMATION

The leaving water is the water that is sent to the heat emitters. The desired leaving water temperature is set by your installer in accordance with the heat emitter type. Only adjust the leaving water temperature settings in case of problems.

You can use the leaving water temperature setpoint screen to read out and adjust the desired leaving water temperature.

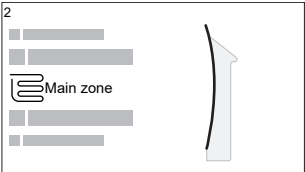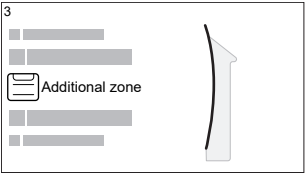1	Go to [2]: Main zone or [3]: Additional zone.  	
---	---	---

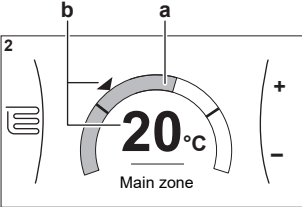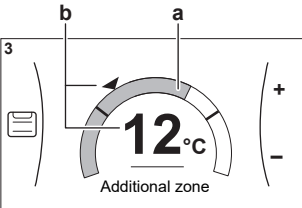2	Adjust the desired leaving water temperature. <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <div style="margin-top: 10px;"> <b>a</b> Actual leaving water temperature  <b>b</b> Desired leaving water temperature         </div>	○...●
---	--	-------

### If scheduling is on after changing the desired leaving water temperature

- The temperature will stay the same as long as there is no scheduled action.
- The desired leaving water temperature will return to its scheduled value whenever a scheduled action occurs.

You can avoid scheduled behaviour by (temporarily) turning off scheduling.

### To turn off leaving water temperature scheduling

1	Go to one of the following: <ul style="list-style-type: none"> <li>▪ [2.1]: <b>Main zone</b> &gt; <b>Schedule</b></li> <li>▪ [3.1]: <b>Additional zone</b> &gt; <b>Schedule</b></li> </ul>	🔊...○
2	Select No.	🔊...○

### To enable weather-dependent operation for the leaving water temperature

See "5.8.4 Using weather-dependent curves" [► 43].

## 5.7 Preset values and schedules

### 5.7.1 Using preset values

#### About preset values

For some settings in the system, you can define preset values. You only need to set these values one time, then reuse the values in other screens such as the scheduling screen. If you later want to change the value, you only have to do it in one place.

#### Possible preset values

You can set the following user-defined preset values:

Preset value		Where used
Electricity prices under [7.5] <b>User settings</b> > <b>Electricity price</b> <b>Restriction:</b> Only applicable if <b>Bivalent</b> is enabled by the installer.	[7.5.1] <b>High</b>	You can use these preset values in [7.5.4] <b>Schedule</b> (weekly schedule screen for the energy prices). See " <a href="#">5.7.4 Setting the energy prices</a> " [▶ 38].
	[7.5.2] <b>Medium</b>	
	[7.5.3] <b>Low</b>	

Additional to the user-defined preset values, the system also contains some system-defined preset values that you can use when programming schedules.

**Example:** In [7.4.2] **User settings** > **Quiet** > **Schedule** (weekly schedule for when the unit has to use which quiet mode level), you can use the following system-defined preset values: **Quiet/More quiet/Most quiet**.



## 5.7.2 Using and programming schedules

 
 

### About schedules

Depending on your system layout and installer configuration, schedules for multiple controls may be available.

You can...	See...
Set if a specific control needs to act according to a schedule.	" <b>Activation screen</b> " in " <a href="#">Possible schedules</a> " [▶ 32]
Select which schedule you currently want to use for a specific control. The system contains some predefined schedules. You can:	
Consult which schedule is currently selected.	" <b>Schedule/Control</b> " in " <a href="#">Possible schedules</a> " [▶ 32]
Select another schedule if needed.	" <a href="#">To select which schedule you currently want to use</a> " [▶ 31]
Program your own schedules if the predefined schedules are not satisfactory. The actions you can program are control specific.	<ul style="list-style-type: none"> <li>"<b>Possible actions</b>" in "<a href="#">Possible schedules</a>" [▶ 32]</li> <li>"<a href="#">5.7.3 Schedule screen: Example</a>" [▶ 33]</li> </ul>

### To select which schedule you currently want to use
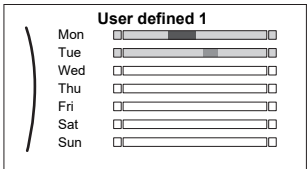
<b>1</b>	Go to the schedule for the specific control. See " <b>Schedule/Control</b> " in " <a href="#">Possible schedules</a> " [▶ 32]. <b>Example:</b> For the schedule for the desired room temperature in cooling mode, go to [1.3] <b>Room</b> > <b>Cooling schedule</b> .	
<b>2</b>	Select the name of the current schedule. 	

3	Select <b>Select</b> . 	
4	Select the schedule that you currently want to use.	

### Possible schedules

The table contains the following information:

- **Schedule/Control:** This column shows you where you can consult the currently selected schedule for the specific control. If needed, you can:
  - Select another schedule. See ["To select which schedule you currently want to use"](#) [► 31].
  - Program your own schedule. See ["5.7.3 Schedule screen: Example"](#) [► 33].
- **Predefined schedules:** Number of available predefined schedules in the system for the specific control. If needed, you can program your own schedule.
- **Activation screen:** For most controls, a schedule is only effective if it is activated in its corresponding activation screen. This entry shows you where to activate it.
- **Possible actions:** Actions you can use when programming a schedule. For most schedules, you can program up to 6 actions per day.

Schedule/Control	Description
<b>[1.2] Room &gt; Heating schedule</b> Schedule for the desired room temperature in heating mode.	<b>Predefined schedules:</b> 3 <b>Activation screen:</b> [1.1] Schedule <b>Possible actions:</b> Temperatures within range.
<b>[1.3] Room &gt; Cooling schedule</b> Schedule for the desired room temperature in cooling mode.	<b>Predefined schedules:</b> 1 <b>Activation screen:</b> [1.1] Schedule <b>Possible actions:</b> Temperatures within range.
<b>[2.2] Main zone &gt; Heating schedule</b> Schedule for the desired leaving water temperature for the main zone in heating mode.	<b>Predefined schedules:</b> 3 <b>Activation screen:</b> [2.1] Schedule <b>Possible actions:</b> <ul style="list-style-type: none"> <li>▪ In case of weather-dependent: Shift temperatures within range.</li> <li>▪ Otherwise: Temperatures within range</li> </ul>
<b>[2.3] Main zone &gt; Cooling schedule</b> Schedule for the desired leaving water temperature for the main zone in cooling mode.	<b>Predefined schedules:</b> 1 <b>Activation screen:</b> [2.1] Schedule <b>Possible actions:</b> <ul style="list-style-type: none"> <li>▪ In case of weather-dependent: Shift temperatures within range.</li> <li>▪ Otherwise: Temperatures within range</li> </ul>



Schedule/Control	Description
<p>[3.2] Additional zone &gt; Heating schedule</p> <p>Schedule for when the system is allowed to heat up the additional zone in heating mode.</p>	<p><b>Predefined schedules:</b> 1</p> <p><b>Activation screen:</b> [3.1] Schedule</p> <p><b>Possible actions:</b></p> <ul style="list-style-type: none"> <li>▪ <b>Off:</b> When the system is NOT allowed to heat up the additional zone.</li> <li>▪ <b>On:</b> When the system is allowed to heat up the additional zone.</li> </ul>
<p>[3.3] Additional zone &gt; Cooling schedule</p> <p>Schedule for when the system is allowed to cool down the additional zone in cooling mode.</p>	<p><b>Predefined schedules:</b> 1</p> <p><b>Activation screen:</b> [3.1] Schedule</p> <p><b>Possible actions:</b></p> <ul style="list-style-type: none"> <li>▪ <b>Off:</b> When the system is NOT allowed to cool down the additional zone.</li> <li>▪ <b>On:</b> When the system is allowed to cool down the additional zone.</li> </ul>
<p>[4.2] Space heating/cooling &gt; Operation mode schedule</p> <p>Schedule (per month) for when to operate the unit in heating mode and when in cooling mode.</p>	<p>See <a href="#">"To set the space operation mode"</a> [▶ 27].</p>
<p>[7.4.2] User settings &gt; Quiet &gt; Schedule</p> <p>Schedule for when the unit has to use which quiet mode level.</p>	<p><b>Predefined schedules:</b> 1</p> <p><b>Activation screen:</b> [7.4.1] Activation (only available to installers).</p> <p><b>Possible actions:</b> You can use the following system-defined preset values:</p> <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Quiet</li> <li>▪ More quiet</li> <li>▪ Most quiet</li> </ul> <p>See <a href="#">"About quiet mode"</a> [▶ 44].</p>
<p>[7.5.4] User settings &gt; Electricity price &gt; Schedule</p> <p>Schedule for when a certain electricity tariff is valid.</p>	<p><b>Predefined schedules:</b> 1</p> <p><b>Activation screen:</b> Not applicable</p> <p><b>Possible actions:</b> You can use the following system-defined preset values:</p> <ul style="list-style-type: none"> <li>▪ High</li> <li>▪ Medium</li> <li>▪ Low</li> </ul> <p>See <a href="#">"5.7.4 Setting the energy prices"</a> [▶ 38].</p>

### 5.7.3 Schedule screen: Example


This example shows how to set a room temperature schedule in cooling mode for the main zone.

**INFORMATION**

The procedures to program other schedules are similar.

**To program the schedule: overview**

**Example:** You want to program the following schedule:

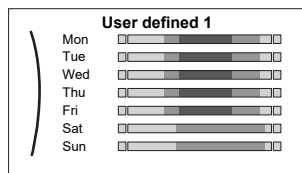

**Prerequisite:** The room temperature schedule is only available if room thermostat control is active. If leaving water temperature control is active, you can program the main zone schedule instead.

- 1 Go to the schedule.
- 2 (optional) Clear the content of the whole week schedule or the content of a selected day schedule.
- 3 Program the schedule for **Monday**.
- 4 Copy the schedule to the other weekdays.
- 5 Program the schedule for **Saturday** and copy it to **Sunday**.
- 6 Give the schedule a name.






**To go to the schedule**

1	Go to [1.1]: <b>Room &gt; Schedule</b> .	
2	Set scheduling to <b>Yes</b> .	
3	Go to [1.3]: <b>Room &gt; Cooling schedule</b>	

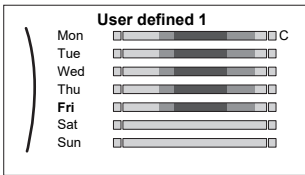



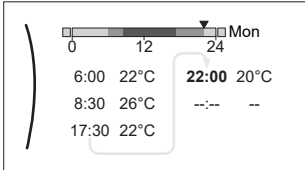



**To clear the content of the week schedule**

1	Select the name of the current schedule. 	
2	Select <b>Delete</b> . 	
3	Select <b>OK</b> to confirm.	



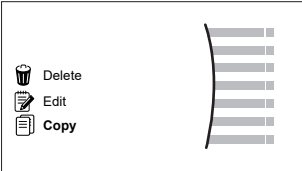

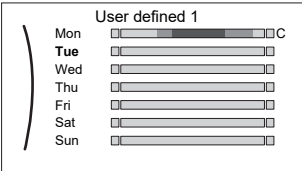

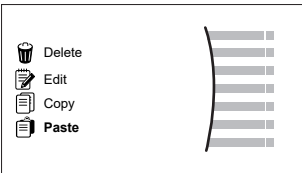
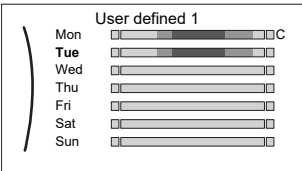

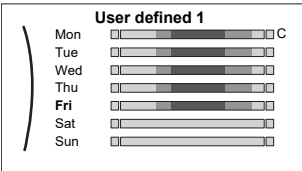
### To clear the content of a day schedule

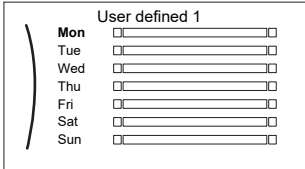1	<p>Select the day of which you want to clear the content. For example <b>Friday</b></p> 	
2	<p>Select <b>Delete</b>.</p> 	
3	<p>Select <b>OK</b> to confirm.</p>	



### To program the schedule for Monday



 


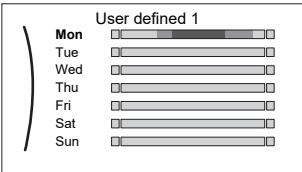



1	<p>Select <b>Monday</b>.</p> 	
2	<p>Select <b>Edit</b>.</p> 	
3	<p>Use the left dial to select an entry and edit the entry with the right dial. You can program up to 6 actions each day. On the bar, a high temperature has a darker colour than a low temperature.</p>  <p><b>Note:</b> To clear an action, set its time as the time of the previous action.</p>	 
4	<p>Confirm the changes.</p> <p><b>Result:</b> The schedule for Monday is defined. The value of the last action is valid until the next programmed action. In this example, Monday is the first day you programmed. Thus, the last programmed action is valid up to the first action of next Monday.</p>	

## To copy the schedule to the other weekdays



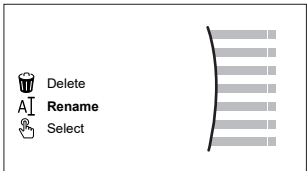


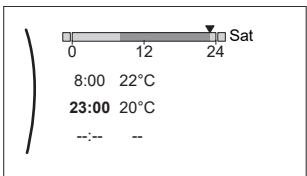

1	<p>Select Monday.</p> 	
2	<p>Select Copy.</p>  <p><b>Result:</b> Next to the copied day, "C" is displayed.</p>	
3	<p>Select Tuesday.</p> 	
4	<p>Select Paste.</p>  <p><b>Result:</b></p> 	
5	<p>Repeat this action for all other weekdays.</p> 	—
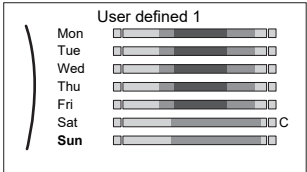
## To program the schedule for Saturday and copy it to Sunday

1	Select Saturday.	
2	Select Edit.	

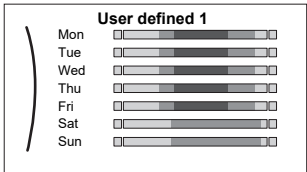3	Use the left dial to select an entry and edit the entry with the right dial. 	 
4	Confirm the changes.	
5	Select <b>Saturday</b> .	
6	Select <b>Copy</b> .	
7	Select <b>Sunday</b> .	
8	Select <b>Paste</b> . <b>Result:</b> 	

### To rename the schedule

1	Select the name of the current schedule. 	
2	Select <b>Rename</b> . 	
3	(optional) To delete the current schedule name, browse through the character list until ← is displayed, then press to remove the previous character. Repeat for each character of the schedule name.	
4	To name the current schedule, browse through the character list and confirm the selected character. The schedule name can contain up to 15 characters.	
5	Confirm the new name.	



#### INFORMATION

Not all schedules can be renamed.

### Usage example: You work in a 3-shift system

If you work in a 3-shift system, you can do the following:

- 1 Program 3 room temperature schedules and give them appropriate names.  
**Example:** EarlyShift, DayShift and LateShift
- 2 Select the schedule that you currently want to use.

#### 5.7.4 Setting the energy prices

In the system, you can set the following energy prices:

- a fixed gas price
- 3 electricity price levels
- a weekly schedule timer for electricity prices.

**Example: How to set the energy prices on the user interface?**

Price	Value in breadcrumb
Gas: 5.3 euro cents/kWh	[7.6]=5.3
Electricity: 12 euro cents/kWh	[7.5.1]=12

##### To set the gas price

1	Go to [7.6]: <b>User settings &gt; Gas price.</b>	
2	Select the correct gas price.	
3	Confirm the changes.	



##### INFORMATION

Price value ranging from 0.00~990 valuta/kWh (with 2 significant values).

##### To set the electricity price

1	Go to [7.5.1]/[7.5.2]/[7.5.3]: <b>User settings &gt; Electricity price &gt; High/Medium/Low.</b>	
2	Select the correct electricity price.	
3	Confirm the changes.	
4	Repeat this for all three electricity prices.	—



##### INFORMATION

Price value ranging from 0.00~990 valuta/kWh (with 2 significant values).



##### INFORMATION

If no schedule is set, the **Electricity price for High** is taken into account.

##### To set the electricity price schedule timer

1	Go to [7.5.4]: <b>User settings &gt; Electricity price &gt; Schedule.</b>	
2	Program the selection using the scheduling screen. You can set the <b>High</b> , <b>Medium</b> and <b>Low</b> electricity prices according to your electricity supplier.	—
3	Confirm the changes.	

**INFORMATION**

The values correspond with the electricity price values for **High**, **Medium** and **Low** previously set. If no schedule is set, the electricity price for **High** is taken into account.

**About energy prices in case of an incentive per kWh renewable energy**

An incentive can be taken into account when setting the energy prices. Although the running cost can increase, the total operation cost, taking into account the reimbursement will be optimized.

**NOTICE**

Make sure to modify the setting of the energy prices at the end of the incentive period.

**To set the gas price in case of an incentive per kWh renewable energy**

Calculate the value for the gas price with the following formula:

- Actual gas price+(Incentive/kWh×0.9)

For the procedure to set the gas price, see ["To set the gas price"](#) [▶ 38].

**To set the electricity price in case of an incentive per kWh renewable energy**

Calculate the value for the electricity price with following formula:

- Actual electricity price+Incentive/kWh

For the procedure to set the electricity price, see ["To set the electricity price"](#) [▶ 38].

**Example**

This is an example and the prices and/or values used in this example are NOT accurate.

Data	Price/kWh
Gas price	4.08
Electricity price	12.49
Renewable heat incentive per kWh	5

**Calculation of the gas price**

Gas price=Actual gas price+(Incentive/kWh×0.9)

Gas price=4.08+(5×0.9)

Gas price=8.58

**Calculation of the electricity price**

Electricity price=Actual electricity price+Incentive/kWh

Electricity price=12.49+5

Electricity price=17.49

Price	Value in breadcrumb
Gas: 4.08 /kWh	[7.6]=8.6
Electricity: 12.49 /kWh	[7.5.1]=17

## 5.8 Weather-dependent curve

### 5.8.1 What is a weather-dependent curve?

#### Weather-dependent operation

The unit operates 'weather-dependent' if the desired leaving water temperature is determined automatically by the outdoor temperature. It therefore is connected to a temperature sensor on the North wall of the building. If the outdoor temperature drops or rises, the unit compensates instantly. Thus, the unit does not have to wait for feedback by the thermostat to increase or decrease the leaving water temperature. Because it reacts more quickly, it prevents high rises and drops of the indoor temperature.

#### Advantage

Weather-dependent operation reduces energy consumption.

#### Weather-dependent curve

To be able to compensate for differences in temperature, the unit relies on its weather-dependent curve. This curve defines how much the leaving water temperature must be at different outdoor temperatures. Because the slope of the curve depends on local circumstances such as climate and the insulation of the house, the curve can be adjusted by an installer or user.

#### Types of weather-dependent curve

There are 2 types of weather-dependent curves:

- 2-points curve
- Slope-offset curve

Which type of curve you use to make adjustments, depends on your personal preference. See ["5.8.4 Using weather-dependent curves"](#) [▶ 43].

#### Availability

The weather-dependent curve is available for:

- Main zone - Heating
- Main zone - Cooling
- Additional zone - Heating
- Additional zone - Cooling



#### INFORMATION


To operate weather-dependent, correctly configure the setpoint of the main zone and additional zone. See ["5.8.4 Using weather-dependent curves"](#) [▶ 43].

### 5.8.2 2-points curve

Define the weather-dependent curve with these two setpoints:

- Setpoint (X1, Y2)
- Setpoint (X2, Y1)

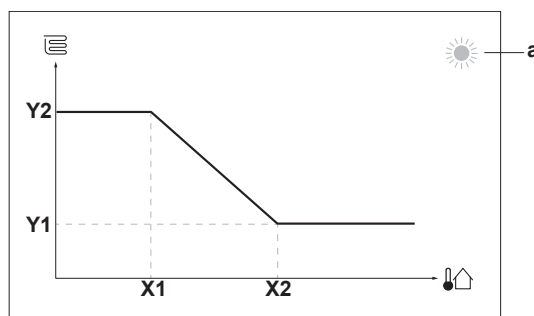

**Example**

Item	Description
<b>a</b>	Selected weather-dependent zone: <ul style="list-style-type: none"> <li>☀: Main zone or additional zone heating</li> <li>☁: Main zone or additional zone cooling</li> </ul>
<b>X1, X2</b>	Examples of outdoor ambient temperature
<b>Y1, Y2</b>	Examples of desired leaving water temperature. The icon corresponds to the heat emitter for that zone: <ul style="list-style-type: none"> <li>☰: Underfloor heating</li> <li>☷: Fan coil unit</li> <li>☶: Radiator</li> </ul>

Possible actions on this screen	
⏮⋯⦿	Go through the temperatures.
⦿⋯⏭	Change the temperature.
⦿⋯⏪	Go to the next temperature.
⏪⦿⋯	Confirm changes and proceed.

## 5.8.3 Slope-offset curve


**Slope and offset**

Define the weather-dependent curve by its slope and offset:


- Change the **slope** to differently increase or decrease the temperature of the leaving water for different ambient temperatures. For example, if leaving water temperature is in general fine but at low ambient temperatures too cold, raise the slope so that leaving water temperature is heated increasingly more at decreasingly lower ambient temperatures.
- Change the **offset** to equally increase or decrease the temperature of the leaving water for different ambient temperatures. For example, if leaving water temperature is always a bit too cold at different ambient temperatures, shift the offset up to equally increase the leaving water temperature for all ambient temperatures.

**Examples**

Weather-dependent curve when slope is selected:

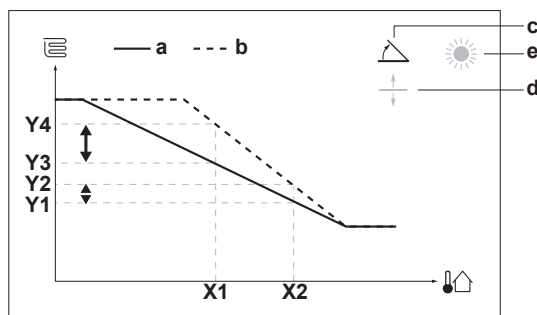

Weather-dependent curve when offset is selected:

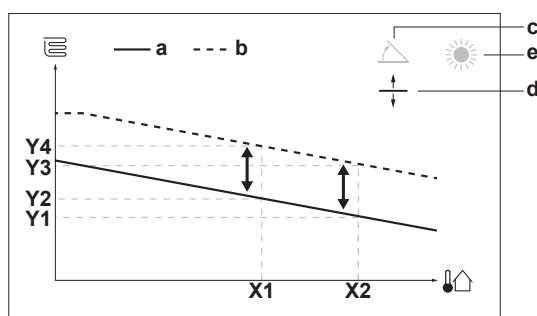

Item	Description
<b>a</b>	WD curve before changes.
<b>b</b>	WD curve after changes (as example): <ul style="list-style-type: none"> <li>When slope is changed, the new preferred temperature at X1 is unequally higher than the preferred temperature at X2.</li> <li>When offset is changed, the new preferred temperature at X1 is equally higher as the preferred temperature at X2.</li> </ul>
<b>c</b>	Slope
<b>d</b>	Offset
<b>e</b>	Selected weather-dependent zone: <ul style="list-style-type: none"> <li>☀: Main zone or additional zone heating</li> <li>❄: Main zone or additional zone cooling</li> </ul>
<b>X1, X2</b>	Examples of outdoor ambient temperature
<b>Y1, Y2, Y3, Y4</b>	Examples of desired leaving water temperature. The icon corresponds to the heat emitter for that zone: <ul style="list-style-type: none"> <li>🏠: Underfloor heating</li> <li>🏠: Fan coil unit</li> <li>🏠: Radiator</li> </ul>

Possible actions on this screen	
🏠...○	Select slope or offset.
○...🏠	Increase or decrease the slope/offset.
○...🏠	When slope is selected: set slope and go to offset. When offset is selected: set offset.
🏠...○	Confirm changes and return to the submenu.

### 5.8.4 Using weather-dependent curves

Configure weather-dependent curves as following:

#### To define the setpoint mode

To use the weather-dependent curve, you need to define the correct setpoint mode:

Go to setpoint mode ...	Set the setpoint mode to ...
<b>Main zone – Heating</b>	
[2.4] Main zone > Setpoint mode	WD heating, fixed cooling OR Weather dependent
<b>Main zone – Cooling</b>	
[2.4] Main zone > Setpoint mode	Weather dependent
<b>Additional zone – Heating</b>	
[3.4] Additional zone > Setpoint mode	WD heating, fixed cooling OR Weather dependent
<b>Additional zone – Cooling</b>	
[3.4] Additional zone > Setpoint mode	Weather dependent

#### To change the type of weather-dependent curve

To change the type for all zones (main + additional), go to [2.E] Main zone > WD curve type.

Viewing which type is selected is also possible via [3.C] Additional zone > WD curve type

#### To change the weather-dependent curve

Zone	Go to ...
<b>Main zone – Heating</b>	[2.5] Main zone > Heating WD curve
<b>Main zone – Cooling</b>	[2.6] Main zone > Cooling WD curve
<b>Additional zone – Heating</b>	[3.5] Additional zone > Heating WD curve
<b>Additional zone – Cooling</b>	[3.6] Additional zone > Cooling WD curve



#### INFORMATION

##### Maximum and minimum setpoints

You cannot configure the curve with temperatures that are higher or lower than the set maximum and minimum setpoints for that zone. When the maximum or minimum setpoint is reached, the curve flattens out.

#### To fine-tune the weather-dependent curve: slope-offset curve

The following table describes how to fine-tune the weather-dependent curve of a zone:

You feel ...		Fine-tune with slope and offset:	
At regular outdoor temperatures ...	At cold outdoor temperatures ...	Slope	Offset
OK	Cold	↑	—
OK	Hot	↓	—
Cold	OK	↓	↑
Cold	Cold	—	↑
Cold	Hot	↓	↑
Hot	OK	↑	↓
Hot	Cold	↑	↓
Hot	Hot	—	↓

### To fine-tune the weather-dependent curve: 2-points curve


The following table describes how to fine-tune the weather-dependent curve of a zone:

You feel ...		Fine-tune with setpoints:			
At regular outdoor temperatures ...	At cold outdoor temperatures ...	Y2 <sup>(a)</sup>	Y1 <sup>(a)</sup>	X1 <sup>(a)</sup>	X2 <sup>(a)</sup>
OK	Cold	↑	—	↑	—
OK	Hot	↓	—	↓	—
Cold	OK	—	↑	—	↑
Cold	Cold	↑	↑	↑	↑
Cold	Hot	↓	↑	↓	↑
Hot	OK	—	↓	—	↓
Hot	Cold	↑	↓	↑	↓
Hot	Hot	↓	↓	↓	↓

<sup>(a)</sup> See "5.8.2 2-points curve" [▶ 40].

## 5.9 Other functionalities

### 5.9.1 To configure time and date

<b>1</b>	Go to [7.2] User settings > Time/date.	
----------	--	---

### 5.9.2 Using quiet mode

#### About quiet mode

You can use quiet mode to decrease the sound of the outdoor unit. However, this also decreases the heating/cooling capacity of the system. There are multiple quiet mode levels.

The installer can:

- Completely deactivate quiet mode

- Manually activate a quiet mode level
- Enable the user to program a quiet mode schedule

If enabled by the installer, the user can program a quiet mode schedule.



#### INFORMATION


If the outdoor temperature is below zero, we recommend to NOT use the most quiet level.

#### To check if quiet mode is active

If  is displayed on the home screen, quiet mode is active.

#### To program a quiet mode schedule

**Restriction:** Only possible if enabled by the installer.

1	Go to [7.4.2]: User settings > Quiet > Schedule.	
2	Program the schedule. <b>Possible actions:</b> You can use the following system-defined preset values: <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Quiet</li> <li>▪ More quiet</li> <li>▪ Most quiet</li> </ul> For more information about scheduling, see "5.7.2 Using and programming schedules" [▶ 31].	—

### 5.9.3 Using holiday mode

#### About holiday mode

During your holiday, you can use the holiday mode to deviate from your normal schedules without having to change them. While holiday mode is active, space heating/cooling operation will be turned off. Room frost protection and water pipe freeze prevention will remain active.

#### Typical workflow










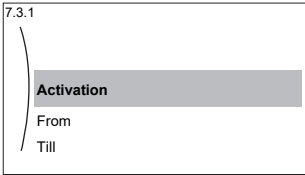

Using holiday mode typically consists of the following stages:

- 1 Activating the holiday mode.
- 2 Setting the starting date and ending date of your holiday.

#### To check if holiday mode is activated and/or running

If  is displayed on the home screen, holiday mode is active.

## To configure the holiday

1	Activate the holiday mode.	—
	<ul style="list-style-type: none"> <li>Go to [7.3.1]: <b>User settings &gt; Holiday &gt; Activation.</b></li> </ul> 	
	<ul style="list-style-type: none"> <li>Select <b>On.</b></li> </ul>	
2	Set the first day of your holiday.	—
	<ul style="list-style-type: none"> <li>Go to [7.3.2]: <b>From.</b></li> </ul>	
	<ul style="list-style-type: none"> <li>Select a date.</li> </ul>	 
	<ul style="list-style-type: none"> <li>Confirm the changes.</li> </ul>	
3	Set the last day of your holiday.	—
	<ul style="list-style-type: none"> <li>Go to [7.3.3]: <b>Till.</b></li> </ul>	
	<ul style="list-style-type: none"> <li>Select a date.</li> </ul>	 
	<ul style="list-style-type: none"> <li>Confirm the changes.</li> </ul>	

## 5.9.4 Using WLAN




## INFORMATION

**Restriction:** WLAN settings are only visible when a WLAN cartridge is inserted in the user interface.


## About the WLAN cartridge

The WLAN cartridge connects the system to the internet. As user you can then control the system via the ONECTA app.

This needs the following components:

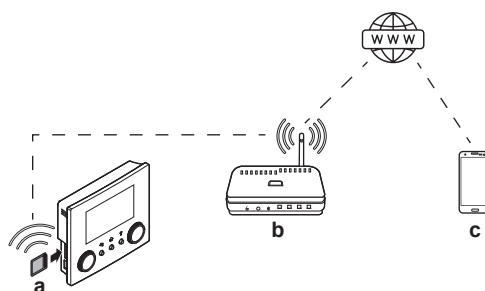


<b>a</b>	WLAN cartridge	The WLAN cartridge needs to be inserted in the user interface.
<b>b</b>	Router	Field supply.

c	Smartphone + app 	The ONECTA app needs to be installed on the user's smartphone. See: <a href="http://www.onlinecontroller.daikineurope.com/">http://www.onlinecontroller.daikineurope.com/</a> 
---	---	---

## Configuration

To configure the ONECTA app, follow the in-app instructions. While doing this, the following actions and information are needed on the user interface:

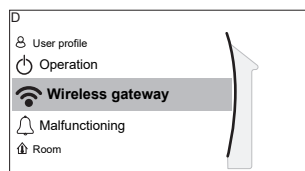

### [D] Wireless gateway

[D.1] Mode

[D.2] Reboot



[D.3] WPS

[D.4] Remove from cloud



[D.5] Home network connection

[D.6] Cloud connection

[D.1] **Mode:** Turn AP mode ON (= WLAN cartridge active as access point):

1	Go to [D.1]: <b>Wireless gateway</b> > <b>Mode</b> .	
2	In the <b>Enable AP mode</b> screen, select <b>Yes</b> .	

[D.2] **Reboot:** Reboot the WLAN cartridge:



1	Go to [D.2]: <b>Wireless gateway</b> > <b>Reboot</b> .	
2	In the <b>Reboot the gateway</b> screen, select <b>OK</b> .	

[D.3] **WPS:** Connect the WLAN cartridge to the router:





### INFORMATION


You can only use this function if it is supported by the software version of the WLAN, and the software version of the ONECTA app.

1	Go to [D.3]: <b>Wireless gateway</b> > <b>WPS</b> .	
2	In the <b>WPS</b> screen, select <b>Yes</b> .	

 
 
[D.4] **Remove from cloud:** Remove the WLAN cartridge from the cloud:

1	Go to [D.4]: <b>Wireless gateway</b> > <b>Remove from cloud</b> .	
2	In the <b>Remove from cloud</b> screen, select <b>Yes</b> .	

[D.5] **Home network connection:** Read out the status of the connection to the home network:

1	Go to [D.5]: <b>Wireless gateway</b> > <b>Home network connection</b> .	
2	Read out the connection status: <ul style="list-style-type: none"> <li>▪ <b>Disconnected from</b> [WLAN_SSID]</li> <li>▪ <b>Connected to</b> [WLAN_SSID]</li> </ul>	

[D.6] **Cloud connection:** Read out the status of the connection to the cloud:

<b>1</b>	Go to [D.6]: <b>Wireless gateway</b> > <b>Cloud connection</b> .	
<b>2</b>	Read out the connection status: <ul style="list-style-type: none"><li>▪ <b>Not connected</b></li><li>▪ <b>Connected</b></li></ul>	



## 6 Energy saving tips

### Tips about room temperature

- Make sure the desired room temperature is NEVER too high (in heating mode) or too low (in cooling mode), but ALWAYS according to your actual needs. Each saved degree can save up to 6% of heating/cooling costs.
- Do NOT increase/decrease the desired room temperature to speed up space heating/cooling. The space will NOT heat up/cool down faster.
- When your system layout contains slow heat emitters (example: underfloor heating), avoid large fluctuation of the desired room temperature and do NOT let the room temperature drop too low/rise too high. It will take more time and energy to heat up/cool down the room again.
- Use a weekly schedule for your normal space heating or cooling needs. If necessary, you can easily deviate from the schedule:
  - For shorter periods: You can overrule the scheduled room temperature until the next scheduled action. **Example:** When you have a party, or when you are leaving for a couple of hours.
  - For longer periods: You can use the holiday mode.

### Tips about leaving water temperature

- In heating mode, a lower desired leaving water temperature results in lower energy consumption and better performance. In cooling, the opposite is valid.
- Set the desired leaving water temperature in accordance with the heat emitter type. **Example:** Underfloor heating is designed for lower leaving water temperature than radiators and fan coil units.

# 7 Maintenance and service

## 7.1 Overview: Maintenance and service

The installer has to perform a yearly maintenance. You can find the contact/helpdesk number via the user interface.

<b>1</b>	Go to [8.3]: <b>Information &gt; Dealer information.</b>	
----------	--	---

As end user, you have to:

- Keep the area around the unit clean.
- Keep the user interface clean with a soft damp cloth. Do NOT use any detergents.
- Regularly check if the water pressure is above 1 bar.

### Refrigerant

This product contains fluorinated greenhouse gases. Do NOT vent gases into the atmosphere.

Refrigerant type: R32

Global warming potential (GWP) value: 675

Periodical inspections for refrigerant leaks may be required depending on the applicable legislation. Contact your installer for more information.



#### WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.



#### WARNING

- The refrigerant inside the unit is mildly flammable, but normally does NOT leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.
- Turn OFF any combustible heating devices, ventilate the room, and contact the dealer where you purchased the unit.
- Do NOT use the unit until a service person confirms that the part from which the refrigerant leaked has been repaired.



#### WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).



#### WARNING

- Do NOT pierce or burn refrigerant cycle parts.
- Do NOT use cleaning materials or means to accelerate the defrosting process other than those recommended by the manufacturer.
- Be aware that the refrigerant inside the system is odourless.

**NOTICE**

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO<sub>2</sub> equivalent.


**Formula to calculate the quantity in CO<sub>2</sub> equivalent tonnes:** GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

Contact your installer for more information.

## 8 Troubleshooting


 
### Contact

For the symptoms listed below, you can try to solve the problem yourself. For any other problem, contact your installer. You can find the contact/helpdesk number via the user interface.


<b>1</b>	Go to [8.3]: <b>Information &gt; Dealer information.</b>	
----------	--	---

### 8.1 To display the help text in case of a malfunction

In case of a malfunction, the following will appear on the home screen depending on the severity:

- : Error
- : Malfunction

You can get a short and a long description of the malfunction as follows:

<b>1</b>	Press the left dial to open the main menu and go to <b>Malfunctioning.</b>  <b>Result:</b> A short description of the error and the error code is displayed on the screen.	
<b>2</b>	Press <b>?</b> in the error screen.  <b>Result:</b> A long description of the error is displayed on the screen.	<b>?</b>

### 8.2 To check the malfunction history

**Conditions:** The user permission level is set to advanced end user.

<b>1</b>	Go to [8.2]: <b>Information &gt; Malfunction history.</b>	
----------	---	---

You see a list of the most recent malfunctions.

### 8.3 Symptom: You are feeling too cold (hot) in your living room

Possible cause	Corrective action
The desired room temperature is too low (high).	<p>Increase (decrease) the desired room temperature. See <a href="#">"5.6.4 To change the desired room temperature"</a> [▶ 28].</p> <p>If the problem recurs daily, do one of the following:</p> <ul style="list-style-type: none"> <li>▪ Increase (decrease) the room temperature preset value. See <a href="#">"5.7.1 Using preset values"</a> [▶ 30].</li> <li>▪ Adjust the room temperature schedule. See <a href="#">"5.7.2 Using and programming schedules"</a> [▶ 31] and <a href="#">"5.7.3 Schedule screen: Example"</a> [▶ 33].</li> </ul>
The desired room temperature cannot be reached.	Increase the desired leaving water temperature in accordance with the heat emitter type. See <a href="#">"5.6.5 To change the desired leaving water temperature"</a> [▶ 29].
The weather-dependent curve is set incorrectly.	Adjust the weather-dependent curve. See <a href="#">"5.8 Weather-dependent curve"</a> [▶ 40].

### 8.4 Symptom: Unit failure

When the heat pump fails to operate, the optional external backup heater kit can serve as an emergency heater. It then takes over the heat load either automatically or by manual interaction.

- When **Emergency** is set to **Automatic** (or **auto SH normal/DHW off**)<sup>(1)</sup> and a heat pump failure occurs, the backup heater automatically takes over the heat load.
- When **Emergency** is set to **Manual** and a heat pump failure occurs, the space heating stops.

To manually recover it via the user interface, go to the **Malfunctioning** main menu screen and confirm whether the backup heater can take over the heat load or not.

- When **Emergency** is set to **auto SH reduced/DHW off** (or **auto SH reduced/DHW on**)<sup>(2)</sup> and a heat pump failure occurs, space heating is reduced.

Similarly as in **Manual** mode, the unit can take the full load with the backup heater if the user activates this via the **Malfunctioning** main menu screen.

When the unit fails,  or  will appear on the user interface.

<sup>(1)</sup> **auto SH normal/DHW off** has the same effect as **Automatic**, but should NOT be used because there is no domestic hot water.



<sup>(2)</sup> **auto SH reduced/DHW on** has the same effect as **auto SH reduced/DHW off**, but should NOT be used because there is no domestic hot water.

Possible cause	Corrective action
Unit is damaged.	See <a href="#">"8.1 To display the help text in case of a malfunction"</a> [▶ 52].

**INFORMATION**


 
When the backup heater takes over the heat load, electricity consumption will be considerably higher.

## 8.5 Symptom: The system is making gurgling noises after commissioning

Possible cause	Corrective action
There is air in the system.	Purge air from the system. <sup>(a)</sup>
Incorrect hydraulic balance.	To be performed by the installer: <ol style="list-style-type: none"> <li>1 Perform hydraulic balancing to assure that the flow is correctly distributed between the emitters.</li> <li>2 If hydraulic balancing is not sufficient, change the pump limitation settings ([9-0D] and [9-0E] if applicable).</li> </ol>
Various malfunctions.	Check if  or  is displayed on the home screen of the user interface. See <a href="#">"8.1 To display the help text in case of a malfunction"</a> [▶ 52] for more information about the malfunction.

<sup>(a)</sup> We recommend to purge air with the air purge function of the unit (to be performed by the installer). If you purge air from the heat emitters or collectors, mind the following:

**WARNING**


**Air purging heat emitters or collectors.** Before you purge air from heat emitters or collectors, check if  or  is displayed on the home screen of the user interface.

- If not, you can purge air immediately.
- If yes, make sure that the room where you want to purge air is sufficiently ventilated. **Reason:** Refrigerant might leak into the water circuit, and subsequently into the room when you purge air from the heat emitters or collectors.

# 9 Relocation

## 9.1 Overview: Relocation

If you want to relocate parts of your system, contact your installer. You can find the contact/helpdesk number via the user interface.

<b>1</b>	Go to [8.3]: <b>Information &gt; Dealer information.</b>	
----------	--	---

## 10 Disposal



### NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts **MUST** comply with applicable legislation. Units **MUST** be treated at a specialised treatment facility for reuse, recycling and recovery.



# 11 Glossary

**DHW = Domestic hot water**

Hot water used, in any type of building, for domestic purposes.

**LWT = Leaving water temperature**

Water temperature at the water outlet of the unit.

**Dealer**

Sales distributor for the product.

**Authorised installer**

Technical skilled person who is qualified to install the product.

**User**

Person who is owner of the product and/or operates the product.

**Applicable legislation**

All international, European, national and local directives, laws, regulations and/or codes that are relevant and applicable for a certain product or domain.

**Service company**

Qualified company which can perform or coordinate the required service to the product.

**Installation manual**

Instruction manual specified for a certain product or application, explaining how to install, configure and maintain it.

**Operation manual**

Instruction manual specified for a certain product or application, explaining how to operate it.

**Accessories**

Labels, manuals, information sheets and equipment that are delivered with the product and that need to be installed according to the instructions in the accompanying documentation.

**Optional equipment**

Equipment made or approved by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

**Field supply**

Equipment NOT made by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

# 12 Installer settings: Tables to be filled in by installer

## 12.1 Configuration wizard

Setting		Fill in...
<b>System</b>		
	Backup heater type [9.3.1]	
	Emergency [9.5]	
	Number of zones [4.4]	
	Glycol Filled system (overview field setting [E-0D])	
<b>Backup heater</b>		
	Voltage [9.3.2]	
	Configuration [9.3.3]	
	Capacity step 1 [9.3.4]	
	Additional capacity step 2 [9.3.5] (if applicable)	
<b>Main zone</b>		
	Emitter type [2.7]	
	Control [2.9]	
	Setpoint mode [2.4]	
	Schedule [2.1]	
	WD curve type [2.E]	
<b>Additional zone (only if [4.4]=1, dual zone)</b>		
	Emitter type [3.7]	
	Control (read only) [3.9]	
	Setpoint mode [3.4]	
	Schedule [3.1]	
	WD curve type [3.C] (read only)	

## 12.2 Settings menu

Setting		Fill in...
<b>Main zone</b>		
	Ext thermostat type [2.A]	
<b>Additional zone (if applicable)</b>		
	Ext thermostat type [3.A]	

Setting		Fill in...
Information		
	Dealer information [8.3]	

ERC

Copyright 2022 Daikin

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P688016-1 2022.04