

Multi model
application
Air Conditioning
Technical Data
5MXM-A9



5MXM90A2V1B9

TABLE OF CONTENTS

5MXM-A9

1	Features	4
	5MXM-A9	4
2	Specifications	5
3	Electrical data	7
4	Combination table	8
5	Capacity tables	19
	Capacity Table Legend	19
6	Dimensional drawings	20
7	Centre of gravity	21
8	Piping diagrams	22
9	Wiring diagrams	23
	Wiring Diagrams - Single Phase	23
10	Sound data	24
	Sound Pressure Spectrum	24
11	Operation range	25

1 Features

1 - 1 5MXM-A9

1

- › New design outlook for outdoor unit
- › Seasonal efficiency values up to A+++ in cooling and A++ in heating thanks to its up-to-date technology and built-in intelligence
- › Up to 5 indoor units can be connected to 1 multi outdoor unit; all indoor units are individually controllable and do not need to be installed in the same room or at the same time. They operate simultaneously within the same heating or cooling mode.
- › Choosing for an R-32 product, reduces the environmental impact with 68% compared to R-410A and leads directly to lower energy consumption thanks to its high energy efficiency
- › Different types of indoor units can be connected: e.g. wall mounted, ceiling mounted cassette corner, concealed ceiling unit
- › Outdoor units are fitted with a swing compressor, renowned for its low noise and high energy efficiency



Inverter

2 Specifications

2 - 1 Specifications

Technical specifications					5MXM90A9
Casing	Colour				Ivory white
Dimensions	Unit	Height	mm		734
		Width	mm		974
		Depth	mm		408
	Packed unit	Height	mm		820
		Width	mm		1,050
		Depth	mm		480
Weight	Unit		kg		68
	Packed unit		kg		73
Heat exchanger	Length		mm		920
	Rows	Quantity			2
	Fin pitch		mm		1.40
	Stages	Quantity			32
	Passes	Quantity			6.00
	Tube type				Hi-XA
	Tube diameter		mm		7.0
	Fin	Type			WHS8 FIN-HYDROPHILIC
		Treatment			Anti-corrosion treatment
Heat exchanger 2	Quantity				1
	Length		mm		650
	Rows	Quantity			1
	Fin pitch		mm		2
	Stages	Quantity			12
Fan	Type				Propeller fan
	Discharge direction				Horizontal
	Quantity				1
	Air flow rate	Cooling	High	m ³ /min	49.1
				cfm	1,734
			Medium	m ³ /min	49.1
		Heating		cfm	1,734
			Low	m ³ /min	24.1
				cfm	851
		Heating	High	m ³ /min	50.4
				cfm	1,780
			Medium	m ³ /min	50.4
Fan	Air flow rate	Heating	Low	m ³ /min	24.1
					851
Fan motor	Quantity				1
	Model				D90B-37
	Output			W	128
	Speed	Cooling	High	rpm	800
			Medium	rpm	800
			Low	rpm	420
		Heating	High	rpm	820
			Low	rpm	420
			Medium	rpm	820
Compressor	Quantity				1
	Model				2YC71DXD#C
	Oil Amount		cm ³		900
	Type				Hermetically sealed swing compressor
	Output		W		2,400
	Oil Type				FW68DA
Operation range	Cooling	Ambient	Min.	°CDB	-10
			Max.	°CDB	46
	Heating	Ambient	Min.	°CDB	-15
			Max.	°CDB	24
Sound power level	Heating	Nom.		dBA	64
Sound pressure level	Cooling	Nom.		dBA	52
	Heating	Nom.		dBA	52
Refrigerant	Type				R-32
	Charge		kg		2.40
	Control				Expansion valve
	GWP				675

2 Specifications

2 - 1 Specifications

2

Technical specifications				5MXM90A9
Piping connections	Liquid	Quantity		5
		OD	mm	6.35
	Gas	Quantity		2
		OD	mm	9.5
	Drain	Quantity		1
		OD	mm	16 (inner diameter of connecting hose)
	Gas 2	Quantity		1
		OD	mm	12.7
Piping connections	Gas 3	Quantity		2
	Gas 3	OD	mm	15.9
		Piping length	OU - IU	3 (1)
			Min.	3 (1)
			Max.	25 (1)
	System	Chargeless	m	30
		Additional refrigerant charge	kg/m	0.02 (for piping length exceeding 30m)
	Level difference	IU - OU	Max.	15
		IU - IU	m	7.5
	Heat insulation			Both liquid and gas pipes
Capacity control	Method	Total piping length	System Actual	75
				Variable (inverter)

Standard accessories: Installation manual;Quantity: 1;

Standard accessories: Screw bag;Quantity: 1;

Standard accessories: Drain plug;Quantity: 1;

Standard accessories: Reducer assembly;Quantity: 1;

Standard accessories: Drain cap (1);Quantity: 6;

Standard accessories: Drain cap (2);Quantity: 3;

Electrical specifications				5MXM90A9
Power supply	Phase			1~
	Frequency		Hz	50
	Voltage		V	220-240
Wiring connections	For power supply	Quantity		3
		Remark		Earth wire included
	For connection with indoor	Quantity		4
		Remark		Earth wire included
Current - 50Hz	Maximum fuse amps (MFA)		A	32

(1)For one room |

For combination with CVXM-A, FVXM-A - maximum piping length is 30m. |

See separate drawing for operation range |

See separate drawing for electrical data |

Contains fluorinated greenhouse gases

3 Electrical data

3 - 1 Electrical Data

2MXM68A9

3MXM-A9

4MXM-A9

5MXM-A9

Outdoor unit	Power supply			·RA· indoor units (·10·% safety factor)		Other indoor units (·10·% safety factor)		Compressor		Outdoor fan motor	
	Hz	Voltage	Voltage range	MCA	MFA	MCA	MFA	RHz	RLA	kW	FLA
2MXM68N2V1B	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	16,94	20	19,80	20	-	7,8	0,056	0,37
2MXM68A2V1B	50	230							7,5		
2MXM68A2V1B9	50	240							8,7		
3MXM40N2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	14,31	16	15,97	16	-	2,9	0,056	0,37
	50	230							3,0		
	50	240							3,1		
3MXM52N2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	14,59	20	16,27	20	-	4,5	0,056	0,37
	50	230							4,7		
	50	240							4,9		
3MXM68N2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	17,19	20	19,81	20	-	8,0	0,056	0,37
3MXM68A2V1B	50	230							8,4		
3MXM68A2V1B9	50	240							8,7		
4MXM68N2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	17,36	20	19,81	20	-	7,0	0,056	0,37
4MXM68A2V1B	50	230							7,3		
4MXM68A2V1B9	50	240							7,6		
4MXM80N2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	17,04	25	20,36	25	-	8,5	0,075	0,50
4MXM80A2V1B	50	230							8,9		
4MXM80A2V1B9	50	240							9,3		
5MXM90N2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	21,70	32	25,88	32	-	9,2	0,075	0,50
5MXM90A2V1B	50	230							9,6		
5MXM90A2V1B9	50	240							10,0		
3AMXM52N2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	18,19	20	16,27	20	-	4,5	0,056	0,37
	50	230							4,7		
	50	240							4,9		
3MXF52A2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	14,59	20	16,27	20	-	4,5	0,056	0,37
	50	230							4,7		
	50	240							4,9		
3AMXF52A2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	14,59	20	16,27	20	-	4,5	0,056	0,37
	50	230							4,7		
	50	240							4,9		
3MXF68A2V1B9	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	17,19	20	19,81	20	-	8,0	0,056	0,37
	50	230							8,4		
	50	240							8,7		
3MXM40N2V1B8	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	14,31	16	15,97	16	-	2,9	0,056	0,37
3MXM40A2V1B	50	230							3,0		
3MXM40A2V1B9	50	240							3,1		
3MXM52N2V1B8	50	220	Maximum ·50·Hz ·264·V Minimum ·50·Hz ·198·V	14,59	20	16,27	20	-	4,5	0,056	0,37
3MXM52A2V1B	50	230							4,7		
3MXM52A2V1B9	50	240							4,9		

Notes

- 1) The ·RLA· is based on the following conditions.
Outdoor temperature ·35·°C DB
Indoor temperature ·27·°C DB / ·19·°C WB
- 2) Select the wire size according to the MCA.
- 3) The maximum allowable voltage that is unbalanced between phases is ·2·%.
- 4) Use a circuit breaker instead of a fuse.
- 5) Only for wall-mounted ·FVXM· units

Symbols

- MCA: Minimum Circuit Ampere [A]
MFA: Maximum Fuse Ampere [A]
RLA: Rated load amps [A]
OFM: Outdoor fan motor
MSC: Maximum starting current
FLA: Full Load Ampere [A]
kW: Fan motor rated output [kW]

3D129421D

4 Combination table

4 - 1 Combination Table

5MXM-A9

Cooling · 230V 50Hz

Outdoor unit	Indoor unit	Cooling capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room -A-	Room -B-	Room -C-	Room -D-	Room -E-	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V1B 5MXM90N2V1B 5MXM90N2V1B9 5MXM90A2V1B 5MXM90A2V1B9	1.5	1.80	-	-	-	-	1.78	1.80	2.99	0.43	0.33	0.57	1.95	1.60	2.70	95
	2.0	2.00	-	-	-	-	1.86	2.00	3.11	0.44	0.37	0.61	2.00	1.70	2.80	95
	2.5	2.50	-	-	-	-	1.98	2.50	3.69	0.48	0.46	0.80	2.18	2.20	3.70	95
	3.5	3.50	-	-	-	-	2.03	3.50	4.94	0.50	0.74	1.29	2.31	3.40	6.00	95
	4.2	4.20	-	-	-	-	2.06	4.20	5.33	0.51	0.98	1.42	2.35	4.50	6.52	95
	5.0	5.00	-	-	-	-	2.20	5.00	6.03	0.48	1.24	1.71	2.18	5.70	7.84	95
	6.0	6.00	-	-	-	-	2.31	6.00	6.80	0.49	1.69	2.18	2.22	7.80	10.00	95
	7.1	7.10	-	-	-	-	2.43	7.10	7.58	0.51	2.42	2.83	2.35	11.10	13.00	95
	1.5+1.5	1.50	1.50	-	-	-	2.01	3.00	4.79	0.42	0.54	0.99	1.94	2.50	4.51	95
	1.5+2.0	1.50	2.00	-	-	-	2.03	3.50	4.96	0.46	0.67	1.07	2.11	3.10	4.88	95
	1.5+2.5	1.50	2.50	-	-	-	2.09	4.00	5.28	0.42	0.81	1.20	1.94	3.80	5.48	95
	1.5+3.5	1.50	3.50	-	-	-	2.20	5.00	6.17	0.42	1.11	1.53	1.94	5.10	6.99	95
	1.5+4.2	1.50	4.20	-	-	-	2.27	5.70	6.59	0.42	1.37	1.76	1.94	6.30	8.10	95
	1.5+5.0	1.50	5.00	-	-	-	2.36	6.50	7.20	0.46	1.65	1.97	2.11	7.60	9.10	95
	1.5+6.0	1.50	6.00	-	-	-	2.48	7.50	7.81	0.50	2.12	2.29	2.27	9.80	10.60	95
	1.5+7.1	1.40	6.60	-	-	-	2.64	8.00	8.51	0.52	2.40	2.76	2.40	11.10	12.70	95
	2.0+2.0	2.00	2.00	-	-	-	2.09	4.00	5.45	0.46	0.81	1.29	2.11	3.80	6.00	95
	2.0+2.5	2.00	2.50	-	-	-	2.14	4.50	5.91	0.46	0.97	1.47	2.11	4.50	6.80	95
	2.0+3.5	2.00	3.50	-	-	-	2.25	5.50	6.58	0.46	1.31	1.76	2.11	6.00	8.10	95
	2.0+4.2	2.00	4.20	-	-	-	2.33	6.20	6.98	0.46	1.59	1.96	2.11	7.30	9.00	95
	2.0+5.0	2.00	5.00	-	-	-	2.42	7.00	7.49	0.46	1.89	2.13	2.11	8.70	9.80	95
	2.0+6.0	1.88	5.63	-	-	-	2.55	7.50	8.16	0.50	2.12	2.52	2.27	9.80	11.60	95
	2.0+7.1	1.76	6.24	-	-	-	2.71	8.00	8.67	0.52	2.40	2.88	2.40	11.10	13.20	95
	2.5+2.5	2.50	2.50	-	-	-	2.20	5.00	6.34	0.42	1.12	1.66	1.94	5.20	7.70	95
	2.5+3.5	2.50	3.50	-	-	-	2.31	6.00	6.79	0.46	1.50	1.86	2.11	6.90	8.60	95
	2.5+4.2	2.50	4.20	-	-	-	2.39	6.70	7.27	0.46	1.81	2.12	2.11	8.30	9.80	95
	2.5+5.0	2.50	5.00	-	-	-	2.48	7.50	7.88	0.49	2.13	2.35	2.23	9.80	10.80	95
	2.5+6.0	2.35	5.65	-	-	-	2.63	8.00	8.43	0.52	2.40	2.70	2.40	11.10	12.40	95
	2.5+7.1	2.21	6.29	-	-	-	2.79	8.50	8.69	0.55	2.75	2.88	2.53	12.60	13.20	95
	3.5+3.5	3.50	3.50	-	-	-	2.42	7.00	7.49	0.49	1.95	2.23	2.23	9.00	10.30	95
	3.5+4.2	3.50	4.20	-	-	-	2.51	7.70	7.85	0.49	2.37	2.45	2.23	10.90	11.30	95
	3.5+5.0	3.29	4.71	-	-	-	2.63	8.00	8.02	0.52	2.40	2.41	2.40	11.00	11.10	95
	3.5+6.0	2.95	5.05	-	-	-	2.77	8.00	8.65	0.55	2.39	2.82	2.53	11.00	13.00	95
	3.5+7.1	2.97	6.03	-	-	-	2.93	9.00	8.68	0.59	2.94	2.82	2.69	13.50	13.00	95
	4.2+4.2	4.00	4.00	-	-	-	2.61	8.00	7.86	0.52	2.55	2.45	2.36	11.70	11.30	95
	4.2+5.0	3.65	4.35	-	-	-	2.73	8.00	8.21	0.55	2.40	2.52	2.53	11.00	11.60	95
	4.2+6.0	3.50	5.00	-	-	-	2.88	8.50	8.67	0.55	2.65	2.82	2.53	12.20	13.00	95
	4.2+7.1	3.35	5.65	-	-	-	3.04	9.00	8.85	0.59	2.94	2.95	2.69	13.50	13.60	95
	5.0+5.0	4.25	4.25	-	-	-	2.85	8.50	8.37	0.55	2.59	2.48	2.53	11.90	11.40	95
	5.0+6.0	4.09	4.91	-	-	-	2.99	9.00	8.85	0.59	2.90	2.78	2.69	13.30	12.80	95
	5.0+7.1	3.72	5.28	-	-	-	3.25	9.00	9.12	0.57	2.90	2.97	2.70	13.30	13.70	95
	6.0+6.0	4.50	4.50	-	-	-	3.25	9.00	9.46	0.57	2.89	3.23	2.70	13.30	14.90	95
	6.0+7.1	4.12	4.88	-	-	-	3.41	9.00	9.48	0.60	2.79	3.23	2.80	12.80	14.90	95
	7.1+7.1	4.50	4.50	-	-	-	3.57	9.00	9.51	0.64	2.79	3.24	3.00	12.80	14.90	95
	1.5+1.5+1.5	1.50	1.50	1.50	-	-	2.14	4.50	6.40	0.43	0.87	1.37	1.98	4.00	6.25	95
	1.5+1.5+2.0	1.50	1.50	2.00	-	-	2.20	5.00	6.56	0.43	1.01	1.46	1.98	4.70	6.66	95
	1.5+1.5+2.5	1.50	1.50	2.50	-	-	2.25	5.50	6.72	0.43	1.16	1.55	1.98	5.30	7.08	95
	1.5+1.5+3.5	1.50	1.50	3.50	-	-	2.36	6.50	7.20	0.46	1.51	1.78	2.11	7.00	8.20	95
	1.5+1.5+4.2	1.50	1.50	4.20	-	-	2.44	7.20	7.67	0.46	1.78	1.99	2.11	8.20	9.20	95
	1.5+1.5+5.0	1.41	1.41	4.69	-	-	2.55	7.50	8.18	0.50	1.87	2.17	2.27	8.60	10.00	95
	1.5+1.5+6.0	1.33	1.33	5.33	-	-	2.70	8.00	8.75	0.53	2.09	2.46	2.44	9.60	11.30	95
	1.5+1.5+7.1	1.26	1.26	5.98	-	-	2.86	8.50	9.26	0.56	2.33	2.77	2.57	10.70	12.70	95
	1.5+2.0+2.0	1.50	2.00	2.00	-	-	2.25	5.50	6.58	0.46	1.16	1.52	2.11	5.40	6.94	95
	1.5+2.0+2.5	1.50	2.00	2.50	-	-	2.31	6.00	6.89	0.43	1.33	1.65	1.98	6.10	7.54	95
	1.5+2.0+3.5	1.50	2.00	3.50	-	-	2.42	7.00	7.55	0.46	1.71	1.94	2.11	7.90	8.90	95
	1.5+2.0+4.2	1.50	2.00	4.20	-	-	2.51	7.70	8.00	0.50	2.02	2.16	2.27	9.30	9.90	95
	1.5+2.0+5.0	1.41	1.88	4.71	-	-	2.63	8.00	8.50	0.50	2.09	2.34	2.27	9.60	10.80	95
	1.5+2.0+6.0	1.26	1.68	5.05	-	-	2.77	8.00	9.05	0.53	2.09	2.64	2.44	9.60	12.20	95
	1.5+2.0+7.1	1.27	1.70	6.03	-	-	2.93	9.00	9.36	0.56	2.62	2.83	2.57	12.00	13.00	95
	1.5+2.5+2.5	1.50	2.50	2.50	-	-	2.36	6.50	7.18	0.46	1.51	1.78	2.11	7.00	8.20	95
	1.5+2.5+3.5	1.50	2.50	3.50	-	-	2.48	7.50	7.90	0.50	1.92	2.10	2.27	8.80	9.70	95
	1.5+2.5+4.2	1.46	2.44	4.10	-	-	2.58	8.00	8.33	0.50	2.15	2.33	2.27	9.90	10.70	95
	1.5+2.5+5.0	1.33	2.22	4.44	-	-	2.70	8.00	8.73	0.52	2.09	2.46	2.40	9.60	11.30	95
	1.5+2.5+6.0	1.28	2.13	5.10	-	-	2.85	8.50	9.26	0.53	2.33	2.77	2.44	10.70	12.70	95
	1.5+2.5+7.1	1.22	2.03	5.76	-	-	3.01	9.00	9.56	0.56	2.62	2.96	2.57	12.00	13.60	95
	1.5+3.5+3.5	1.41	3.29	3.29	-	-	2.63	8.00	8.47	0.52	2.15	2.39	2.40	9.90	11.00	95
	1.5+3.5+4.2	1.30	3.04	3.65	-	-	2.73	8.00	8.68	0.52	2.14	2.51	2.40	9.90	11.50	95
	1.5+3.5+5.0	1.28	2.98	4.25	-	-	2.85	8.50	8.87	0.56	2.33	2.52	2.57	10.70	11.60	95
	1.5+3.5+6.0	1.23	2.86	4.91	-	-	2.99	9.00	9.31	0.56	2.58	2.77	2.57	11.90	12.70	95
	1.5+3.5+7.1	1.12	2.60	5.28	-	-	3.32	9.00	9.51	0.57	2.58	2.90	2.70	11.80	13.30	95
	1.5+4.2+4.2	1.36	3.82	3.82	-	-	2.83	9.00	8.69	0.55	2.73	2.51	2.53	12.50	11.50	95
	1.5+4.2+5.0	1.26	3.53	4.21	-	-	2.95	9.00	8.88	0.56	2.62	2.52	2.57	12.00	11.60	95
	1.5+4.2+6.0	1.15	3.23	4.62	-	-	3.10	9.00	9.51	0.59	2.58	2.90	2.69	11.90	13.30	95
	1.5+4.2+7.1	1.05	2.95	4.99	-	-	3.32	9.00	9.53	0.57	2.58	2.90	2.70	11.80	13.27	95
	1.5+5.0+5.0	1.17	3.91	3.91	-	-	3.07	9.00	9.27	0.59	2.52	2.66	2.69	11.60	12.20	95
	1.5+5.0+6.0	1.08	3.60	4.32	-	-	3.35	9.00	9.70	0.56	2.51	2.91	2.70	11.50	13.40	95
	1.5+5.0+7.1	0.99	3.31	4.70	-	-	3.53	9.00	9.72	0.60	2.51	2.92	2.80	11.50	13.40	

4 Combination table

4 - 1 Combination Table

5MXM-A9

Cooling · 230V 50Hz

Outdoor unit	Indoor unit	Cooling capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room ·A·	Room ·B·	Room ·C·	Room ·D·	Room ·E·	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V1B 5MXM90N2V1B 5MXM90N2V1B9 5MXM90A2V1B 5MXM90A2V1B9	2.0+2.5+3.5	1.88	2.34	3.28	-	-	2.55	7.50	8.22	0.50	1.92	2.27	2.27	8.80	10.40	95
	2.0+2.5+4.2	1.84	2.30	3.86	-	-	2.66	8.00	8.53	0.52	2.15	2.44	2.40	9.90	11.30	95
	2.0+2.5+5.0	1.68	2.11	4.21	-	-	2.77	8.00	8.83	0.52	2.09	2.52	2.40	9.60	11.60	95
	2.0+2.5+6.0	1.66	2.07	4.97	-	-	2.92	8.70	9.36	0.56	2.44	2.83	2.57	11.20	13.00	95
	2.0+2.5+7.1	1.55	1.94	5.51	-	-	3.08	9.00	9.56	0.59	2.62	2.96	2.69	12.00	13.60	95
	2.0+3.5+3.5	1.78	3.11	3.11	-	-	2.70	8.00	8.67	0.52	2.15	2.51	2.40	9.90	11.50	95
	2.0+3.5+4.2	1.75	3.07	3.68	-	-	2.80	8.50	8.68	0.55	2.42	2.51	2.53	11.10	11.50	95
	2.0+3.5+5.0	1.66	2.90	4.14	-	-	2.92	8.70	8.87	0.56	2.44	2.52	2.57	11.20	11.60	95
	2.0+3.5+6.0	1.57	2.74	4.70	-	-	3.07	9.00	9.50	0.59	2.58	2.90	2.69	11.90	13.30	95
	2.0+3.5+7.1	1.43	2.50	5.07	-	-	3.32	9.00	9.51	0.57	2.58	2.90	2.70	11.80	13.30	95
	2.0+4.2+4.2	1.67	3.51	3.51	-	-	2.91	8.70	8.69	0.55	2.54	2.51	2.53	11.70	11.50	95
	2.0+4.2+5.0	1.61	3.38	4.02	-	-	3.02	9.00	9.09	0.59	2.62	2.64	2.69	12.00	12.20	95
	2.0+4.2+6.0	1.48	3.10	4.43	-	-	3.32	9.00	9.51	0.57	2.58	2.90	2.70	11.90	13.30	95
	2.0+4.2+7.1	1.35	2.84	4.80	-	-	3.49	9.00	9.53	0.60	2.58	2.90	2.80	11.80	13.30	95
	2.0+5.0+5.0	1.50	3.75	3.75	-	-	3.14	9.00	9.27	0.59	2.52	2.66	2.69	11.60	12.20	95
	2.0+5.0+6.0	1.38	3.46	4.15	-	-	3.35	9.00	9.70	0.56	2.51	2.91	2.70	11.50	13.40	95
	2.0+5.0+7.1	1.28	3.19	4.53	-	-	3.53	9.00	9.72	0.60	2.51	2.92	2.80	11.50	13.40	95
	2.0+6.0+6.0	1.29	3.86	3.86	-	-	3.53	9.00	10.20	0.60	2.47	3.25	2.80	11.40	15.00	95
	2.0+6.0+7.1	1.19	3.58	4.23	-	-	3.70	9.00	10.65	0.64	2.47	3.60	3.00	11.40	16.60	95
	2.5+2.5+2.5	2.50	2.50	2.50	-	-	2.48	7.50	7.87	0.50	1.93	2.10	2.27	8.90	9.70	95
	2.5+2.5+3.5	2.35	2.35	3.29	-	-	2.63	8.00	8.44	0.52	2.15	2.39	2.40	9.90	11.00	95
	2.5+2.5+4.2	2.17	2.17	3.65	-	-	2.73	8.00	8.65	0.52	2.15	2.50	2.40	9.90	11.50	95
	2.5+2.5+5.0	2.13	2.13	4.25	-	-	2.85	8.50	8.84	0.56	2.33	2.52	2.57	10.70	11.60	95
	2.5+2.5+6.0	2.05	2.05	4.91	-	-	2.99	9.00	9.37	0.56	2.62	2.83	2.57	12.00	13.00	95
	2.5+2.5+7.1	1.86	1.86	5.28	-	-	3.32	9.00	9.58	0.57	2.62	2.96	2.70	12.00	13.60	95
	2.5+3.5+3.5	2.11	2.95	2.95	-	-	2.77	8.00	8.68	0.55	2.14	2.51	2.53	9.90	11.50	95
	2.5+3.5+4.2	2.08	2.92	3.50	-	-	2.88	8.50	8.69	0.55	2.42	2.51	2.53	11.10	11.50	95
	2.5+3.5+5.0	2.05	2.86	4.09	-	-	2.99	9.00	8.89	0.59	2.62	2.52	2.69	12.00	11.60	95
	2.5+3.5+6.0	1.88	2.63	4.50	-	-	3.14	9.00	9.51	0.59	2.58	2.90	2.69	11.80	13.30	95
	2.5+3.5+7.1	1.72	2.40	4.88	-	-	3.33	9.00	9.53	0.57	2.57	2.90	2.70	11.80	13.30	95
	2.5+4.2+4.2	2.06	3.47	3.47	-	-	2.98	9.00	8.71	0.59	2.72	2.51	2.69	12.50	11.50	95
	2.5+4.2+5.0	1.92	3.23	3.85	-	-	3.10	9.00	9.10	0.59	2.58	2.64	2.69	11.90	12.20	95
	2.5+4.2+6.0	1.77	2.98	4.25	-	-	3.32	9.00	9.52	0.57	2.58	2.90	2.70	11.80	13.30	95
	2.5+4.2+7.1	1.63	2.74	4.63	-	-	3.50	9.00	9.54	0.60	2.57	2.90	2.80	11.80	13.40	95
	2.5+5.0+5.0	1.80	3.60	3.60	-	-	3.35	9.00	9.28	0.56	2.51	2.66	2.70	11.60	12.20	95
	2.5+5.0+6.0	1.67	3.33	4.00	-	-	3.53	9.00	9.72	0.60	2.51	2.92	2.80	11.50	13.40	95
	2.5+5.0+7.1	1.54	3.08	4.38	-	-	3.53	9.00	9.73	0.60	2.48	2.92	2.80	11.40	13.40	95
	2.5+6.0+6.0	1.55	3.72	3.72	-	-	3.53	9.00	10.22	0.60	2.47	3.25	2.80	11.40	15.00	95
	2.5+6.0+7.1	1.44	3.46	4.10	-	-	3.71	9.00	10.66	0.64	2.47	3.60	3.00	11.40	16.60	95
	3.5+3.5+3.5	2.90	2.90	2.90	-	-	2.92	8.70	8.83	0.59	2.50	2.57	2.69	11.50	11.80	95
	3.5+3.5+4.2	2.81	2.81	3.38	-	-	3.02	9.00	8.84	0.59	2.68	2.57	2.69	12.30	11.90	95
	3.5+3.5+5.0	2.63	2.63	3.75	-	-	3.14	9.00	9.03	0.62	2.58	2.59	2.82	11.80	11.90	95
	3.5+3.5+6.0	2.42	2.42	4.15	-	-	3.33	9.00	9.56	0.57	2.57	2.90	2.70	11.80	13.40	95
	3.5+3.5+7.1	2.23	2.23	4.53	-	-	3.50	9.00	9.58	0.60	2.57	2.90	2.80	11.80	13.40	95
	3.5+4.2+4.2	2.65	3.18	3.18	-	-	3.13	9.00	9.05	0.62	2.68	2.69	2.82	12.30	12.40	95
	3.5+4.2+5.0	2.48	2.98	3.54	-	-	3.33	9.00	9.25	0.57	2.57	2.71	2.70	11.80	12.50	95
	3.5+4.2+6.0	2.30	2.76	3.94	-	-	3.50	9.00	9.57	0.60	2.57	2.90	2.80	11.80	13.40	95
	3.5+4.2+7.1	2.13	2.55	4.32	-	-	3.67	9.00	10.04	0.64	2.56	3.23	3.00	11.80	14.90	95
	3.5+5.0+5.0	2.33	3.33	3.33	-	-	3.53	9.00	9.22	0.60	2.48	2.60	2.80	11.40	11.90	95
	3.5+5.0+6.0	2.17	3.10	3.72	-	-	3.53	9.00	9.76	0.60	2.47	2.92	2.80	11.40	13.40	95
	3.5+5.0+7.1	2.02	2.88	4.10	-	-	3.71	9.00	10.15	0.64	2.47	3.19	3.00	11.30	14.60	95
	3.5+6.0+6.0	2.03	3.48	3.48	-	-	3.71	9.00	10.61	0.64	2.47	3.54	3.00	11.30	16.30	95
	4.2+4.2+4.2	3.00	3.00	3.00	-	-	3.30	9.00	9.25	0.57	2.68	2.82	2.70	12.30	13.00	95
	4.2+4.2+5.0	2.82	2.82	3.36	-	-	3.50	9.00	9.35	0.60	2.57	2.77	2.80	11.80	12.80	95
	4.2+4.2+6.0	2.63	2.63	3.75	-	-	3.50	9.00	9.58	0.60	2.56	2.90	2.80	11.80	13.40	95
	4.2+4.2+7.1	2.44	2.44	4.12	-	-	3.67	9.00	10.06	0.64	2.56	3.24	3.00	11.80	14.90	95
	4.2+5.0+5.0	2.66	3.17	3.17	-	-	3.53	9.00	9.23	0.60	2.47	2.60	2.80	11.40	11.90	95
	4.2+5.0+6.0	2.49	2.96	3.55	-	-	3.71	9.00	10.24	0.64	2.47	3.25	3.00	11.30	15.00	95
	5.0+5.0+5.0	3.00	3.00	3.00	-	-	3.73	9.00	10.00	0.64	2.41	3.00	3.00	11.10	13.80	95
	1.5+1.5+1.5+1.5	1.65	1.65	1.65	1.65	-	2.31	6.60	7.10	0.44	1.35	1.55	2.02	6.20	7.10	95
	1.5+1.5+1.5+2.0	1.55	1.55	1.55	2.06	-	2.36	6.70	7.30	0.47	1.43	1.66	2.15	6.53	7.58	95
	1.5+1.5+1.5+2.5	1.50	1.50	1.50	2.50	-	2.42	7.00	7.50	0.47	1.53	1.74	2.15	7.00	7.98	95
	1.5+1.5+1.5+3.5	1.41	1.41	1.41	3.28	-	2.55	7.50	8.18	0.50	1.74	2.02	2.27	8.00	9.30	95
	1.5+1.5+1.5+4.2	1.38	1.38	1.38	3.86	-	2.66	8.00	8.55	0.50	1.95	2.19	2.27	9.00	10.10	95
	1.5+1.5+1.5+5.0	1.26	1.26	1.26	4.21	-	2.77	8.00	9.03	0.53	1.90	2.37	2.44	8.80	10.90	95
	1.5+1.5+1.5+6.0	1.24	1.24	1.24	4.97	-	2.92	8.70	9.50	0.53	2.23	2.62	2.44	10.20	12.10	95
	1.5+1.5+1.5+7.1	1.16	1.16	1.16	5.51	-	3.08	9.00	9.95	0.56	2.36	2.88	2.57	10.90	13.20	95
	1.5+1.5+2.0+2.0	1.50	1.50	2.00	2.00	-	2.42	7.00	7.50	0.47	1.53	1.74	2.15	7.00	8.10	95
	1.5+1.5+2.0+2.5	1.50	1.50	2.00	2.50	-	2.48	7.50	7.90	0.47	1.74	1.91	2.15	8.00	8.80	95
	1.5+1.5+2.0+3.5	1.41	1.41	1.88	3.29	-	2.63	8.00	8.42	0.50	1.95	2.13	2.27	9.00	9.80	95
	1.5+1.5+2.0+4.2	1.30	1.30	1.74	3.65	-	2.73	8.00	8.90	0.53	1.95	2.36	2.44	9.00	10.90	95
	1.5+1.5+2.0+5.0	1.28	1.28	1.70	4.25	-	2.85	8.50	9.26	0.53	2.13	2.50	2.44	9.80	11.50	95
	1.5+1.5+2.0+6.0	1.23	1.23	1.64	4.91	-	2.99	9.00	9.72	0.56	2.36	2.7				

4 Combination table

4 - 1 Combination Table

5MXM-A9

Cooling · 230V 50Hz

4

Outdoor unit	Indoor unit	Cooling capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room · A	Room · B	Room · C	Room · D	Room · E	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V1B 5MXM90N2V1B 5MXM90N2V1B9 5MXM90A2V1B 5MXM90A2V1B9	1.5+1.5+4.2+6.0	1.02	1.02	2.86	4.09	-	3.41	9.00	10.19	0.56	2.35	3.02	2.70	10.80	13.90	95
	1.5+1.5+4.2+7.1	0.94	0.94	2.64	4.47	-	3.60	9.00	10.20	0.60	2.35	3.02	2.80	10.80	13.90	95
	1.5+1.5+5.0+5.0	1.04	1.04	3.46	3.46	-	3.43	9.00	9.97	0.56	2.31	2.83	2.70	10.60	13.00	95
	1.5+1.5+5.0+6.0	0.96	0.96	3.21	3.86	-	3.44	9.00	10.42	0.56	2.31	3.10	2.70	10.60	14.20	95
	1.5+1.5+5.0+7.1	0.89	0.89	2.98	4.23	-	3.62	9.00	10.73	0.60	2.30	3.30	2.80	10.60	15.20	95
	1.5+1.5+6.0+6.0	0.90	0.90	3.60	3.60	-	3.62	9.00	10.74	0.60	2.30	3.31	2.80	10.60	15.20	95
	1.5+2.0+2.0+2.0	1.50	2.00	2.00	2.00	-	2.48	7.50	7.89	0.47	1.74	1.91	2.15	8.00	8.80	95
	1.5+2.0+2.0+2.5	1.41	1.88	1.88	2.34	-	2.55	7.50	8.15	0.50	1.74	2.02	2.27	8.00	9.30	95
	1.5+2.0+2.0+3.5	1.33	1.78	1.78	3.11	-	2.70	8.00	8.78	0.53	1.95	2.30	2.44	9.00	10.60	95
	1.5+2.0+2.0+4.2	1.31	1.75	1.75	3.68	-	2.80	8.50	9.12	0.53	2.18	2.49	2.44	10.00	11.40	95
	1.5+2.0+2.0+5.0	1.24	1.66	1.66	4.14	-	2.92	8.70	9.48	0.56	2.23	2.62	2.57	10.30	12.00	95
	1.5+2.0+2.0+6.0	1.17	1.57	1.57	4.70	-	3.07	9.00	9.94	0.56	2.36	2.88	2.57	10.90	13.20	95
	1.5+2.0+2.0+7.1	1.07	1.43	1.43	5.07	-	3.23	9.00	10.26	0.60	2.36	3.08	2.74	10.90	14.20	95
	1.5+2.0+2.5+2.5	1.41	1.88	2.35	2.35	-	2.63	8.00	8.52	0.50	1.95	2.19	2.27	9.00	10.10	95
	1.5+2.0+2.5+3.5	1.26	1.68	2.11	2.95	-	2.77	8.00	9.02	0.53	1.95	2.42	2.44	9.00	11.20	95
	1.5+2.0+2.5+4.2	1.25	1.67	2.08	3.50	-	2.88	8.50	9.36	0.56	2.17	2.61	2.57	10.00	12.00	95
	1.5+2.0+2.5+5.0	1.23	1.64	2.05	4.09	-	2.99	9.00	9.49	0.56	2.36	2.62	2.57	10.90	12.10	95
	1.5+2.0+2.5+6.0	1.13	1.50	1.88	4.50	-	3.14	9.00	10.05	0.59	2.36	2.95	2.69	10.90	13.60	95
	1.5+2.0+2.5+7.1	1.03	1.37	1.72	4.88	-	3.41	9.00	10.16	0.56	2.36	3.01	2.70	10.80	13.90	95
	1.5+2.0+3.5+3.5	1.24	1.66	2.90	2.90	-	2.92	8.70	9.38	0.56	2.28	2.61	2.57	10.50	12.00	95
	1.5+2.0+3.5+4.2	1.21	1.61	2.81	3.38	-	3.02	9.00	9.60	0.56	2.41	2.74	2.57	11.10	12.60	95
	1.5+2.0+3.5+5.0	1.13	1.50	2.63	3.75	-	3.14	9.00	9.74	0.59	2.36	2.75	2.69	10.80	12.70	95
	1.5+2.0+3.5+6.0	1.04	1.38	2.42	4.15	-	3.41	9.00	10.18	0.56	2.36	3.02	2.70	10.80	13.90	95
	1.5+2.0+3.5+7.1	0.96	1.28	2.23	4.53	-	3.59	9.00	10.20	0.60	2.35	3.02	2.80	10.80	13.90	95
	1.5+2.0+4.2+4.2	1.13	1.51	3.18	3.18	-	3.13	9.00	9.61	0.59	2.41	2.74	2.69	11.10	12.60	95
	1.5+2.0+4.2+5.0	1.06	1.42	2.98	3.54	-	3.41	9.00	9.75	0.56	2.36	2.75	2.70	10.80	12.70	95
	1.5+2.0+4.2+6.0	0.99	1.31	2.76	3.94	-	3.41	9.00	10.19	0.56	2.35	3.02	2.70	10.80	13.90	95
	1.5+2.0+4.2+7.1	0.91	1.22	2.55	4.32	-	3.60	9.00	10.69	0.60	2.35	3.36	2.80	10.80	15.50	95
	1.5+2.0+5.0+5.0	1.00	1.33	3.33	3.33	-	3.43	9.00	9.97	0.56	2.31	2.83	2.70	10.60	13.00	95
	1.5+2.0+5.0+6.0	0.93	1.24	3.10	3.72	-	3.62	9.00	10.42	0.60	2.31	3.10	2.80	10.60	14.20	95
	1.5+2.0+5.0+7.1	0.87	1.15	2.88	4.10	-	3.80	9.00	10.73	0.63	2.30	3.30	3.00	10.60	15.20	95
	1.5+2.0+6.0+6.0	0.87	1.16	3.48	3.48	-	3.80	9.00	10.74	0.63	2.30	3.31	3.00	10.60	15.20	95
	1.5+2.5+2.5+2.5	1.33	2.22	2.22	2.22	-	2.70	8.00	8.77	0.53	1.95	2.30	2.44	9.00	10.60	95
	1.5+2.5+2.5+3.5	1.28	2.13	2.13	2.98	-	2.85	8.50	9.25	0.53	2.17	2.55	2.44	10.00	11.70	95
	1.5+2.5+2.5+4.2	1.26	2.10	2.10	3.53	-	2.95	9.00	9.37	0.56	2.42	2.61	2.57	11.10	12.00	95
	1.5+2.5+2.5+5.0	1.17	1.96	1.96	3.91	-	3.07	9.00	9.72	0.59	2.36	2.75	2.69	10.90	12.60	95
	1.5+2.5+2.5+6.0	1.08	1.80	1.80	4.32	-	3.21	9.00	10.16	0.59	2.36	3.01	2.69	10.80	13.90	95
	1.5+2.5+2.5+7.1	0.99	1.65	1.65	4.70	-	3.41	9.00	10.18	0.56	2.36	3.01	2.70	10.80	13.90	95
	1.5+2.5+3.5+3.5	1.23	2.05	2.86	2.86	-	2.99	9.00	9.39	0.56	2.41	2.61	2.57	11.10	12.00	95
	1.5+2.5+3.5+4.2	1.15	1.92	2.69	3.23	-	3.10	9.00	9.51	0.59	2.41	2.68	2.69	11.10	12.30	95
	1.5+2.5+3.5+5.0	1.08	1.80	2.52	3.60	-	3.21	9.00	9.75	0.59	2.36	2.75	2.69	10.80	12.70	95
	1.5+2.5+3.5+6.0	1.00	1.67	2.33	4.00	-	3.41	9.00	10.19	0.56	2.35	3.02	2.70	10.80	13.90	95
	1.5+2.5+3.5+7.1	0.92	1.54	2.16	4.38	-	3.60	9.00	10.21	0.60	2.35	3.02	2.80	10.80	13.90	95
	1.5+2.5+4.2+4.2	1.09	1.81	3.05	3.05	-	3.20	9.00	9.62	0.59	2.41	2.74	2.69	11.10	12.60	95
	1.5+2.5+4.2+5.0	1.02	1.70	2.86	3.41	-	3.41	9.00	9.76	0.56	2.36	2.75	2.70	10.80	12.70	95
	1.5+2.5+4.2+6.0	0.95	1.58	2.66	3.80	-	3.60	9.00	10.20	0.60	2.35	3.02	2.80	10.80	13.90	95
	1.5+2.5+4.2+7.1	0.88	1.47	2.47	4.18	-	3.78	9.00	10.71	0.63	2.35	3.36	3.00	10.80	15.50	95
	1.5+2.5+5.0+5.0	0.96	1.61	3.21	3.21	-	3.20	9.00	9.53	0.59	2.31	2.57	2.69	10.60	11.80	95
	1.5+2.5+5.0+6.0	0.90	1.50	3.00	3.60	-	3.44	9.00	9.78	0.56	2.30	2.70	2.70	10.60	12.40	95
	1.5+3.5+3.5+3.5	1.13	2.63	2.63	2.63	-	3.14	9.00	9.53	0.59	2.41	2.68	2.69	11.10	12.30	95
	1.5+3.5+3.5+4.2	1.06	2.48	2.48	2.98	-	3.39	9.00	9.54	0.56	2.40	2.68	2.70	11.10	12.30	95
	1.5+3.5+3.5+5.0	1.00	2.33	2.33	3.33	-	3.42	9.00	9.78	0.56	2.35	2.75	2.70	10.80	12.70	95
	1.5+3.5+3.5+6.0	0.93	2.17	2.17	3.72	-	3.60	9.00	10.22	0.60	2.35	3.02	2.80	10.80	13.90	95
	1.5+3.5+3.5+7.1	0.87	2.02	2.02	4.10	-	3.78	9.00	10.73	0.63	2.32	3.37	3.00	10.70	15.50	95
	1.5+3.5+4.2+4.2	1.01	2.35	2.82	2.82	-	3.39	9.00	9.55	0.56	2.40	2.68	2.70	11.10	12.30	95
	1.5+3.5+4.2+5.0	0.95	2.22	2.66	3.17	-	3.60	9.00	9.79	0.60	2.35	2.75	2.80	10.80	12.70	95
	1.5+3.5+4.2+6.0	0.89	2.07	2.49	3.55	-	3.78	9.00	10.73	0.63	2.32	3.37	3.00	10.70	15.50	95
	1.5+3.5+5.0+5.0	0.90	2.10	3.00	3.00	-	3.62	9.00	10.53	0.60	2.30	3.17	2.80	10.60	14.60	95
	1.5+4.2+4.2+4.2	0.96	2.68	2.68	2.68	-	3.57	9.00	9.56	0.60	2.40	2.68	2.80	11.00	12.40	95
	1.5+4.2+4.2+5.0	0.91	2.54	2.54	3.02	-	3.60	9.00	10.32	0.60	2.35	3.09	2.80	10.80	14.20	95
	2.0+2.0+2.0+2.0	1.88	1.88	1.88	1.88	-	2.55	7.50	8.14	0.50	1.74	2.02	2.27	8.00	9.30	95
	2.0+2.0+2.0+2.5	1.88	1.88	1.88	2.35	-	2.63	8.00	8.51	0.50	1.95	2.19	2.27	9.00	10.10	95
	2.0+2.0+2.0+3.5	1.68	1.68	1.68	2.95	-	2.77	8.00	9.00	0.53	1.95	2.42	2.44	9.00	11.20	95
	2.0+2.0+2.0+4.2	1.67	1.67	1.67	3.50	-	2.88	8.50	9.34	0.56	2.18	2.61	2.57	10.00	12.00	95
	2.0+2.0+2.0+5.0	1.64	1.64	1.64	4.09	-	2.99	9.00	9.59	0.56	2.37	2.68	2.57	10.90	12.40	95
	2.0+2.0+2.0+6.0	1.50	1.50	1.50	4.50	-	3.14	9.00	10.04	0.60	2.36	2.95	2.74	10.90	13.60	95
	2.0+2.0+2.0+7.1	1.37	1.37	1.37	4.88	-	3.41	9.00	10.26	0.56	2.36	3.08	2.70	10.90	14.20	95
	2.0+2.0+2.5+2.5	1.73	1.73	2.17	2.17	-	2.70	7.80	8.75	0.53	1.88	2.30	2.44	8.70	10.60	95
	2.0+2.0+2.5+3.5	1.70	1.70	2.13	2.98	-	2.85	8.50	9.24	0.53	2.18	2.55	2.44	10.00	11.70	95
	2.0+2.0+2.5+4.2	1.68	1.68	2.10	3.53	-	2.95	9.00	9.36	0.56	2.42	2.61	2.57	11.10	12.00	95
	2.0+2.0+2.5+5.0	1.57	1.57	1.96	3.91	-	3.07	9.00	9.71	0.59	2.36	2.75	2.69	10.90	12.60	95

4 Combination table

4 - 1 Combination Table

5MXM-A9

Cooling · 230V 50Hz

Outdoor unit	Indoor unit	Cooling capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room -A-	Room -B-	Room -C-	Room -D-	Room -E-	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V1B 5MXM90N2V1B 5MXM90N2V1B9 5MXM90A2V1B 5MXM90A2V1B9	2.0+2.5+2.5+5.0	1,50	1,88	1,88	3,75	-	3,14	9,00	9,72	0,59	2,36	2,75	2,69	10,90	12,60	95
	2.0+2.5+2.5+6.0	1,38	1,73	1,73	4,15	-	3,41	9,00	10,16	0,56	2,36	3,01	2,70	10,80	13,90	95
	2.0+2.5+2.5+7.1	1,28	1,60	1,60	4,53	-	3,59	9,00	10,18	0,60	2,36	3,01	2,80	10,80	13,90	95
	2.0+2.5+3.5+3.5	1,57	1,96	2,74	2,74	-	3,07	9,00	9,50	0,59	2,41	2,68	2,69	11,10	12,30	95
	2.0+2.5+3.5+4.2	1,48	1,84	2,58	3,10	-	3,17	9,00	9,51	0,59	2,41	2,68	2,69	11,10	12,30	95
	2.0+2.5+3.5+5.0	1,38	1,73	2,42	3,46	-	3,41	9,00	9,75	0,56	2,36	2,75	2,70	10,80	12,70	95
	2.0+2.5+3.5+6.0	1,29	1,61	2,25	3,86	-	3,59	9,00	10,19	0,60	2,35	3,02	2,80	10,80	13,90	95
	2.0+2.5+3.5+7.1	1,19	1,49	2,09	4,23	-	3,60	9,00	10,70	0,60	2,35	3,36	2,80	10,80	15,50	95
	2.0+2.5+4.2+4.2	1,40	1,74	2,93	2,93	-	3,39	9,00	9,62	0,56	2,41	2,74	2,70	11,10	12,60	95
	2.0+2.5+4.2+5.0	1,31	1,64	2,76	3,28	-	3,41	9,00	9,76	0,56	2,36	2,75	2,70	10,80	12,70	95
	2.0+2.5+4.2+6.0	1,22	1,53	2,57	3,67	-	3,60	9,00	10,69	0,60	2,35	3,36	2,80	10,80	15,50	95
	2.0+2.5+5.0+5.0	1,24	1,55	3,10	3,10	-	3,62	9,00	9,98	0,60	2,31	2,83	2,80	10,60	13,00	95
	2.0+2.5+5.0+6.0	1,16	1,45	2,90	3,48	-	3,80	9,00	10,72	0,63	2,30	3,30	3,00	10,60	15,20	95
	2.0+3.5+3.5+3.5	1,44	2,52	2,52	2,52	-	3,21	9,00	9,53	0,63	2,41	2,68	2,86	11,10	12,30	95
	2.0+3.5+3.5+4.2	1,36	2,39	2,39	2,86	-	3,39	9,00	9,54	0,56	2,40	2,68	2,70	11,10	12,30	95
	2.0+3.5+3.5+5.0	1,29	2,25	2,25	3,21	-	3,60	9,00	9,78	0,60	2,35	2,75	2,80	10,80	12,70	95
	2.0+3.5+3.5+6.0	1,20	2,10	2,10	3,60	-	3,60	9,00	10,62	0,60	2,35	3,29	2,80	10,80	15,20	95
	2.0+3.5+4.2+4.2	1,29	2,27	2,72	2,72	-	3,57	9,00	9,55	0,60	2,40	2,68	2,80	11,10	12,30	95
	2.0+3.5+4.2+5.0	1,22	2,14	2,57	3,06	-	3,60	9,00	10,21	0,60	2,35	3,02	2,80	10,80	13,90	95
	2.0+3.5+5.0+5.0	1,16	2,03	2,90	2,90	-	3,80	9,00	10,53	0,63	2,30	3,17	3,00	10,60	14,60	95
	2.0+4.2+4.2+4.2	1,23	2,59	2,59	2,59	-	3,57	9,00	9,56	0,60	2,40	2,68	2,80	11,00	12,40	95
	2.0+4.2+4.2+5.0	1,17	2,45	2,45	2,92	-	3,78	9,00	10,22	0,63	2,35	3,02	3,00	10,80	13,90	95
	2.5+2.5+2.5+2.5	2,13	2,13	2,13	2,13	-	2,85	8,50	9,23	0,53	2,18	2,55	2,44	10,00	11,70	95
	2.5+2.5+2.5+3.5	2,05	2,05	2,05	2,86	-	2,99	9,00	9,37	0,56	2,42	2,61	2,57	11,10	12,00	95
	2.5+2.5+2.5+4.2	1,92	1,92	1,92	3,23	-	3,10	9,00	9,59	0,59	2,42	2,74	2,69	11,10	12,60	95
	2.5+2.5+2.5+5.0	1,80	1,80	1,80	3,60	-	3,21	9,00	9,73	0,59	2,36	2,75	2,69	10,90	12,60	95
	2.5+2.5+2.5+6.0	1,67	1,67	1,67	4,00	-	3,41	9,00	10,17	0,56	2,36	3,01	2,70	10,80	13,90	95
	2.5+2.5+2.5+7.1	1,54	1,54	1,54	4,38	-	3,59	9,00	10,19	0,60	2,36	3,02	2,80	10,80	13,90	95
	2.5+2.5+3.5+3.5	1,88	1,88	2,63	2,63	-	3,14	9,00	9,51	0,59	2,41	2,68	2,69	11,10	12,30	95
	2.5+2.5+3.5+4.2	1,77	1,77	2,48	2,98	-	3,39	9,00	9,52	0,56	2,41	2,68	2,70	11,10	12,30	95
	2.5+2.5+3.5+5.0	1,67	1,67	2,33	3,33	-	3,41	9,00	9,76	0,56	2,36	2,75	2,70	10,80	12,70	95
	2.5+2.5+3.5+6.0	1,55	1,55	2,17	3,72	-	3,60	9,00	10,20	0,60	2,35	3,02	2,80	10,80	13,90	95
	2.5+2.5+3.5+7.1	1,44	1,44	2,02	4,10	-	3,78	9,00	10,71	0,63	2,35	3,36	3,00	10,80	15,50	95
	2.5+2.5+4.2+4.2	1,68	1,68	2,82	2,82	-	3,39	9,00	9,53	0,56	2,41	2,68	2,70	11,10	12,30	95
	2.5+2.5+4.2+5.0	1,58	1,58	2,66	3,17	-	3,59	9,00	9,77	0,60	2,35	2,75	2,80	10,80	12,70	95
	2.5+2.5+4.2+6.0	1,48	1,48	2,49	3,55	-	3,78	9,00	10,70	0,63	2,35	3,36	3,00	10,80	15,50	95
	2.5+2.5+5.0+5.0	1,50	1,50	3,00	3,00	-	3,62	9,00	10,51	0,60	2,31	3,16	2,80	10,60	14,60	95
	2.5+3.5+3.5+3.5	1,73	2,42	2,42	2,42	-	3,39	9,00	9,54	0,56	2,40	2,68	2,70	11,10	12,30	95
	2.5+3.5+3.5+4.2	1,64	2,30	2,30	2,76	-	3,39	9,00	9,55	0,56	2,40	2,68	2,70	11,00	12,30	95
	2.5+3.5+3.5+5.0	1,55	2,17	2,17	3,10	-	3,60	9,00	9,79	0,60	2,35	2,75	2,80	10,80	12,70	95
	2.5+3.5+3.5+6.0	1,45	2,03	2,03	3,48	-	3,78	9,00	10,63	0,63	2,32	3,30	3,00	10,70	15,20	95
	2.5+3.5+4.2+4.2	1,56	2,19	2,63	2,63	-	3,57	9,00	9,56	0,60	2,40	2,68	2,80	11,00	12,40	95
	2.5+3.5+4.2+5.0	1,48	2,07	2,49	2,96	-	3,78	9,00	10,22	0,63	2,35	3,02	3,00	10,80	13,90	95
	2.5+4.2+4.2+4.2	1,49	2,50	2,50	2,50	-	3,75	9,00	10,09	0,63	2,37	3,01	3,00	10,90	13,80	95
	3.5+3.5+3.5+3.5	2,25	2,25	2,25	2,25	-	3,58	9,00	9,58	0,60	2,37	2,68	2,80	10,90	12,40	95
	3.5+3.5+3.5+4.2	2,14	2,14	2,14	2,57	-	3,58	9,00	10,11	0,60	2,37	3,01	2,80	10,90	13,80	95
	3.5+3.5+3.5+5.0	2,03	2,03	2,03	2,90	-	3,78	9,00	10,24	0,63	2,32	3,02	3,00	10,70	13,90	95
	3.5+3.5+4.2+4.2	2,05	2,05	2,45	2,45	-	3,76	9,00	10,12	0,63	2,37	3,01	3,00	10,90	13,80	95
	1.5+1.5+1.5+1.5+1.5	1,50	1,50	1,50	1,50	1,50	2,48	7,50	7,81	0,48	1,65	1,76	2,19	7,60	8,10	95
	1.5+1.5+1.5+1.5+2.0	1,41	1,41	1,41	1,41	1,88	2,55	7,50	8,22	0,48	1,65	1,92	2,19	7,60	8,90	95
1.5+1.5+1.5+1.5+2.5	1,41	1,41	1,41	1,41	2,35	2,63	8,00	8,49	0,51	1,85	2,03	2,32	8,50	9,40	95	
1.5+1.5+1.5+1.5+3.5	1,26	1,26	1,26	1,26	2,95	2,77	8,00	9,02	0,53	1,84	2,27	2,44	8,50	10,40	95	
1.5+1.5+1.5+1.5+4.2	1,32	1,32	1,32	1,32	3,71	2,88	9,00	9,39	0,53	2,26	2,45	2,44	10,40	11,30	95	
1.5+1.5+1.5+1.5+5.0	1,23	1,23	1,23	1,23	4,09	2,99	9,00	9,70	0,56	2,25	2,58	2,57	10,40	11,90	95	
1.5+1.5+1.5+1.5+6.0	1,13	1,13	1,13	1,13	4,50	3,14	9,00	10,06	0,57	2,25	2,78	2,61	10,30	12,80	95	
1.5+1.5+1.5+1.5+7.1	1,03	1,03	1,03	1,03	4,88	3,48	9,00	10,39	0,56	2,25	2,98	2,60	10,30	13,70	95	
1.5+1.5+1.5+2.0+2.0	1,41	1,41	1,41	1,88	1,88	2,63	8,00	8,48	0,51	1,85	2,03	2,32	8,50	9,40	95	
1.5+1.5+1.5+2.0+2.5	1,33	1,33	1,33	1,78	2,22	2,70	8,00	8,75	0,51	1,85	2,15	2,32	8,50	9,90	95	
1.5+1.5+1.5+2.0+3.5	1,28	1,28	1,28	1,70	2,98	2,85	8,50	9,26	0,53	2,03	2,39	2,44	9,40	11,00	95	
1.5+1.5+1.5+2.0+4.2	1,26	1,26	1,26	1,68	3,53	2,95	9,00	9,63	0,53	2,26	2,58	2,44	10,40	11,90	95	
1.5+1.5+1.5+2.0+5.0	1,17	1,17	1,17	1,57	3,91	3,07	9,00	9,93	0,56	2,25	2,71	2,57	10,40	12,50	95	
1.5+1.5+1.5+2.0+6.0	1,08	1,08	1,08	1,44	4,32	3,21	9,00	10,17	0,57	2,25	2,84	2,61	10,30	13,10	95	
1.5+1.5+1.5+2.0+7.1	0,99	0,99	0,99	1,32	4,70	3,48	9,00	10,50	0,56	2,25	3,04	2,60	10,30	14,00	95	
1.5+1.5+1.5+2.5+2.5	1,26	1,26	1,26	2,11	2,11	2,77	8,00	9,01	0,53	1,84	2,27	2,44	8,50	10,40	95	
1.5+1.5+1.5+2.5+3.5	1,24	1,24	1,24	2,07	2,90	2,92	8,70	9,51	0,53	2,13	2,51	2,44	9,80	11,60	95	
1.5+1.5+1.5+2.5+4.2	1,21	1,21	1,21	2,01	3,38	3,02	9,00	9,75	0,56	2,26	2,64	2,57	10,40	12,20	95	
1.5+1.5+1.5+2.5+5.0	1,13	1,13	1,13	1,88	3,75	3,14	9,00	10,05	0,56	2,25	2,78	2,57	10,40	12,80	95	
1.5+1.5+1.5+2.5+6.0	1,04	1,04	1,04	1,73	4,15	3,29	9,00	10,39	0,60	2,25	2,98	2,74	10,30	13,70	95	
1.5+1.5+1.5+2.5+7.1	0,96	0,96														

4 Combination table

4 - 1 Combination Table

5MXM-A9

Cooling · 230V 50Hz

4

Outdoor unit	Indoor unit	Cooling capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room · A·	Room ·B·	Room ·C·	Room ·D·	Room ·E·	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V18 5MXM90N2V18 5MXM90N2V189 5MXM90A2V18 5MXM90A2V189	1.5+1.5+2.0+2.5+3.5	1.23	1.23	1.64	2.05	2.86	2.99	9.00	9.75	0.56	2.26	2.64	2.57	10.40	12.20	95
	1.5+1.5+2.0+2.5+4.2	1.15	1.15	1.54	1.92	3.23	3.10	9.00	9.98	0.56	2.26	2.77	2.57	10.40	12.70	95
	1.5+1.5+2.0+2.5+5.0	1.08	1.08	1.44	1.80	3.60	3.21	9.00	10.16	0.60	2.25	2.84	2.74	10.40	13.10	95
	1.5+1.5+2.0+2.5+6.0	1.00	1.00	1.33	1.67	4.00	3.48	9.00	10.50	0.56	2.25	3.04	2.60	10.30	14.00	95
	1.5+1.5+2.0+2.5+7.1	0.92	0.92	1.23	1.54	4.38	3.67	9.00	10.61	0.59	2.25	3.11	2.80	10.30	14.30	95
	1.5+1.5+2.0+3.5+3.5	1.13	1.13	1.50	2.63	2.63	3.14	9.00	10.10	0.56	2.26	2.84	2.57	10.40	13.00	95
	1.5+1.5+2.0+3.5+4.2	1.06	1.06	1.42	2.48	2.98	3.24	9.00	10.22	0.60	2.26	2.90	2.74	10.40	13.40	95
	1.5+1.5+2.0+3.5+5.0	1.00	1.00	1.33	2.33	3.33	3.48	9.00	10.40	0.56	2.25	2.98	2.60	10.30	13.70	95
	1.5+1.5+2.0+3.5+6.0	0.93	0.93	1.24	2.17	3.72	3.67	9.00	10.62	0.59	2.25	3.11	2.80	10.30	14.30	95
	1.5+1.5+2.0+3.5+7.1	0.87	0.87	1.15	2.02	4.10	3.67	9.00	10.73	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+1.5+2.0+4.2+4.2	1.01	1.01	1.34	2.82	2.82	3.46	9.00	10.22	0.56	2.26	2.90	2.70	10.40	13.40	95
	1.5+1.5+2.0+4.2+5.0	0.95	0.95	1.27	2.66	3.17	3.48	9.00	10.40	0.56	2.25	2.98	2.60	10.30	13.70	95
	1.5+1.5+2.0+4.2+6.0	0.89	0.89	1.18	2.49	3.55	3.67	9.00	10.73	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+1.5+2.0+5.0+5.0	0.90	0.90	1.20	3.00	3.00	3.69	9.00	10.66	0.59	2.21	3.12	2.80	10.20	14.30	95
	1.5+1.5+2.5+2.5+2.5	1.24	1.24	2.07	2.07	2.07	2.92	8.70	9.50	0.53	2.14	2.51	2.44	9.80	11.60	95
	1.5+1.5+2.5+2.5+3.5	1.17	1.17	1.96	1.96	2.74	3.07	9.00	9.87	0.56	2.26	2.71	2.57	10.40	12.50	95
	1.5+1.5+2.5+2.5+4.2	1.11	1.11	1.84	1.84	3.10	3.17	9.00	10.09	0.60	2.26	2.84	2.74	10.40	13.00	95
	1.5+1.5+2.5+2.5+5.0	1.04	1.04	1.73	1.73	3.46	3.29	9.00	10.39	0.60	2.25	2.98	2.74	10.30	13.70	95
	1.5+1.5+2.5+2.5+6.0	0.96	0.96	1.61	1.61	3.86	3.48	9.00	10.61	0.56	2.25	3.11	2.60	10.30	14.30	95
	1.5+1.5+2.5+2.5+7.1	0.89	0.89	1.49	1.49	4.23	3.67	9.00	10.72	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+1.5+2.5+3.5+3.5	1.08	1.08	1.80	2.52	2.52	3.21	9.00	10.22	0.60	2.26	2.90	2.74	10.40	13.40	95
	1.5+1.5+2.5+3.5+4.2	1.02	1.02	1.70	2.39	2.86	3.46	9.00	10.22	0.56	2.26	2.90	2.70	10.40	13.40	95
	1.5+1.5+2.5+3.5+5.0	0.96	0.96	1.61	2.25	3.21	3.48	9.00	10.40	0.56	2.25	2.98	2.60	10.30	13.70	95
	1.5+1.5+2.5+3.5+6.0	0.90	0.90	1.50	2.10	3.60	3.67	9.00	10.73	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+1.5+2.5+4.2+4.2	0.97	0.97	1.62	2.72	2.72	3.47	9.00	10.23	0.56	2.26	2.90	2.70	10.40	13.40	95
	1.5+1.5+2.5+4.2+5.0	0.92	0.92	1.53	2.57	3.06	3.67	9.00	10.72	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+1.5+2.5+5.0+5.0	0.87	0.87	1.45	2.90	2.90	3.69	9.00	10.77	0.59	2.21	3.19	2.80	10.20	14.60	95
	1.5+1.5+3.5+3.5+3.5	1.00	1.00	2.33	2.33	2.33	3.47	9.00	10.24	0.56	2.26	2.91	2.70	10.40	13.40	95
	1.5+1.5+3.5+3.5+4.2	0.95	0.95	2.22	2.22	2.66	3.47	9.00	10.24	0.56	2.26	2.91	2.70	10.40	13.40	95
	1.5+1.5+3.5+3.5+5.0	0.90	0.90	2.10	2.10	3.00	3.67	9.00	10.73	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+1.5+3.5+4.2+4.2	0.91	0.91	2.11	2.54	2.54	3.65	9.00	10.67	0.60	2.26	3.18	2.80	10.40	14.60	95
	1.5+2.0+2.0+2.0+2.0	1.26	1.68	1.68	1.68	1.68	2.77	8.00	8.99	0.53	1.85	2.27	2.44	8.50	10.40	95
	1.5+2.0+2.0+2.0+2.5	1.28	1.70	1.70	1.70	2.13	2.85	8.50	9.25	0.53	2.06	2.39	2.44	9.50	11.00	95
	1.5+2.0+2.0+2.0+3.5	1.23	1.64	1.64	1.64	2.86	2.99	9.00	9.74	0.56	2.26	2.64	2.57	10.40	12.10	95
	1.5+2.0+2.0+2.0+4.2	1.15	1.54	1.54	1.54	3.23	3.10	9.00	9.97	0.56	2.26	2.77	2.57	10.40	12.70	95
	1.5+2.0+2.0+2.0+5.0	1.08	1.44	1.44	1.44	3.60	3.21	9.00	10.27	0.60	2.25	2.91	2.74	10.40	13.40	95
	1.5+2.0+2.0+2.0+6.0	1.00	1.33	1.33	1.33	4.00	3.48	9.00	10.49	0.56	2.25	3.04	2.60	10.30	14.00	95
	1.5+2.0+2.0+2.0+7.1	0.92	1.23	1.23	1.23	4.38	3.67	9.00	10.71	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+2.0+2.0+2.5+2.5	1.24	1.66	1.66	2.07	2.07	2.92	8.70	9.49	0.53	2.14	2.51	2.44	9.80	11.60	95
	1.5+2.0+2.0+2.5+3.5	1.17	1.57	1.57	1.96	2.74	3.07	9.00	9.86	0.56	2.26	2.70	2.57	10.40	12.50	95
	1.5+2.0+2.0+2.5+4.2	1.11	1.48	1.48	1.84	3.10	3.17	9.00	10.09	0.60	2.26	2.84	2.74	10.40	13.00	95
	1.5+2.0+2.0+2.5+5.0	1.04	1.38	1.38	1.73	3.46	3.29	9.00	10.38	0.60	2.25	2.98	2.74	10.40	13.70	95
	1.5+2.0+2.0+2.5+6.0	0.96	1.29	1.29	1.61	3.86	3.48	9.00	10.61	0.56	2.25	3.11	2.60	10.30	14.30	95
	1.5+2.0+2.0+2.5+7.1	0.89	1.19	1.19	1.49	4.23	3.67	9.00	10.72	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+2.0+2.0+3.5+3.5	1.08	1.44	1.44	2.52	2.52	3.21	9.00	10.21	0.60	2.26	2.90	2.74	10.40	13.40	95
	1.5+2.0+2.0+3.5+4.2	1.02	1.36	1.36	2.39	2.86	3.46	9.00	10.22	0.56	2.26	2.90	2.70	10.40	13.40	95
	1.5+2.0+2.0+3.5+5.0	0.96	1.29	1.29	2.25	3.21	3.48	9.00	10.40	0.56	2.25	2.98	2.60	10.30	13.70	95
	1.5+2.0+2.0+3.5+6.0	0.90	1.20	1.20	2.10	3.60	3.67	9.00	10.72	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+2.0+2.0+4.2+4.2	0.97	1.29	1.29	2.72	2.72	3.46	9.00	10.22	0.56	2.26	2.90	2.70	10.40	13.40	95
	1.5+2.0+2.0+4.2+5.0	0.92	1.22	1.22	2.57	3.06	3.67	9.00	10.72	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+2.0+2.0+5.0+5.0	0.87	1.16	1.16	2.90	2.90	3.69	9.00	10.77	0.59	2.21	3.19	2.80	10.20	14.60	95
	1.5+2.0+2.5+2.5+2.5	1.23	1.64	2.05	2.05	2.05	2.99	9.00	9.73	0.56	2.27	2.64	2.57	10.40	12.10	95
	1.5+2.0+2.5+2.5+3.5	1.13	1.50	1.88	1.88	2.63	3.14	9.00	10.09	0.56	2.26	2.84	2.57	10.40	13.00	95
	1.5+2.0+2.5+2.5+4.2	1.06	1.42	1.77	1.77	2.98	3.24	9.00	10.20	0.60	2.26	2.90	2.74	10.40	13.40	95
	1.5+2.0+2.5+2.5+5.0	1.00	1.33	1.67	1.67	3.33	3.48	9.00	10.39	0.56	2.25	2.98	2.60	10.30	13.70	95
	1.5+2.0+2.5+2.5+6.0	0.93	1.24	1.55	1.55	3.72	3.67	9.00	10.61	0.59	2.25	3.11	2.80	10.30	14.30	95
	1.5+2.0+2.5+2.5+7.1	0.87	1.15	1.44	1.44	4.10	3.67	9.00	10.72	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+2.0+2.5+3.5+3.5	1.04	1.38	1.73	2.42	2.42	3.46	9.00	10.22	0.56	2.26	2.90	2.70	10.40	13.40	95
	1.5+2.0+2.5+3.5+4.2	0.99	1.31	1.64	2.30	2.76	3.46	9.00	10.22	0.56	2.26	2.90	2.70	10.40	13.40	95
	1.5+2.0+2.5+3.5+5.0	0.93	1.24	1.55	2.17	3.10	3.67	9.00	10.40	0.59	2.25	2.98	2.80	10.30	13.70	95
	1.5+2.0+2.5+3.5+6.0	0.87	1.16	1.45	2.03	3.48	3.67	9.00	10.73	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+2.0+2.5+4.2+4.2	0.94	1.25	1.56	2.63	2.63	3.65	9.00	10.23	0.60	2.26	2.90	2.80	10.40	13.40	95
	1.5+2.0+2.5+4.2+5.0	0.89	1.18	1.48	2.49	2.96	3.67	9.00	10.72	0.59	2.25	3.18	2.80	10.30	14.60	95
	1.5+2.0+3.5+3.5+3.5	0.96	1.29	2.25	2.25	2.25	3.47	9.00	10.24	0.56	2.26	2.91	2.70	10.40	13.40	95
	1.5+2.0+3.5+3.5+4.2	0.92	1.22	2.14	2.14	2.57	3.65	9.00	10.67	0.60	2.26	3.18	2.80	10.40	14.60	95
	1.5+2.0+3.5+3.5+5.0	0.87	1.16	2.03	2.03	2.90	3.67	9.00	10.73	0.59	2.2					

4 Combination table

4 - 1 Combination Table

5MXM-A9

Cooling · 230V 50Hz

Outdoor unit	Indoor unit	Cooling capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room · A·	Room · B·	Room · C·	Room · D·	Room · E·	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V1B 5MXM90N2V1B 5MXM90N2V1B9 5MXM90A2V1B 5MXM90A2V1B9	2.0+2.0+2.0+2.5+3.5	1,50	1,50	1,50	1,88	2,63	3,14	9,00	10,08	0,56	2,26	2,84	2,57	10,40	13,00	95
	2.0+2.0+2.0+2.5+4.2	1,42	1,42	1,42	1,77	2,98	3,24	9,00	10,20	0,60	2,26	2,90	2,74	10,40	13,40	95
	2.0+2.0+2.0+2.5+5.0	1,33	1,33	1,33	1,67	3,33	3,48	9,00	10,38	0,56	2,25	2,98	2,60	10,40	13,70	95
	2.0+2.0+2.0+2.5+6.0	1,24	1,24	1,24	1,55	3,72	3,67	9,00	10,61	0,59	2,25	3,11	2,80	10,30	14,30	95
	2.0+2.0+2.0+2.5+7.1	1,15	1,15	1,15	1,44	4,10	3,67	9,00	10,72	0,59	2,25	3,18	2,80	10,30	14,60	95
	2.0+2.0+2.0+3.5+3.5	1,38	1,38	1,38	2,42	2,42	2,99	9,00	9,65	0,56	2,26	2,58	2,57	10,40	11,90	95
	2.0+2.0+2.0+3.5+4.2	1,31	1,31	1,31	2,30	2,76	3,46	9,00	10,22	0,56	2,26	2,90	2,70	10,40	13,40	95
	2.0+2.0+2.0+3.5+5.0	1,24	1,24	1,24	2,17	3,10	3,67	9,00	10,40	0,59	2,25	2,98	2,80	10,30	13,70	95
	2.0+2.0+2.0+3.5+6.0	1,16	1,16	1,16	2,03	3,48	3,67	9,00	10,72	0,59	2,25	3,18	2,80	10,30	14,60	95
	2.0+2.0+2.0+4.2+4.2	1,25	1,25	1,25	2,63	2,63	3,65	9,00	10,22	0,60	2,26	2,90	2,80	10,40	13,40	95
	2.0+2.0+2.0+4.2+5.0	1,18	1,18	1,18	2,49	2,96	3,67	9,00	10,72	0,59	2,25	3,18	2,80	10,30	14,60	95
	2.0+2.0+2.5+2.5+2.5	1,57	1,57	1,96	1,96	1,96	3,07	9,00	9,85	0,56	2,27	2,70	2,57	10,40	12,50	95
	2.0+2.0+2.5+2.5+3.5	1,44	1,44	1,80	1,80	2,52	3,21	9,00	10,20	0,60	2,26	2,90	2,74	10,40	13,40	95
	2.0+2.0+2.5+2.5+4.2	1,36	1,36	1,70	1,70	2,86	3,46	9,00	10,25	0,56	2,26	2,81	2,70	10,40	12,86	95
	2.0+2.0+2.5+2.5+5.0	1,29	1,29	1,61	1,61	3,21	3,48	9,00	10,39	0,56	2,25	2,98	2,60	10,30	13,70	95
	2.0+2.0+2.5+2.5+6.0	1,20	1,20	1,50	1,50	3,60	3,67	9,00	10,71	0,59	2,25	3,18	2,80	10,30	14,60	95
	2.0+2.0+2.5+3.5+3.5	1,33	1,33	1,67	2,33	2,33	3,46	9,00	10,22	0,56	2,26	2,90	2,70	10,40	13,40	95
	2.0+2.0+2.5+3.5+4.2	1,27	1,27	1,58	2,22	2,66	3,46	9,00	10,32	0,56	2,26	2,83	2,70	10,40	12,93	95
	2.0+2.0+2.5+3.5+5.0	1,20	1,20	1,50	2,10	3,00	3,67	9,00	10,72	0,59	2,25	3,18	2,80	10,30	14,60	95
	2.0+2.0+2.5+4.2+4.2	1,21	1,21	1,51	2,54	2,54	3,65	9,00	10,65	0,60	2,26	3,18	2,80	10,40	14,60	95
	2.0+2.0+3.5+3.5+3.5	1,24	1,24	2,17	2,17	2,17	3,65	9,00	10,24	0,60	2,26	2,91	2,80	10,40	13,40	95
	2.0+2.0+3.5+3.5+4.2	1,18	1,18	2,07	2,07	2,49	3,65	9,00	10,77	0,60	2,26	3,25	2,80	10,40	14,90	95
	2.0+2.5+2.5+2.5+2.5	1,50	1,88	1,88	1,88	1,88	3,14	9,00	10,08	0,56	2,26	2,83	2,57	10,40	13,00	95
	2.0+2.5+2.5+2.5+3.5	1,38	1,73	1,73	1,73	2,42	3,46	9,00	10,21	0,56	2,26	2,90	2,70	10,40	13,40	95
	2.0+2.5+2.5+2.5+4.2	1,31	1,64	1,64	1,64	2,76	3,46	9,00	10,21	0,56	2,26	2,90	2,70	10,40	13,40	95
	2.0+2.5+2.5+2.5+5.0	1,24	1,55	1,55	1,55	3,10	3,67	9,00	10,39	0,59	2,25	2,98	2,80	10,30	13,70	95
	2.0+2.5+2.5+2.5+6.0	1,16	1,45	1,45	1,45	3,48	3,67	9,00	10,72	0,59	2,25	3,18	2,80	10,30	14,60	95
	2.0+2.5+2.5+3.5+3.5	1,29	1,61	1,61	2,25	2,25	3,46	9,00	10,22	0,56	2,26	2,90	2,70	10,40	13,40	95
	2.0+2.5+2.5+3.5+4.2	1,22	1,53	1,53	2,14	2,57	3,65	9,00	10,65	0,60	2,26	3,18	2,80	10,40	14,60	95
	2.0+2.5+2.5+3.5+5.0	1,16	1,45	1,45	2,03	2,90	3,67	9,00	10,72	0,59	2,25	3,18	2,80	10,30	14,60	95
	2.0+2.5+2.5+4.2+4.2	1,17	1,46	1,46	2,45	2,45	3,65	9,00	10,76	0,60	2,26	3,25	2,80	10,40	14,90	95
	2.0+2.5+3.5+3.5+3.5	1,20	1,50	2,10	2,10	2,10	3,65	9,00	10,67	0,60	2,26	3,18	2,80	10,40	14,60	95
	2.5+2.5+2.5+2.5+2.5	1,80	1,80	1,80	1,80	1,80	3,21	9,00	10,19	0,60	2,26	2,90	2,74	10,40	13,40	95
	2.5+2.5+2.5+2.5+3.5	1,67	1,67	1,67	1,67	2,33	3,46	9,00	10,21	0,56	2,26	2,90	2,70	10,40	13,40	95
	2.5+2.5+2.5+2.5+4.2	1,58	1,58	1,58	1,58	2,66	3,46	9,00	10,22	0,56	2,26	2,90	2,70	10,40	13,40	95
	2.5+2.5+2.5+2.5+5.0	1,50	1,50	1,50	1,50	3,00	3,67	9,00	10,71	0,59	2,25	3,18	2,80	10,30	14,60	95
	2.5+2.5+2.5+3.5+3.5	1,55	1,55	1,55	2,17	2,17	3,65	9,00	10,23	0,60	2,26	2,90	2,80	10,40	13,40	95
	2.5+2.5+2.5+3.5+4.2	1,48	1,48	1,48	2,07	2,49	3,65	9,00	10,76	0,60	2,26	3,25	2,80	10,40	14,90	95
	2.5+2.5+3.5+3.5+3.5	1,45	1,45	2,03	2,03	2,03	3,65	9,00	10,79	0,60	2,25	3,21	2,80	10,40	14,71	95

Notes

- 1) The total capacity of each connected indoor unit is up to ·15.6·kW.
- 2) The values mentioned in this document are for connecting with the following indoor unit types:
·1.5, 2.0, 2.5, 3.5, 4.2, 5.0, 6.0, 7.1· kW class
Wall-mounted ·CTXA-AS, CTXA-AT, CTXA-AW, CTXA-BB, CTXA-BS, CTXA-BT, CTXM-M, CTXM-N, CTXM-R, FTXA-AS, FTXA-AT, FTXA-AW, FTXA-BB, FTXA-BS, FTXA-BT, FTXM-M, FTXM-N, FTXM-R, FTXJ-AB, FTXJ-AS, FTXJ-AW· series
- 3) Cooling capacity conditions
Indoor temperature ·27·°C DB / ·19·°C WB
Outdoor temperature ·35·°C DB
- 4) For additional information on the connection of the DHW generator for Multi and the Hybrid for Multi, see ·3D106169·.

4D139816B

4 Combination table

4 - 1 Combination Table

5MXM-A9

Heating ·230V 50Hz·

Outdoor unit	Indoor unit	Heating capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room -A-	Room -B-	Room -C-	Room -D-	Room -E-	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V1B 5MXM90N2V1B 5MXM90N2V1B9 5MXM90A2V1B 5MXM90A2V1B9	1.5	2,70	-	-	-	-	1,28	2,70	4,16	0,28	0,44	0,84	1,29	2,04	3,90	95
	2.0	3,00	-	-	-	-	1,33	3,00	4,46	0,34	0,49	0,93	1,55	2,26	4,30	95
	2.5	3,40	-	-	-	-	1,39	3,40	4,91	0,36	0,60	1,07	1,64	2,75	5,00	95
	3.5	4,36	-	-	-	-	1,51	4,36	5,35	0,38	0,90	1,23	1,73	4,20	5,70	95
	4.2	5,23	-	-	-	-	1,56	5,23	6,20	0,40	1,18	1,52	1,82	5,40	7,10	95
	5.0	6,21	-	-	-	-	1,94	6,21	7,85	0,47	1,46	2,12	2,13	6,70	9,80	95
	6.0	7,46	-	-	-	-	2,23	7,46	9,12	0,58	1,96	2,75	2,66	9,00	12,70	95
	7.1	8,82	-	-	-	-	2,55	8,82	9,49	0,65	2,59	2,94	2,97	11,90	13,60	95
	1.5+1.5	1,85	1,85	-	-	-	1,51	3,70	7,47	0,37	0,67	1,83	1,68	3,10	8,40	95
	1.5+2.0	1,84	2,46	-	-	-	1,57	4,30	7,89	0,35	0,82	1,99	1,59	3,80	9,20	95
	1.5+2.5	1,84	3,06	-	-	-	1,72	4,90	8,03	0,37	0,99	2,03	1,68	4,60	9,40	95
	1.5+3.5	1,83	4,27	-	-	-	2,02	6,10	8,69	0,44	1,36	2,33	2,02	6,30	10,70	95
	1.5+4.2	1,84	5,16	-	-	-	2,23	7,00	8,98	0,42	1,64	2,39	1,94	7,50	11,00	95
	1.5+5.0	1,85	6,15	-	-	-	2,48	8,00	10,48	0,44	1,91	2,91	2,02	8,80	13,40	95
	1.5+6.0	1,80	7,20	-	-	-	2,87	9,00	10,74	0,46	2,29	3,03	2,20	10,50	13,90	95
	1.5+7.1	1,74	8,26	-	-	-	3,20	10,00	10,75	0,53	2,73	3,01	2,50	12,50	13,80	95
	2.0+2.0	2,45	2,45	-	-	-	1,72	4,90	8,03	0,37	0,99	2,03	1,68	4,60	9,40	95
	2.0+2.5	2,44	3,06	-	-	-	1,88	5,50	8,30	0,39	1,16	2,14	1,76	5,40	9,80	95
	2.0+3.5	2,44	4,26	-	-	-	2,17	6,70	8,83	0,47	1,56	2,38	2,15	7,20	10,90	95
	2.0+4.2	2,45	5,15	-	-	-	2,39	7,60	9,11	0,58	1,85	2,44	2,67	8,50	11,30	95
	2.0+5.0	2,43	6,07	-	-	-	2,71	8,50	10,74	0,43	2,10	3,03	2,10	9,70	13,90	95
	2.0+6.0	2,33	6,98	-	-	-	3,04	9,30	10,87	0,49	2,40	3,08	2,30	11,00	14,10	95
	2.0+7.1	2,20	7,80	-	-	-	3,36	10,00	11,01	0,56	2,71	3,12	2,60	12,50	14,40	95
	2.5+2.5	3,05	3,05	-	-	-	2,02	6,10	8,57	0,44	1,35	2,25	2,02	6,20	10,30	95
	2.5+3.5	3,04	4,26	-	-	-	2,33	7,30	9,22	0,56	1,77	2,55	2,58	8,10	11,70	95
	2.5+4.2	3,06	5,14	-	-	-	2,54	8,20	9,51	0,61	2,10	2,62	2,80	9,70	12,00	95
	2.5+5.0	3,00	6,00	-	-	-	2,87	9,00	10,74	0,46	2,28	3,02	2,20	10,50	13,90	95
	2.5+6.0	2,82	6,78	-	-	-	3,20	9,60	11,01	0,53	2,54	3,13	2,50	11,70	14,40	95
	2.5+7.1	2,60	7,40	-	-	-	3,52	10,00	11,27	0,59	2,70	3,24	2,80	12,40	14,90	95
	3.5+3.5	4,25	4,25	-	-	-	2,76	8,50	9,60	0,45	2,27	2,74	2,10	10,50	12,60	95
	3.5+4.2	4,09	4,91	-	-	-	2,91	9,00	10,26	0,48	2,45	3,00	2,20	11,30	13,80	95
	3.5+5.0	3,91	5,59	-	-	-	3,20	9,50	11,00	0,53	2,50	3,14	2,50	11,50	14,50	95
	3.5+6.0	3,68	6,32	-	-	-	3,36	10,00	11,25	0,56	2,72	3,26	2,60	12,50	15,00	95
	3.5+7.1	3,30	6,70	-	-	-	3,68	10,00	11,27	0,62	2,70	3,24	2,90	12,40	14,90	95
	4.2+4.2	4,75	4,75	-	-	-	3,06	9,50	10,05	0,50	2,60	2,81	2,40	12,00	12,90	95
	4.2+5.0	4,57	5,43	-	-	-	3,35	10,00	11,04	0,55	2,67	3,08	2,60	12,30	14,10	95
	4.2+6.0	4,12	5,88	-	-	-	3,68	10,00	11,30	0,62	2,63	3,19	2,90	12,10	14,60	95
	4.2+7.1	3,72	6,28	-	-	-	4,00	10,00	11,31	0,68	2,61	3,17	3,20	12,00	14,60	95
	5.0+5.0	5,00	5,00	-	-	-	3,65	10,00	11,13	0,60	2,49	2,91	2,80	11,50	13,40	95
	5.0+6.0	4,55	5,45	-	-	-	3,81	10,00	11,40	0,63	2,48	3,02	2,90	11,40	13,90	95
	5.0+7.1	4,13	5,87	-	-	-	4,13	10,00	11,41	0,69	2,47	3,00	3,30	11,30	13,80	95
	6.0+6.0	5,00	5,00	-	-	-	4,13	10,00	11,14	0,69	2,47	2,89	3,30	11,30	13,30	95
	6.0+7.1	4,58	5,42	-	-	-	4,45	10,00	11,28	0,76	2,45	2,93	3,50	11,30	13,50	95
	7.1+7.1	5,00	5,00	-	-	-	4,76	10,00	11,29	0,82	2,44	2,91	3,80	11,20	13,40	95
	1.5+1.5+1.5	1,83	1,83	1,83	-	-	1,88	5,50	10,04	0,44	1,05	2,52	2,02	4,80	11,60	95
	1.5+1.5+2.0	1,83	1,83	2,44	-	-	2,02	6,10	10,18	0,46	1,20	2,56	2,11	5,60	11,80	95
	1.5+1.5+2.5	1,83	1,83	3,05	-	-	2,17	6,70	10,31	0,48	1,37	2,61	2,19	6,30	12,00	95
	1.5+1.5+3.5	1,85	1,85	4,31	-	-	2,48	8,00	10,45	0,52	1,78	2,67	2,37	8,20	12,30	95
	1.5+1.5+4.2	1,81	1,81	5,08	-	-	2,83	8,70	10,47	0,45	1,99	2,61	2,10	9,20	12,00	95
	1.5+1.5+5.0	1,74	1,74	5,81	-	-	2,97	9,30	10,53	0,47	2,10	2,49	2,20	9,70	11,40	95
	1.5+1.5+6.0	1,58	1,58	6,33	-	-	3,29	9,50	11,21	0,52	2,15	2,75	2,50	9,90	12,60	95
	1.5+1.5+7.1	1,49	1,49	7,03	-	-	3,62	10,00	11,21	0,58	2,33	2,73	2,70	10,70	12,60	95
	1.5+2.0+2.0	1,83	2,44	2,44	-	-	2,17	6,70	10,31	0,48	1,37	2,61	2,19	6,30	12,00	95
	1.5+2.0+2.5	1,83	2,43	3,04	-	-	2,33	7,30	10,45	0,50	1,55	2,66	2,28	7,10	12,20	95
	1.5+2.0+3.5	1,82	2,43	4,25	-	-	2,67	8,50	10,58	0,42	1,94	2,71	2,00	8,90	12,50	95
	1.5+2.0+4.2	1,75	2,34	4,91	-	-	2,99	9,00	10,61	0,48	2,09	2,66	2,20	9,60	12,30	95
	1.5+2.0+5.0	1,76	2,35	5,88	-	-	3,13	10,00	10,94	0,49	2,35	2,64	2,30	10,80	12,20	95
	1.5+2.0+6.0	1,58	2,11	6,32	-	-	3,46	10,00	11,21	0,55	2,33	2,74	2,60	10,70	12,60	95
	1.5+2.0+7.1	1,42	1,89	6,70	-	-	3,78	10,00	11,22	0,61	2,32	2,73	2,80	10,70	12,50	95
	1.5+2.5+2.5	1,85	3,08	3,08	-	-	2,48	8,00	10,59	0,52	1,77	2,70	2,37	8,20	12,50	95
1.5+2.5+3.5	1,80	3,00	4,20	-	-	2,83	9,00	10,72	0,45	2,13	2,76	2,10	9,80	12,70	95	
1.5+2.5+4.2	1,83	3,05	5,12	-	-	2,99	10,00	10,75	0,47	2,46	2,71	2,20	11,30	12,50	95	
1.5+2.5+5.0	1,67	2,78	5,56	-	-	3,29	10,00	11,08	0,52	2,34	2,69	2,50	10,70	12,40	95	
1.5+2.5+6.0	1,50	2,50	6,00	-	-	3,62	10,00	11,22	0,58	2,33	2,73	2,70	10,70	12,50	95	
1.5+2.5+7.1	1,35	2,25	6,40	-	-	3,94	10,00	11,22	0,64	2,31	2,72	3,00	10,60	12,50	95	
1.5+3.5+3.5	1,76	4,12	4,12	-	-	3,16	10,00	10,72	0,51	2,51	2,76	2,40	11,60	12,70	95	
1.5+3.5+4.2	1,63	3,80	4,57	-	-	3,32	10,00	10,88	0,53	2,46	2,76	2,50	11,30	12,70	95	
1.5+3.5+5.0	1,50	3,50	5,00	-	-	3,62	10,00	11,08	0,58	2,34	2,69	2,70	10,70	12,40	95	
1.5+3.5+6.0	1,36	3,18	5,45	-	-	3,78	10,00	11,22	0,61	2,33	2,73	2,80	10,70	12,50	95	
1.5+3.5+7.1	1,24	2,89	5,87	-	-	4,10	10,00	11,22	0,67	2,31	2,72	3,10	10,60	12,50	95	
1.5+4.2+4.2	1,52	4,24	4,24	-	-	3,47	10,00	10,91	0,56	2,41	2,71	2,60	11,10	12,50	95	
1.5+4.2+5.0	1,40	3,93	4,67	-	-	3,77	10,00	11,09	0,60	2,30	2,64	2,80	10,60	12,20	95	
1.5+4.2+6.0	1,28	3,59	5,13	-	-	4,10	10,00	11,37	0,66	2,29	2,74	3,10	10,50	12,60	95	
1.5+4.2+7.1	1,17	3,28	5,55	-	-	4,42	10,00	11,37	0,72	2,28	2,72	3,40	10,50	12,50	95	
1.5+5.0+5.0	1,30	4,35	4,35	-	-	4,08	10,00	11,26	0,65	2,18	2,58	3,00	10,00	11,90	95	
1.5+5.0+6.0	1,20	4,00	4,80	-	-	4,24	10,00	11,54	0,68	2,18	2,68	3,20	10,00	12,30	95	
1.5+5.0+7.1	1,10	3,68	5,22	-	-	4,56	10,00	11,54	0							

4 Combination table

4 - 1 Combination Table

5MXM-A9

Heating ·230V 50Hz·

Outdoor unit	Indoor unit	Heating capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room -A-	Room -B-	Room -C-	Room -D-	Room -E-	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V1B 5MXM90N2V1B 5MXM90N2V1B9 5MXM90A2V1B 5MXM90A2V1B9	2.0+4.2+6.0	1.64	3.44	4.92	-	-	4.26	10.00	11.37	0.69	2.28	2.73	3.30	10.50	12.50	95
	2.0+4.2+7.1	1.50	3.16	5.34	-	-	4.58	10.00	11.51	0.75	2.27	2.77	3.50	10.40	12.80	95
	2.0+5.0+5.0	1.67	4.17	4.17	-	-	4.08	10.00	11.13	0.65	2.18	2.53	3.00	10.00	11.60	95
	2.0+5.0+6.0	1.54	3.85	4.62	-	-	4.40	10.00	11.41	0.70	2.17	2.62	3.30	10.00	12.00	95
	2.0+5.0+7.1	1.42	3.55	5.04	-	-	4.72	10.00	11.41	0.76	2.16	2.61	3.60	9.90	12.00	95
	2.0+6.0+6.0	1.43	4.29	4.29	-	-	4.72	10.00	11.54	0.76	2.16	2.66	3.60	9.90	12.30	95
	2.0+6.0+7.1	1.32	3.97	4.70	-	-	5.04	10.00	11.68	0.82	2.15	2.70	3.80	9.90	12.50	95
	2.5+2.5+2.5	3.33	3.33	3.33	-	-	2.83	10.00	10.73	0.45	2.49	2.74	2.10	11.50	12.60	95
	2.5+2.5+3.5	2.94	2.94	4.12	-	-	3.16	10.00	11.00	0.51	2.49	2.86	2.40	11.50	13.10	95
	2.5+2.5+4.2	2.72	2.72	4.57	-	-	3.31	10.00	11.16	0.53	2.44	2.86	2.50	11.20	13.10	95
	2.5+2.5+5.0	2.50	2.50	5.00	-	-	3.62	10.00	11.35	0.58	2.32	2.78	2.70	10.70	12.80	95
	2.5+2.5+6.0	2.27	2.27	5.45	-	-	3.78	10.00	11.36	0.61	2.31	2.77	2.80	10.60	12.70	95
	2.5+2.5+7.1	2.07	2.07	5.87	-	-	4.10	10.00	11.50	0.66	2.30	2.81	3.10	10.60	12.90	95
	2.5+3.5+3.5	2.63	3.68	3.68	-	-	3.49	10.00	11.26	0.57	2.49	2.97	2.70	11.50	13.70	95
	2.5+3.5+4.2	2.45	3.43	4.12	-	-	3.64	10.00	11.29	0.59	2.44	2.92	2.80	11.20	13.40	95
	2.5+3.5+5.0	2.27	3.18	4.55	-	-	3.78	10.00	11.35	0.61	2.32	2.78	2.80	10.70	12.80	95
	2.5+3.5+6.0	2.08	2.92	5.00	-	-	4.10	10.00	11.36	0.67	2.31	2.77	3.10	10.60	12.70	95
	2.5+3.5+7.1	1.91	2.67	5.42	-	-	4.42	10.00	11.50	0.73	2.30	2.81	3.40	10.60	12.90	95
	2.5+4.2+4.2	2.29	3.85	3.85	-	-	3.79	10.00	11.31	0.62	2.40	2.86	2.90	11.00	13.20	95
	2.5+4.2+5.0	2.14	3.59	4.27	-	-	4.10	10.00	11.37	0.66	2.28	2.73	3.10	10.50	12.60	95
	2.5+4.2+6.0	1.97	3.31	4.72	-	-	4.42	10.00	11.38	0.72	2.27	2.72	3.40	10.40	12.50	95
	2.5+4.2+7.1	1.81	3.04	5.14	-	-	4.73	10.00	11.52	0.78	2.26	2.76	3.70	10.40	12.70	95
	2.5+5.0+5.0	2.00	4.00	4.00	-	-	4.24	10.00	11.13	0.67	2.17	2.52	3.20	10.00	11.60	95
	2.5+5.0+6.0	1.85	3.70	4.44	-	-	4.56	10.00	11.41	0.73	2.16	2.61	3.40	10.00	12.00	95
	2.5+5.0+7.1	1.71	3.42	4.86	-	-	4.88	10.00	11.41	0.79	2.16	2.60	3.70	9.90	12.00	95
	2.5+6.0+6.0	1.72	4.14	4.14	-	-	4.88	10.00	11.55	0.79	2.16	2.65	3.70	9.90	12.20	95
	2.5+6.0+7.1	1.60	3.85	4.55	-	-	5.19	10.00	11.68	0.85	2.15	2.70	4.00	9.90	12.40	95
	3.5+3.5+3.5	3.33	3.33	3.33	-	-	3.65	10.00	11.26	0.60	2.49	2.97	2.80	11.50	13.70	95
	3.5+3.5+4.2	3.13	3.13	3.75	-	-	3.96	10.00	11.29	0.66	2.44	2.92	3.10	11.20	13.40	95
	3.5+3.5+5.0	2.92	2.92	4.17	-	-	4.10	10.00	11.35	0.67	2.32	2.78	3.10	10.70	12.80	95
	3.5+3.5+6.0	2.69	2.69	4.62	-	-	4.42	10.00	11.49	0.73	2.31	2.82	3.40	10.60	13.00	95
	3.5+3.5+7.1	2.48	2.48	5.04	-	-	4.74	10.00	11.50	0.79	2.30	2.81	3.70	10.60	12.90	95
	3.5+4.2+4.2	2.94	3.53	3.53	-	-	4.12	10.00	11.31	0.68	2.40	2.86	3.20	11.00	13.20	95
	3.5+4.2+5.0	2.76	3.31	3.94	-	-	4.42	10.00	11.36	0.72	2.28	2.71	3.40	10.50	12.39	95
	3.5+4.2+6.0	2.55	3.07	4.38	-	-	4.58	10.00	11.38	0.75	2.27	2.72	3.50	10.40	12.50	95
	3.5+4.2+7.1	2.36	2.84	4.80	-	-	4.89	10.00	11.38	0.81	2.26	2.71	3.80	10.40	12.50	95
	3.5+5.0+5.0	2.59	3.70	3.70	-	-	4.56	10.00	11.13	0.73	2.17	2.52	3.40	10.00	11.60	95
	3.5+5.0+6.0	2.41	3.45	4.14	-	-	4.88	10.00	11.41	0.80	2.16	2.61	3.70	10.00	12.00	95
	3.5+5.0+7.1	2.24	3.21	4.55	-	-	5.20	10.00	11.41	0.86	2.16	2.60	4.00	9.90	12.00	95
	3.5+6.0+6.0	2.26	3.87	3.87	-	-	5.20	10.00	11.55	0.86	2.16	2.65	4.00	9.90	12.20	95
	4.2+4.2+4.2	3.33	3.33	3.33	-	-	4.27	10.00	11.34	0.70	2.35	2.81	3.30	10.80	13.00	95
	4.2+4.2+5.0	3.13	3.13	3.73	-	-	4.57	10.00	11.37	0.75	2.23	2.66	3.50	10.20	12.19	95
	4.2+4.2+6.0	2.92	2.92	4.17	-	-	4.89	10.00	11.39	0.81	2.22	2.68	3.80	10.20	12.30	95
	4.2+4.2+7.1	2.71	2.71	4.58	-	-	5.21	10.00	11.39	0.87	2.21	2.67	4.10	10.20	12.30	95
	4.2+5.0+5.0	2.96	3.52	3.52	-	-	4.71	10.00	11.14	0.76	2.14	2.48	3.50	9.90	11.40	95
	4.2+5.0+6.0	2.76	3.29	3.95	-	-	5.03	10.00	11.41	0.82	2.14	2.58	3.80	9.80	11.90	95
	5.0+5.0+5.0	3.33	3.33	3.33	-	-	5.02	10.00	11.28	0.80	2.08	2.45	3.80	9.60	11.30	95
	1.5+1.5+1.5+1.5	1.83	1.83	1.83	1.83	-	2.33	7.30	10.14	0.43	1.40	2.23	1.98	6.50	10.30	95
	1.5+1.5+1.5+2.0	1.85	1.85	1.85	2.46	-	2.61	8.00	10.42	0.40	1.60	2.32	1.90	7.40	10.70	95
	1.5+1.5+1.5+2.5	1.82	1.82	1.82	3.04	-	2.77	8.50	10.43	0.43	1.73	2.31	2.00	8.00	10.70	95
	1.5+1.5+1.5+3.5	1.74	1.74	1.74	4.07	-	2.94	9.30	10.71	0.45	1.99	2.41	2.20	9.20	11.10	95
	1.5+1.5+1.5+4.2	1.72	1.72	1.72	4.83	-	3.26	10.00	11.27	0.50	2.18	2.58	2.40	10.00	11.90	95
	1.5+1.5+1.5+5.0	1.58	1.58	1.58	5.26	-	3.41	10.00	11.42	0.52	2.10	2.54	2.50	9.70	11.70	95
	1.5+1.5+1.5+6.0	1.43	1.43	1.43	5.71	-	3.73	10.00	11.55	0.58	2.10	2.58	2.70	9.70	11.90	95
	1.5+1.5+1.5+7.1	1.29	1.29	1.29	6.12	-	4.06	10.00	11.69	0.63	2.09	2.62	3.00	9.60	12.10	95
	1.5+1.5+2.0+2.0	1.82	1.82	2.43	2.43	-	2.77	8.50	10.57	0.43	1.73	2.36	2.00	8.00	10.90	95
	1.5+1.5+2.0+2.5	1.80	1.80	2.40	3.00	-	2.94	9.00	10.71	0.45	1.87	2.40	2.20	8.60	11.10	95
	1.5+1.5+2.0+3.5	1.76	1.76	2.35	4.12	-	3.10	10.00	10.71	0.48	2.20	2.40	2.30	10.10	11.10	95
	1.5+1.5+2.0+4.2	1.63	1.63	2.17	4.57	-	3.42	10.00	11.27	0.53	2.17	2.57	2.50	10.00	11.80	95
	1.5+1.5+2.0+5.0	1.50	1.50	2.00	5.00	-	3.57	10.00	11.42	0.55	2.10	2.53	2.60	9.70	11.70	95
	1.5+1.5+2.0+6.0	1.36	1.36	1.82	5.45	-	3.89	10.00	11.55	0.60	2.09	2.57	2.80	9.60	11.90	95
	1.5+1.5+2.0+7.1	1.24	1.24	1.65	5.87	-	4.22	10.00	11.69	0.66	2.09	2.61	3.10	9.60	12.00	95
	1.5+1.5+2.5+2.5	1.88	1.88	3.13	3.13	-	2.93	10.00	10.71	0.45	2.20	2.40	2.20	10.10	11.00	95
	1.5+1.5+2.5+3.5	1.67	1.67	2.78	3.89	-	3.26	10.00	11.26	0.51	2.20	2.60	2.40	10.10	11.90	95
	1.5+1.5+2.5+4.2	1.55	1.55	2.58	4.33	-	3.42	10.00	11.27	0.53	2.16	2.56	2.50	10.00	11.80	95
	1.5+1.5+2.5+5.0	1.43	1.43	2.38	4.76	-	3.73	10.00	11.42	0.58	2.10	2.53	2.70	9.60	11.60	95
	1.5+1.5+2.5+6.0	1.30	1.30	2.17	5.22	-	4.06	10.00	11.55	0.63	2.09	2.57	3.00	9.60	11.80	95
	1.5+1.5+2.5+7.1	1.19	1.19	1.98	5.63	-	4.38	10.00	11.69	0.69	2.08	2.61	3.20	9.60	12.00	95
	1.5+1.5+3.5+3.5	1.50	1.50	3.50	3.50	-	3.59	10.00	11.26	0.56	2.20	2.60	2.70	10.10	11.90	95
	1.5+1.5+3.5+4.2	1.40	1.40	3.27	3.93	-	3.75	10.00	11.27	0.59	2.16	2.56	2.80	10.00	11.80	95
	1.5+1.5+3.5+5.0	1.30	1.30	3.04	4.35	-	4.06	10.00	11.42	0.63	2.10	2.53	3.00	9.60	11.60	95
	1.5+1.5+3.5+6.0	1.20	1.20	2.80	4.80	-	4.22	10.00	11.55	0.66	2.09	2.57.				

4 Combination table

4 - 1 Combination Table

5MXM-A9

Heating ·230V 50Hz·

Outdoor unit	Indoor unit	Heating capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room -A-	Room -B-	Room -C-	Room -D-	Room -E-	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V18 5MXM90N2V18 5MXM90N2V189 5MXM90A2V18 5MXM90A2V189	1.5+2.0+4.2+4.2	1,26	1,68	3,53	3,53	-	4,07	10,00	11,28	0,64	2,13	2,52	3,00	9,80	11,60	95
	1.5+2.0+4.2+5.0	1,18	1,57	3,31	3,94	-	4,37	10,00	11,41	0,68	2,07	2,49	3,20	9,50	11,50	95
	1.5+2.0+4.2+6.0	1,09	1,46	3,07	4,38	-	4,69	10,00	11,69	0,74	2,07	2,58	3,50	9,50	11,90	95
	1.5+2.0+4.2+7.1	1,01	1,35	2,84	4,80	-	5,01	10,00	11,71	0,80	2,06	2,58	3,70	9,50	11,82	95
	1.5+2.0+5.0+5.0	1,11	1,48	3,70	3,70	-	4,52	10,00	11,52	0,70	2,04	2,48	3,30	9,40	11,40	95
	1.5+2.0+5.0+6.0	1,03	1,38	3,45	4,14	-	4,84	10,00	11,79	0,76	2,04	2,57	3,50	9,40	11,90	95
	1.5+2.0+5.0+7.1	0,96	1,28	3,21	4,55	-	5,16	10,00	11,82	0,82	2,04	2,58	3,80	9,40	11,79	95
	1.5+2.0+6.0+6.0	0,97	1,29	3,87	3,87	-	5,16	10,00	11,93	0,82	2,04	2,62	3,80	9,40	12,00	95
	1.5+2.5+2.5+2.5	1,67	2,78	2,78	2,78	-	3,26	10,00	11,26	0,51	2,18	2,58	2,40	10,00	11,90	95
	1.5+2.5+2.5+3.5	1,50	2,50	2,50	3,50	-	3,59	10,00	11,26	0,56	2,18	2,58	2,70	10,00	11,90	95
	1.5+2.5+2.5+4.2	1,40	2,34	2,34	3,93	-	3,75	10,00	11,27	0,58	2,15	2,55	2,80	9,90	11,70	95
	1.5+2.5+2.5+5.0	1,30	2,17	2,17	4,35	-	4,05	10,00	11,41	0,63	2,09	2,51	3,00	9,60	11,60	95
	1.5+2.5+2.5+6.0	1,20	2,00	2,00	4,80	-	4,22	10,00	11,55	0,66	2,08	2,56	3,10	9,60	11,80	95
	1.5+2.5+2.5+7.1	1,10	1,84	1,84	5,22	-	4,54	10,00	11,69	0,71	2,08	2,60	3,30	9,60	11,90	95
	1.5+2.5+3.5+3.5	1,36	2,27	3,18	3,18	-	3,92	10,00	11,26	0,62	2,18	2,58	2,90	10,00	11,90	95
	1.5+2.5+3.5+4.2	1,28	2,14	2,99	3,59	-	4,07	10,00	11,27	0,64	2,15	2,55	3,00	9,90	11,70	95
	1.5+2.5+3.5+5.0	1,20	2,00	2,80	4,00	-	4,22	10,00	11,41	0,66	2,09	2,51	3,10	9,60	11,60	95
	1.5+2.5+3.5+6.0	1,11	1,85	2,59	4,44	-	4,54	10,00	11,55	0,72	2,08	2,56	3,30	9,60	11,80	95
	1.5+2.5+3.5+7.1	1,03	1,71	2,40	4,86	-	4,86	10,00	11,69	0,77	2,08	2,60	3,60	9,60	11,90	95
	1.5+2.5+4.2+4.2	1,21	2,02	3,39	3,39	-	4,23	10,00	11,28	0,67	2,13	2,52	3,10	9,80	11,60	95
	1.5+2.5+4.2+5.0	1,14	1,89	3,18	3,79	-	4,53	10,00	11,41	0,71	2,07	2,49	3,30	9,50	11,40	95
	1.5+2.5+4.2+6.0	1,06	1,76	2,96	4,23	-	4,85	10,00	11,68	0,77	2,06	2,58	3,60	9,50	11,90	95
	1.5+2.5+4.2+7.1	0,98	1,63	2,75	4,64	-	5,17	10,00	11,69	0,83	2,06	2,57	3,80	9,50	11,78	95
	1.5+2.5+5.0+5.0	1,07	1,79	3,57	3,57	-	4,48	10,00	11,52	0,69	2,04	2,48	3,16	9,40	11,40	95
	1.5+2.5+5.0+6.0	1,00	1,67	3,33	4,00	-	4,52	10,00	11,53	0,70	2,04	2,48	3,30	9,40	11,34	95
	1.5+3.5+3.5+3.5	1,25	2,92	2,92	2,92	-	4,08	10,00	11,26	0,65	2,18	2,58	3,00	10,00	11,90	95
	1.5+3.5+3.5+4.2	1,18	2,76	2,76	3,31	-	4,40	10,00	11,27	0,70	2,15	2,55	3,30	9,90	11,70	95
	1.5+3.5+3.5+5.0	1,11	2,59	2,59	3,70	-	4,54	10,00	11,41	0,72	2,09	2,51	3,30	9,60	11,60	95
	1.5+3.5+3.5+6.0	1,03	2,41	2,41	4,14	-	4,86	10,00	11,69	0,77	2,08	2,61	3,60	9,60	12,00	95
	1.5+3.5+3.5+7.1	0,96	2,24	2,24	4,55	-	5,18	10,00	11,70	0,83	2,08	2,60	3,90	9,60	11,90	95
	1.5+3.5+4.2+4.2	1,12	2,61	3,13	3,13	-	4,55	10,00	11,28	0,73	2,13	2,52	3,40	9,80	11,60	95
	1.5+3.5+4.2+5.0	1,06	2,46	2,96	3,52	-	4,86	10,00	11,41	0,77	2,07	2,49	3,60	9,50	11,40	95
	1.5+3.5+4.2+6.0	0,99	2,30	2,76	3,95	-	5,01	10,00	11,68	0,80	2,06	2,58	3,70	9,50	11,90	95
	1.5+3.5+5.0+5.0	1,00	2,33	3,33	3,33	-	5,00	10,00	11,52	0,79	2,04	2,48	3,70	9,40	11,40	95
	1.5+4.2+4.2+4.2	1,06	2,98	2,98	2,98	-	4,70	10,00	11,28	0,75	2,10	2,49	3,50	9,70	11,40	95
	1.5+4.2+4.2+5.0	1,01	2,82	2,82	3,36	-	5,01	10,00	11,40	0,80	2,07	2,47	3,70	9,50	11,40	95
	2.0+2.0+2.0+2.0	2,50	2,50	2,50	2,50	-	2,93	10,00	10,99	0,45	2,20	2,50	2,20	10,10	11,50	95
	2.0+2.0+2.0+2.5	2,35	2,35	2,35	2,94	-	3,10	10,00	10,99	0,48	2,19	2,49	2,20	10,10	11,50	95
	2.0+2.0+2.0+3.5	2,11	2,11	2,11	3,68	-	3,43	10,00	11,26	0,53	2,19	2,59	2,50	10,10	11,90	95
	2.0+2.0+2.0+4.2	1,96	1,96	1,96	4,12	-	3,58	10,00	11,27	0,56	2,16	2,56	2,60	9,90	11,80	95
	2.0+2.0+2.0+5.0	1,82	1,82	1,82	4,55	-	3,89	10,00	11,42	0,60	2,09	2,52	2,80	9,60	11,60	95
	2.0+2.0+2.0+6.0	1,67	1,67	1,67	5,00	-	4,22	10,00	11,55	0,66	2,09	2,56	3,10	9,60	11,80	95
	2.0+2.0+2.0+7.1	1,53	1,53	1,53	5,42	-	4,54	10,00	11,69	0,71	2,08	2,60	3,30	9,60	12,00	95
	2.0+2.0+2.5+2.5	2,22	2,22	2,78	2,78	-	3,26	10,00	11,26	0,51	2,18	2,59	2,40	10,00	11,90	95
	2.0+2.0+2.5+3.5	2,00	2,00	2,50	3,50	-	3,59	10,00	11,26	0,56	2,18	2,59	2,70	10,00	11,90	95
	2.0+2.0+2.5+4.2	1,87	1,87	2,34	3,93	-	3,75	10,00	11,27	0,58	2,15	2,55	2,80	9,90	11,70	95
	2.0+2.0+2.5+5.0	1,74	1,74	2,17	4,35	-	4,05	10,00	11,41	0,63	2,09	2,51	3,00	9,60	11,60	95
	2.0+2.0+2.5+6.0	1,60	1,60	2,00	4,80	-	4,22	10,00	11,55	0,66	2,08	2,56	3,10	9,60	11,80	95
2.0+2.0+2.5+7.1	1,47	1,47	1,84	5,22	-	4,54	10,00	11,69	0,71	2,08	2,60	3,30	9,60	11,90	95	
2.0+2.0+3.5+3.5	1,82	1,82	3,18	3,18	-	3,92	10,00	11,26	0,62	2,18	2,59	2,90	10,00	11,90	95	
2.0+2.0+3.5+4.2	1,71	1,71	2,99	3,59	-	4,07	10,00	11,27	0,64	2,15	2,55	3,00	9,90	11,70	95	
2.0+2.0+3.5+5.0	1,60	1,60	2,80	4,00	-	4,22	10,00	11,41	0,66	2,09	2,51	3,10	9,60	11,60	95	
2.0+2.0+3.5+6.0	1,48	1,48	2,59	4,44	-	4,54	10,00	11,55	0,72	2,08	2,56	3,30	9,60	11,80	95	
2.0+2.0+3.5+7.1	1,37	1,37	2,40	4,86	-	4,86	10,00	11,69	0,77	2,08	2,60	3,60	9,60	11,90	95	
2.0+2.0+4.2+4.2	1,61	1,61	3,39	3,39	-	4,23	10,00	11,28	0,67	2,13	2,52	3,10	9,80	11,60	95	
2.0+2.0+4.2+5.0	1,52	1,52	3,18	3,79	-	4,53	10,00	11,41	0,71	2,07	2,49	3,30	9,50	11,40	95	
2.0+2.0+4.2+6.0	1,41	1,41	2,96	4,23	-	4,85	10,00	11,68	0,77	2,06	2,58	3,60	9,50	11,90	95	
2.0+2.0+4.2+7.1	1,31	1,31	2,75	4,64	-	5,17	10,00	11,69	0,83	2,06	2,57	3,80	9,50	11,78	95	
2.0+2.0+5.0+5.0	1,43	1,43	3,57	3,57	-	4,68	10,00	11,52	0,73	2,04	2,48	3,40	9,40	11,40	95	
2.0+2.0+5.0+6.0	1,33	1,33	3,33	4,00	-	5,00	10,00	11,79	0,79	2,04	2,57	3,70	9,40	11,90	95	
2.0+2.5+2.5+2.5	2,11	2,63	2,63	2,63	-	3,42	10,00	11,27	0,53	2,18	2,58	2,50	10,00	11,90	95	
2.0+2.5+2.5+3.5	1,90	2,38	2,38	3,33	-	3,75	10,00	11,27	0,59	2,18	2,58	2,80	10,00	11,90	95	
2.0+2.5+2.5+4.2	1,79	2,23	2,23	3,75	-	3,91	10,00	11,27	0,61	2,15	2,54	2,90	9,90	11,70	95	
2.0+2.5+2.5+5.0	1,67	2,08	2,08	4,17	-	4,22	10,00	11,41	0,66	2,08	2,51	3,10	9,60	11,50	95	
2.0+2.5+2.5+6.0	1,54	1,92	1,92	4,62	-	4,38	10,00	11,55	0,69	2,08	2,55	3,20	9,60	11,80	95	
2.0+2.5+2.5+7.1	1,42	1,77	1,77	5,04	-	4,70	10,00	11,69	0,74	2,07	2,59	3,50	9,50	11,90	95	
2.0+2.5+3.5+3.5	1,74	2,17	3,04	3,04	-	4,08	10,00	11,27	0,65	2,18	2,58	3,00	10,00	11,90	95	
2.0+2.5+3.5+4.2	1,64	2,05	2,87	3,44	-	4,23	10,00	11,27	0,67	2,15	2,54	3,20	9,90	11,70	95	
2.0+2.5+3.5+5.0	1,54	1,92	2,69	3,85	-	4,38	10,00	11,41	0,69	2,08	2,51	3,20	9,60	11,50	95	
2.0+2.5+3.5+6.0	1,43	1,79	2,50	4,29	-	4,70	10,00	11								

4 Combination table

4 - 1 Combination Table

5MXM-A9

Heating -230V 50Hz-

Outdoor unit	Indoor unit	Heating capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room -A-	Room -B-	Room -C-	Room -D-	Room -E-	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V18 5MXM90N2V18 5MXM90N2V18 5MXM90N2V18 5MXM90A2V18 5MXM90A2V18	2.5+2.5+5.0+5.0	1,67	1,67	3,33	3,33	-	5,00	10,00	11,52	0,79	2,04	2,47	3,70	9,40	11,40	95
	2.5+3.5+3.5+3.5	1,92	2,69	2,69	2,69	-	4,40	10,00	11,27	0,70	2,17	2,57	3,30	10,00	11,90	95
	2.5+3.5+3.5+4.2	1,82	2,55	2,55	3,07	-	4,55	10,00	11,27	0,73	2,14	2,54	3,40	9,90	11,70	95
	2.5+3.5+3.5+5.0	1,72	2,41	2,41	3,45	-	4,86	10,00	11,41	0,77	2,08	2,50	3,60	9,60	11,50	95
	2.5+3.5+3.5+6.0	1,61	2,26	2,26	3,87	-	5,18	10,00	11,69	0,83	2,07	2,60	3,90	9,50	11,90	95
	2.5+3.5+4.2+4.2	1,74	2,43	2,92	2,92	-	4,87	10,00	11,28	0,78	2,12	2,50	3,70	9,70	11,50	95
	2.5+3.5+4.2+5.0	1,64	2,30	2,76	3,29	-	5,01	10,00	11,41	0,80	2,06	2,48	3,70	9,50	11,40	95
	2.5+4.2+4.2+4.2	1,66	2,78	2,78	2,78	-	5,02	10,00	11,28	0,81	2,09	2,47	3,80	9,60	11,40	95
	3.5+3.5+3.5+3.5	2,50	2,50	2,50	2,50	-	4,72	10,00	11,27	0,77	2,17	2,57	3,60	10,00	11,90	95
	3.5+3.5+3.5+4.2	2,38	2,38	2,38	2,86	-	4,87	10,00	11,27	0,79	2,14	2,54	3,70	9,90	11,70	95
	3.5+3.5+3.5+5.0	2,26	2,26	2,26	3,23	-	5,18	10,00	11,41	0,83	2,08	2,50	3,90	9,60	11,50	95
	3.5+3.5+4.2+4.2	2,27	2,27	2,73	2,73	-	5,19	10,00	11,28	0,85	2,12	2,50	3,90	9,70	11,50	95
	1.5+1.5+1.5+1.5+1.5	2,00	2,00	2,00	2,00	2,00	2,89	10,00	10,99	0,44	2,06	2,32	2,10	9,50	10,70	95
	1.5+1.5+1.5+1.5+2.0	1,88	1,88	1,88	1,88	2,50	3,06	10,00	11,00	0,47	2,06	2,32	2,20	9,50	10,62	95
	1.5+1.5+1.5+1.5+2.5	1,76	1,76	1,76	1,76	2,94	3,22	10,00	11,01	0,49	2,06	2,32	2,30	9,50	10,62	95
	1.5+1.5+1.5+1.5+3.5	1,58	1,58	1,58	1,58	3,68	3,39	10,00	11,67	0,52	2,06	2,55	2,40	9,50	11,80	95
	1.5+1.5+1.5+1.5+4.2	1,47	1,47	1,47	1,47	4,12	3,71	10,00	11,68	0,57	2,04	2,53	2,70	9,40	11,60	95
	1.5+1.5+1.5+1.5+5.0	1,36	1,36	1,36	1,36	4,55	3,86	10,00	11,75	0,59	2,02	2,54	2,80	9,30	11,70	95
	1.5+1.5+1.5+1.5+6.0	1,25	1,25	1,25	1,25	5,00	4,19	10,00	12,01	0,64	2,02	2,63	3,00	9,30	12,10	95
	1.5+1.5+1.5+1.5+7.1	1,15	1,15	1,15	1,15	5,42	4,51	10,00	12,02	0,70	2,02	2,63	3,30	9,30	12,05	95
	1.5+1.5+1.5+2.0+2.0	1,76	1,76	1,76	2,35	2,35	3,22	10,00	10,98	0,49	2,06	2,31	2,30	9,50	10,70	95
	1.5+1.5+1.5+2.0+2.5	1,67	1,67	1,67	2,22	2,78	3,22	10,00	11,67	0,49	2,06	2,55	2,30	9,50	11,70	95
	1.5+1.5+1.5+2.0+3.5	1,50	1,50	1,50	2,00	3,50	3,55	10,00	11,67	0,54	2,06	2,55	2,60	9,50	11,70	95
	1.5+1.5+1.5+2.0+4.2	1,40	1,40	1,40	1,87	3,93	3,71	10,00	11,68	0,57	2,04	2,53	2,70	9,40	11,59	95
	1.5+1.5+1.5+2.0+5.0	1,30	1,30	1,30	1,74	4,35	4,02	10,00	11,74	0,62	2,02	2,54	2,90	9,30	11,70	95
	1.5+1.5+1.5+2.0+6.0	1,20	1,20	1,20	1,60	4,80	4,35	10,00	12,00	0,67	2,02	2,63	3,10	9,30	12,10	95
	1.5+1.5+1.5+2.0+7.1	1,10	1,10	1,10	1,47	5,22	4,67	10,00	12,01	0,73	2,02	2,63	3,40	9,30	12,04	95
	1.5+1.5+1.5+2.5+2.5	1,58	1,58	1,58	2,63	2,63	3,39	10,00	11,67	0,52	2,05	2,54	2,40	9,40	11,70	95
	1.5+1.5+1.5+2.5+3.5	1,43	1,43	1,43	2,38	3,33	3,71	10,00	11,67	0,57	2,05	2,54	2,70	9,40	11,70	95
	1.5+1.5+1.5+2.5+4.2	1,34	1,34	1,34	2,23	3,75	3,87	10,00	11,69	0,59	2,04	2,53	2,80	9,40	11,58	95
	1.5+1.5+1.5+2.5+5.0	1,25	1,25	1,25	2,08	4,17	4,19	10,00	11,74	0,64	2,02	2,54	3,00	9,30	11,70	95
	1.5+1.5+1.5+2.5+6.0	1,15	1,15	1,15	1,92	4,62	4,51	10,00	12,00	0,70	2,02	2,63	3,30	9,30	12,10	95
	1.5+1.5+1.5+2.5+7.1	1,06	1,06	1,06	1,77	5,04	4,83	10,00	12,02	0,75	2,02	2,63	3,50	9,30	12,05	95
	1.5+1.5+1.5+3.5+3.5	1,30	1,30	1,30	3,04	3,04	4,04	10,00	11,67	0,62	2,05	2,54	2,90	9,40	11,70	95
	1.5+1.5+1.5+3.5+4.2	1,23	1,23	1,23	2,87	3,44	4,20	10,00	11,68	0,65	2,04	2,53	3,00	9,40	11,57	95
	1.5+1.5+1.5+3.5+5.0	1,15	1,15	1,15	2,69	3,85	4,51	10,00	11,74	0,70	2,02	2,54	3,30	9,30	11,70	95
	1.5+1.5+1.5+3.5+6.0	1,07	1,07	1,07	2,50	4,29	4,67	10,00	12,00	0,73	2,02	2,63	3,40	9,30	12,10	95
	1.5+1.5+1.5+3.5+7.1	0,99	0,99	0,99	2,32	4,70	4,98	10,00	12,03	0,78	2,02	2,63	3,70	9,30	12,06	95
	1.5+1.5+1.5+4.2+4.2	1,16	1,16	1,16	3,26	3,26	4,35	10,00	11,64	0,67	2,03	2,51	3,20	9,30	11,50	95
	1.5+1.5+1.5+4.2+5.0	1,09	1,09	1,09	3,07	3,65	4,66	10,00	11,84	0,72	2,02	2,57	3,40	9,30	11,90	95
	1.5+1.5+1.5+4.2+6.0	1,02	1,02	1,02	2,86	4,08	4,98	10,00	11,97	0,78	2,02	2,62	3,70	9,30	12,10	95
	1.5+1.5+1.5+5.0+5.0	1,03	1,03	1,03	3,45	3,45	4,81	10,00	11,88	0,75	2,03	2,62	3,50	9,30	12,00	95
	1.5+1.5+1.5+5.0+6.0	0,97	0,97	0,97	3,23	3,87	5,13	10,00	12,13	0,81	2,05	2,71	3,80	9,40	12,50	95
	1.5+1.5+2.0+2.0+2.0	1,67	1,67	2,22	2,22	2,22	3,22	10,00	11,67	0,49	2,06	2,55	2,30	9,50	11,70	95
	1.5+1.5+2.0+2.0+2.5	1,58	1,58	2,11	2,11	2,63	3,39	10,00	11,68	0,52	2,05	2,54	2,40	9,40	11,65	95
	1.5+1.5+2.0+2.0+3.5	1,43	1,43	1,90	1,90	3,33	3,71	10,00	11,69	0,57	2,05	2,55	2,70	9,40	11,66	95
	1.5+1.5+2.0+2.0+4.2	1,34	1,34	1,79	1,79	3,75	3,87	10,00	11,70	0,59	2,04	2,53	2,80	9,40	11,59	95
	1.5+1.5+2.0+2.0+5.0	1,25	1,25	1,67	1,67	4,17	4,19	10,00	11,74	0,64	2,02	2,54	3,00	9,30	11,70	95
	1.5+1.5+2.0+2.0+6.0	1,15	1,15	1,54	1,54	4,62	4,51	10,00	12,00	0,70	2,02	2,63	3,30	9,30	12,10	95
	1.5+1.5+2.0+2.0+7.1	1,06	1,06	1,42	1,42	5,04	4,83	10,00	12,01	0,75	2,02	2,63	3,50	9,30	12,04	95
1.5+1.5+2.0+2.5+2.5	1,50	1,50	2,00	2,50	2,50	3,55	10,00	11,67	0,54	2,05	2,54	2,60	9,40	11,70	95	
1.5+1.5+2.0+2.5+3.5	1,36	1,36	1,82	2,27	3,18	3,88	10,00	11,67	0,59	2,05	2,54	2,80	9,40	11,70	95	
1.5+1.5+2.0+2.5+4.2	1,28	1,28	1,71	2,14	3,59	4,03	10,00	11,68	0,62	2,04	2,53	2,90	9,40	11,56	95	
1.5+1.5+2.0+2.5+5.0	1,20	1,20	1,60	2,00	4,00	4,35	10,00	11,73	0,67	2,02	2,53	3,10	9,30	11,70	95	
1.5+1.5+2.0+2.5+6.0	1,11	1,11	1,48	1,85	4,44	4,51	10,00	11,99	0,70	2,02	2,63	3,30	9,30	12,10	95	
1.5+1.5+2.0+2.5+7.1	1,03	1,03	1,37	1,71	4,86	4,82	10,00	12,00	0,75	2,02	2,63	3,50	9,30	12,03	95	
1.5+1.5+2.0+3.5+3.5	1,25	1,25	1,67	2,92	2,92	4,20	10,00	11,67	0,65	2,05	2,54	3,00	9,40	11,70	95	
1.5+1.5+2.0+3.5+4.2	1,18	1,18	1,57	2,76	3,31	4,36	10,00	11,68	0,67	2,04	2,53	3,20	9,40	11,56	95	
1.5+1.5+2.0+3.5+5.0	1,11	1,11	1,48	2,59	3,70	4,51	10,00	11,73	0,70	2,02	2,53	3,30	9,30	11,70	95	
1.5+1.5+2.0+3.5+6.0	1,03	1,03	1,38	2,41	4,14	4,83	10,00	11,99	0,75	2,02	2,63	3,50	9,30	12,10	95	
1.5+1.5+2.0+3.5+7.1	0,96	0,96	1,28	2,24	4,55	5,14	10,00	12,00	0,81	2,02	2,63	3,80	9,30	12,03	95	
1.5+1.5+2.0+4.2+4.2	1,12	1,12	1,49	3,13	3,13	4,51	10,00	11,63	0,70	2,03	2,51	3,30	9,30	11,50	95	
1.5+1.5+2.0+4.2+5.0	1,06	1,06	1,41	2,96	3,52	4,82	10,00	11,84	0,75	2,02	2,57	3,50	9,30	11,90	95	
1.5+1.5+2.0+4.2+6.0	0,99	0,99														

4 Combination table

4 - 1 Combination Table

5MXM-A9

Heating ·230V 50Hz·

Outdoor unit	Indoor unit	Heating capacity [kW]					Total capacity [kW]			Power input [kW]			Total current [A]			Power factor [%]
		Room -A-	Room -B-	Room -C-	Room -D-	Room -E-	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	Minimum	Nominal	Maximum	
5MXM90M2V18 5MXM90N2V18 5MXM90N2V189 5MXM90A2V18 5MXM90A2V189	1.5+2.0+2.0+4.2+4.2	1.08	1.44	1.44	3.02	3.02	4.67	10.00	11.63	0.73	2.03	2.50	3.40	9.30	11.50	95
	1.5+2.0+2.0+4.2+5.0	1.02	1.36	1.36	2.86	3.40	4.98	10.00	11.83	0.78	2.02	2.57	3.70	9.30	11.90	95
	1.5+2.0+2.0+5.0+5.0	0.97	1.29	1.29	3.23	3.23	5.13	10.00	11.86	0.81	2.05	2.62	3.80	9.40	12.00	95
	1.5+2.0+2.5+2.5+2.5	1.36	1.82	2.27	2.27	2.27	3.87	10.00	11.66	0.59	2.05	2.53	2.80	9.40	11.70	95
	1.5+2.0+2.5+2.5+3.5	1.25	1.67	2.08	2.08	2.92	4.20	10.00	11.66	0.65	2.05	2.53	3.00	9.40	11.70	95
	1.5+2.0+2.5+2.5+4.2	1.18	1.57	1.97	1.97	3.31	4.36	10.00	11.67	0.67	2.04	2.52	3.20	9.40	11.53	95
	1.5+2.0+2.5+2.5+5.0	1.11	1.48	1.85	1.85	3.70	4.51	10.00	11.72	0.70	2.02	2.53	3.30	9.30	11.70	95
	1.5+2.0+2.5+2.5+6.0	1.03	1.38	1.72	1.72	4.14	4.82	10.00	11.98	0.75	2.02	2.62	3.50	9.30	12.10	95
	1.5+2.0+2.5+2.5+7.1	0.96	1.28	1.60	1.60	4.55	5.14	10.00	11.99	0.81	2.02	2.63	3.80	9.30	12.02	95
	1.5+2.0+2.5+3.5+3.5	1.15	1.54	1.92	2.69	2.69	4.36	10.00	11.66	0.67	2.05	2.53	3.20	9.40	11.70	95
	1.5+2.0+2.5+3.5+4.2	1.09	1.46	1.82	2.55	3.07	4.68	10.00	11.67	0.73	2.04	2.52	3.40	9.40	11.53	95
	1.5+2.0+2.5+3.5+5.0	1.03	1.38	1.72	2.41	3.45	4.83	10.00	11.72	0.75	2.02	2.53	3.50	9.30	11.70	95
	1.5+2.0+2.5+3.5+6.0	0.97	1.29	1.61	2.26	3.87	5.14	10.00	11.98	0.81	2.02	2.62	3.80	9.30	12.10	95
	1.5+2.0+2.5+4.2+4.2	1.04	1.39	1.74	2.92	2.92	4.83	10.00	11.63	0.76	2.03	2.50	3.50	9.30	11.50	95
	1.5+2.0+2.5+4.2+5.0	0.99	1.32	1.64	2.76	3.29	5.14	10.00	11.82	0.81	2.02	2.57	3.80	9.30	11.90	95
	1.5+2.0+3.5+3.5+3.5	1.07	1.43	2.50	2.50	2.50	4.68	10.00	11.66	0.73	2.05	2.53	3.40	9.40	11.70	95
	1.5+2.0+3.5+3.5+4.2	1.02	1.36	2.38	2.38	2.86	5.00	10.00	11.67	0.79	2.04	2.52	3.70	9.40	11.53	95
	1.5+2.0+3.5+3.5+5.0	0.97	1.29	2.26	2.26	3.23	5.14	10.00	11.72	0.81	2.02	2.53	3.80	9.30	11.70	95
	1.5+2.0+3.5+4.2+4.2	0.97	1.30	2.27	2.73	2.73	5.15	10.00	11.63	0.81	2.03	2.50	3.80	9.30	11.50	95
	1.5+2.5+2.5+2.5+2.5	1.30	2.17	2.17	2.17	2.17	4.04	10.00	11.66	0.62	2.04	2.53	2.90	9.40	11.60	95
	1.5+2.5+2.5+2.5+3.5	1.20	2.00	2.00	2.00	2.80	4.36	10.00	11.66	0.67	2.04	2.53	3.20	9.40	11.60	95
	1.5+2.5+2.5+2.5+4.2	1.14	1.89	1.89	1.89	3.18	4.52	10.00	11.67	0.70	2.03	2.52	3.30	9.40	11.52	95
	1.5+2.5+2.5+2.5+5.0	1.07	1.79	1.79	1.79	3.57	4.66	10.00	11.71	0.72	2.02	2.53	3.40	9.30	11.60	95
	1.5+2.5+2.5+2.5+6.0	1.00	1.67	1.67	1.67	4.00	4.98	10.00	11.97	0.78	2.02	2.62	3.70	9.30	12.10	95
	1.5+2.5+2.5+3.5+3.5	1.11	1.85	1.85	2.59	2.59	4.52	10.00	11.66	0.70	2.04	2.53	3.30	9.40	11.60	95
	1.5+2.5+2.5+3.5+4.2	1.06	1.76	1.76	2.46	2.96	4.84	10.00	11.67	0.76	2.03	2.52	3.50	9.40	11.52	95
	1.5+2.5+2.5+3.5+5.0	1.00	1.67	1.67	2.33	3.33	4.98	10.00	11.71	0.78	2.02	2.53	3.70	9.30	11.60	95
	1.5+2.5+2.5+4.2+4.2	1.01	1.68	1.68	2.82	2.82	4.99	10.00	11.62	0.78	2.03	2.50	3.70	9.30	11.50	95
	1.5+2.5+3.5+3.5+3.5	1.03	1.72	2.41	2.41	2.41	4.84	10.00	11.66	0.76	2.04	2.53	3.60	9.40	11.60	95
	1.5+2.5+3.5+3.5+4.2	0.99	1.64	2.30	2.30	2.76	5.00	10.00	11.67	0.79	2.03	2.52	3.70	9.40	11.52	95
	1.5+3.5+3.5+3.5+3.5	0.97	2.26	2.26	2.26	2.26	5.16	10.00	11.68	0.82	2.04	2.53	3.80	9.40	11.59	95
	2.0+2.0+2.0+2.0+2.0	2.00	2.00	2.00	2.00	2.00	3.55	10.00	11.67	0.54	2.05	2.54	2.60	9.40	11.70	95
	2.0+2.0+2.0+2.0+2.5	1.90	1.90	1.90	1.90	2.38	3.71	10.00	11.68	0.57	2.05	2.54	2.70	9.40	11.62	95
	2.0+2.0+2.0+2.0+3.5	1.74	1.74	1.74	1.74	3.04	4.04	10.00	11.69	0.62	2.05	2.54	2.90	9.40	11.63	95
	2.0+2.0+2.0+2.0+4.2	1.64	1.64	1.64	1.64	3.44	4.20	10.00	11.70	0.65	2.04	2.53	3.00	9.40	11.57	95
	2.0+2.0+2.0+2.0+5.0	1.54	1.54	1.54	1.54	3.85	4.51	10.00	11.73	0.70	2.02	2.53	3.30	9.30	11.70	95
	2.0+2.0+2.0+2.0+6.0	1.43	1.43	1.43	1.43	4.29	4.67	10.00	11.99	0.73	2.02	2.62	3.40	9.30	12.10	95
	2.0+2.0+2.0+2.0+7.1	1.32	1.32	1.32	1.32	4.70	4.98	10.00	12.00	0.78	2.02	2.63	3.70	9.30	12.03	95
	2.0+2.0+2.0+2.5+2.5	1.82	1.82	1.82	2.27	2.27	3.87	10.00	11.66	0.59	2.05	2.53	2.80	9.40	11.70	95
	2.0+2.0+2.0+2.5+3.5	1.67	1.67	1.67	2.08	2.92	4.20	10.00	11.66	0.65	2.05	2.53	3.00	9.40	11.70	95
	2.0+2.0+2.0+2.5+4.2	1.57	1.57	1.57	1.97	3.31	4.36	10.00	11.67	0.67	2.04	2.52	3.20	9.40	11.53	95
	2.0+2.0+2.0+2.5+5.0	1.48	1.48	1.48	1.85	3.70	4.51	10.00	11.72	0.70	2.02	2.53	3.30	9.30	11.70	95
	2.0+2.0+2.0+2.5+6.0	1.38	1.38	1.38	1.72	4.14	4.82	10.00	11.98	0.75	2.02	2.62	3.50	9.30	12.10	95
	2.0+2.0+2.0+2.5+7.1	1.28	1.28	1.28	1.60	4.55	5.14	10.00	11.99	0.81	2.02	2.63	3.80	9.30	12.02	95
	2.0+2.0+2.0+3.5+3.5	1.54	1.54	1.54	2.69	2.69	3.87	10.00	11.66	0.59	2.05	2.53	2.80	9.40	11.70	95
	2.0+2.0+2.0+3.5+4.2	1.46	1.46	1.46	2.55	3.07	4.68	10.00	11.67	0.73	2.04	2.52	3.40	9.40	11.53	95
	2.0+2.0+2.0+3.5+5.0	1.38	1.38	1.38	2.41	3.45	4.83	10.00	11.72	0.75	2.02	2.53	3.50	9.30	11.70	95
	2.0+2.0+2.0+3.5+6.0	1.29	1.29	1.29	2.26	3.87	5.14	10.00	11.98	0.81	2.02	2.62	3.80	9.30	12.10	95
	2.0+2.0+2.0+4.2+4.2	1.39	1.39	1.39	2.92	2.92	4.83	10.00	11.63	0.76	2.03	2.50	3.50	9.30	11.50	95
	2.0+2.0+2.0+4.2+5.0	1.32	1.32	1.32	2.76	3.29	5.14	10.00	11.82	0.81	2.02	2.57	3.80	9.30	11.90	95
	2.0+2.0+2.5+2.5+2.5	1.74	1.74	2.17	2.17	2.17	4.04	10.00	11.66	0.62	2.04	2.53	2.90	9.40	11.60	95
	2.0+2.0+2.5+2.5+3.5	1.60	1.60	2.00	2.00	2.80	4.36	10.00	11.66	0.67	2.04	2.53	3.20	9.40	11.60	95
	2.0+2.0+2.5+2.5+4.2	1.52	1.52	1.89	1.89	3.18	4.52	10.00	11.67	0.70	2.03	2.52	3.30	9.40	11.52	95
	2.0+2.0+2.5+2.5+5.0	1.43	1.43	1.79	1.79	3.57	4.66	10.00	11.71	0.72	2.02	2.53	3.40	9.30	11.60	95
	2.0+2.0+2.5+2.5+6.0	1.33	1.33	1.67	1.67	4.00	4.98	10.00	11.97	0.78	2.02	2.62	3.70	9.30	12.10	95
	2.0+2.0+2.5+3.5+3.5	1.48	1.48	1.85	2.59	2.59	4.52	10.00	11.66	0.70	2.04	2.53	3.30	9.40	11.60	95
	2.0+2.0+2.5+3.5+4.2	1.41	1.41	1.76	2.46	2.96	4.84	10.00	11.67	0.76	2.03	2.52	3.50	9.40	11.52	95
	2.0+2.0+2.5+3.5+5.0	1.33	1.33	1.67	2.33	3.33	4.98	10.00	11.71	0.78	2.02	2.53	3.70	9.30	11.60	95
	2.0+2.0+2.5+4.2+4.2	1.34	1.34	1.68	2.82	2.82	4.99	10.00	11.62	0.78	2.03	2.50	3.70	9.30	11.50	95
	2.0+2.0+3.5+3.5+3.5	1.38	1.38	2.41	2.41	2.41	4.84	10.00	11.66	0.76	2.04	2.53	3.60	9.40	11.60	95
	2.0+2.0+3.5+3.5+4.2	1.32	1.32	2.30	2.30	2.76	5.00	10.00	11.67	0.79	2.03	2.52	3.70	9.40	11.52	95
	2.0+2.5+2.5+2.5+2.5	1.67	2.08	2.08	2.08	2.08	4.20	10.00	11.66	0.65	2.04	2.52	3.00	9.40	11.60	95
	2.0+2.5+2.5+2.5+3.5	1.54	1.92	1.92	1.92	2.69	4.36	10.00	11.66	0.67	2.04	2.52	3.20	9.40	11.60	95
	2.0+2.5+2.5+2.5+4.2	1.46	1.82	1.82	1.82	3.07	4.68	10.00	11.67	0.73	2.03	2.52	3.40	9.30	11.51	95
	2.0+2.5+2.5+2.5+5.0	1.38	1.72	1.72	1.72	3.45	4.82	10.00	11.71	0.75	2.02	2.53	3.50	9.30	11.60	95
	2.0+2.5+2.5+2.5+6.0	1.29	1.61	1.61	1.61	3.87	5.14	10.00	11.97	0.81	2.02	2.62	3.80	9.30	12.10	95
	2.0+2.5+2.5+3.5+3.5	1.43	1.79	1.79	2.50	2.50	4.68	10.00	11.66	0.73	2.04	2.52	3.40	9.40	11.60	95
	2.0+2.5+2.5+3.5+4.2	1.36	1.70	1.70	2.38	2.86	5.00	10.00	11.67	0.79	2.03	2.52	3.70	9.30	11.51	95
2.0+2.5+2.5+3.5+5.0	1.29	1.61	1.61	2.26	3											


5 Capacity tables

5 - 1 Capacity Table Legend

In order to fulfill more your requirements on quick access of data in the format you require, we have developed a tool to consult capacity tables.

Below you can find the link to the capacity table database and an overview of all the tools we have to help you select the correct product:

- **Capacity table database:** lets you find back and export quickly the capacity information you are looking for based upon unit model, refrigerant temperature and connection ratio.
- You can access the capacity table viewer here:
https://my.daikin.eu/content/denv/en_US/home/applications/software-finder/capacity-table-viewer.html

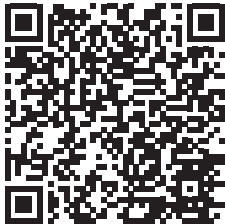


- An overview of **all software tools** that we offer can be found here:
https://my.daikin.eu/denv/en_US/home/applications/software-finder.html



6 Dimensional drawings

6 - 1 Dimensional Drawings


5MXM-A9

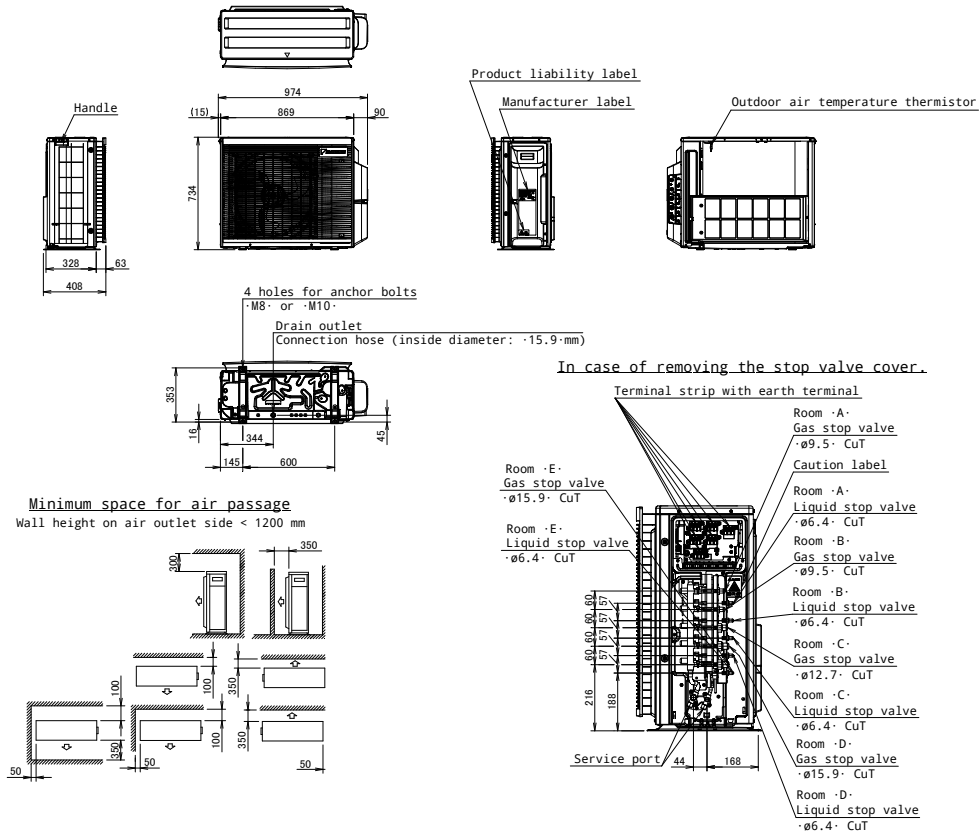

7 Centre of gravity

7 - 1 Centre of Gravity

5MXM-A9

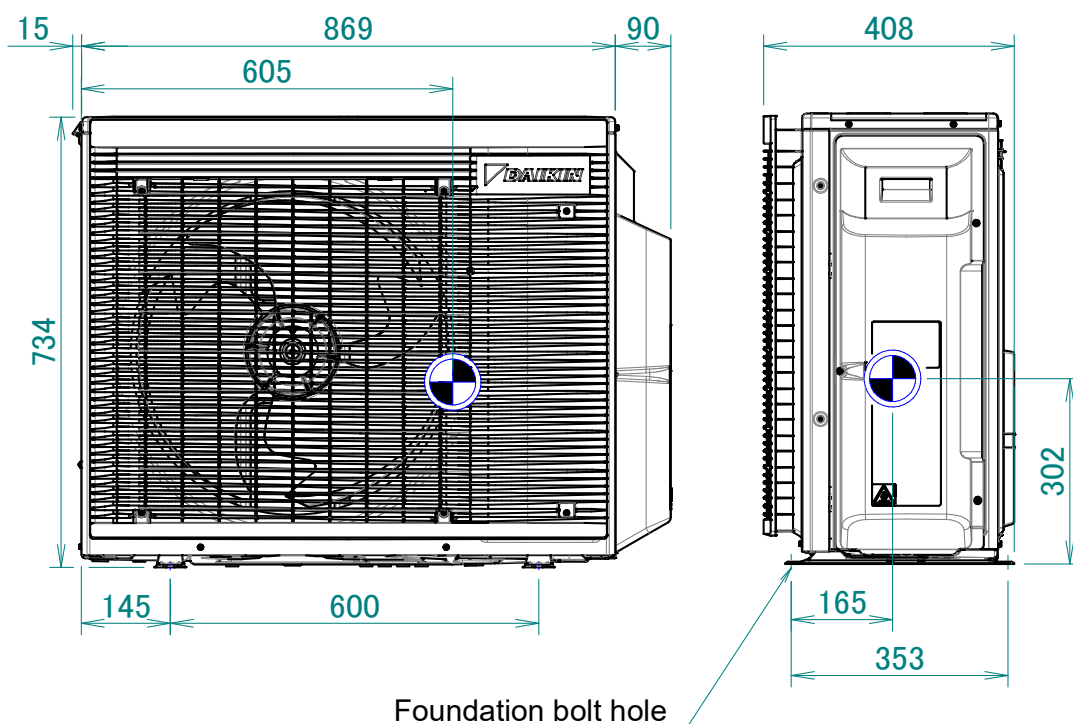


4D139751

8 Piping diagrams

8 - 1 Piping Diagrams

5MXM-A9

Outdoor Unit

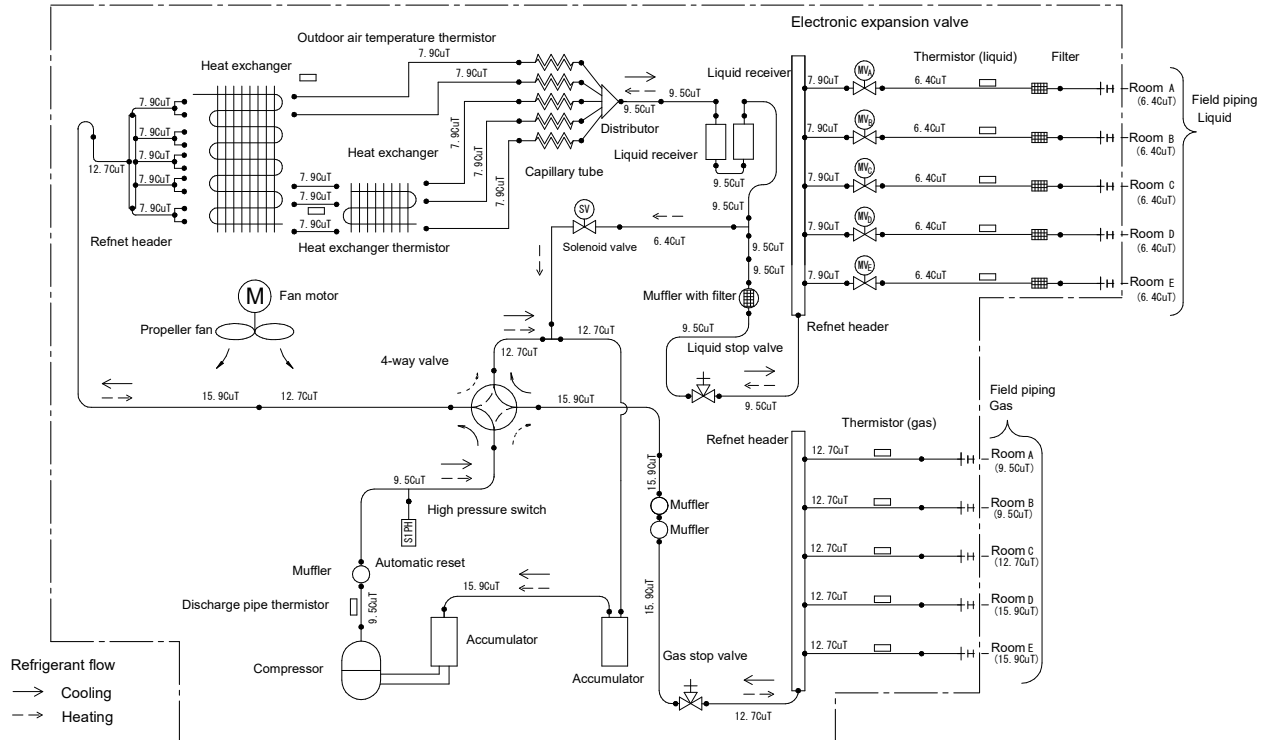


3D100792C

9 Wiring diagrams

9 - 1 Wiring Diagrams - Single Phase

5MXM-A9

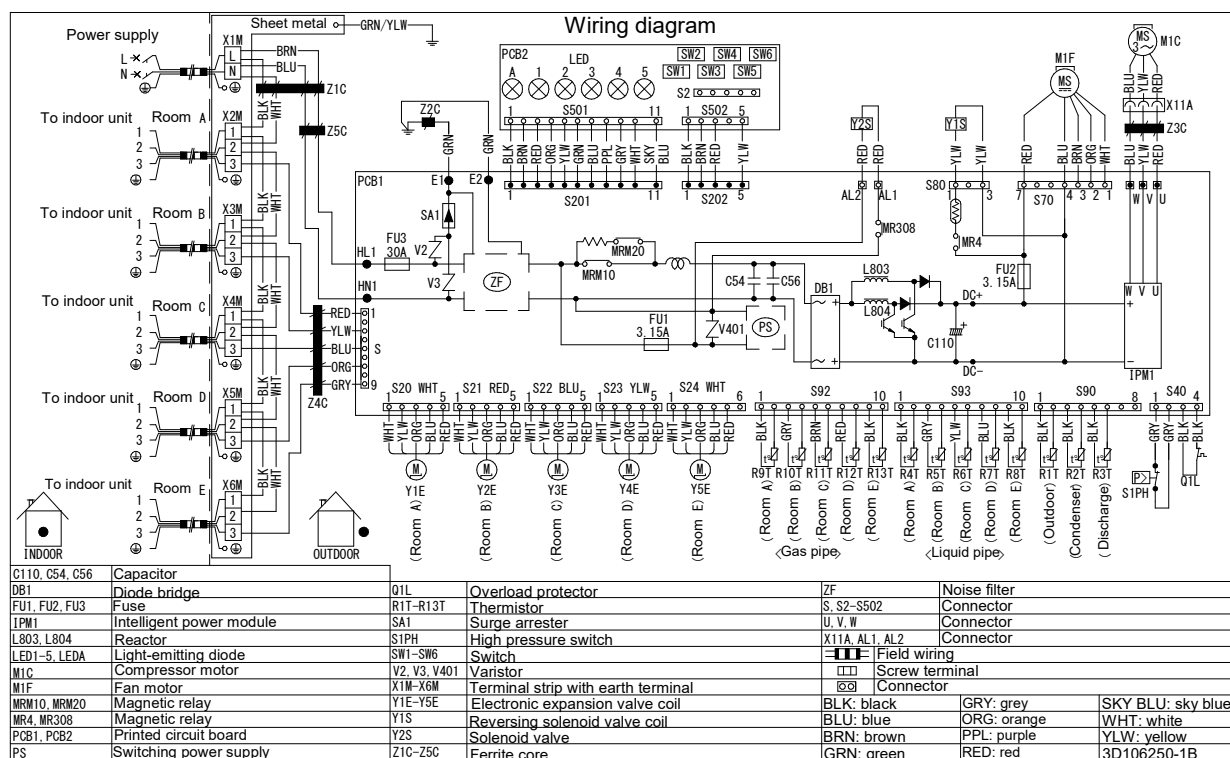


3D106250B

10 Sound data

10 - 1 Sound Pressure Spectrum

5MXM-A9

10

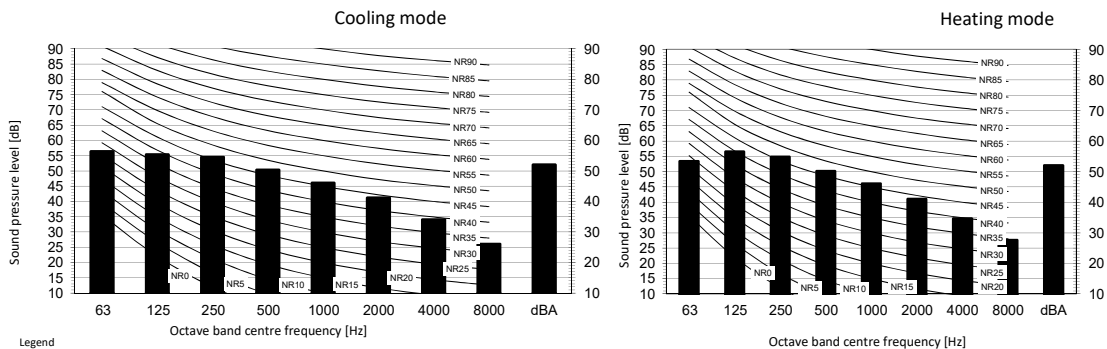


Legend

dBA = A-weighted sound pressure level (A scale according to IEC).

A Scale

B Fan speed: High

Location of microphone

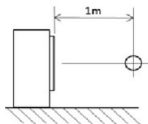

Cooling Total dB

A	B
dBA	52

Heating Total dB

A	B
dBA	52

Notes



- Operating conditions: power source 220-240 V/220 V 50/60 Hz; JIS standard
- Background noise already taken into account.
- Operating noise varies depending on operation and ambient conditions.
- The operation noise measuring method is in accordance with JISC9612.
- Measuring location: anechoic chamber
- The values above are for connecting with the following indoor unit types:
1.5, 2.0, 2.5, 3.5, 4.2, 5.0, 6.0, 7.1 kW Class

3D106226B

11 Operation range

11 - 1 Operation Range

2MXM-A9
3MXM-A9
4MXM-A9
5MXM-A9

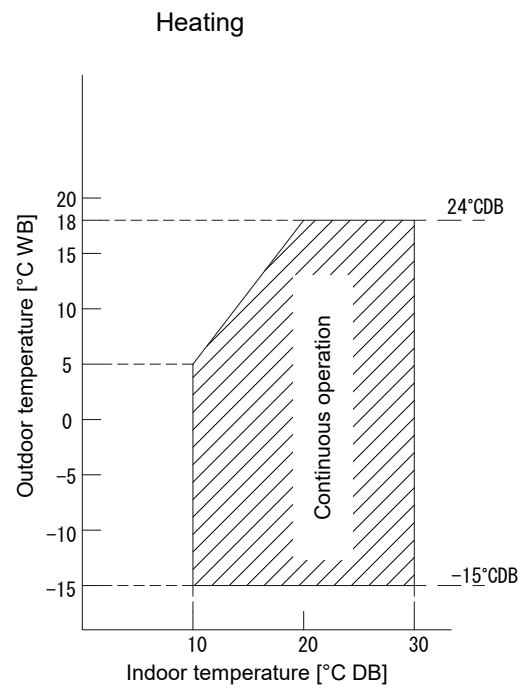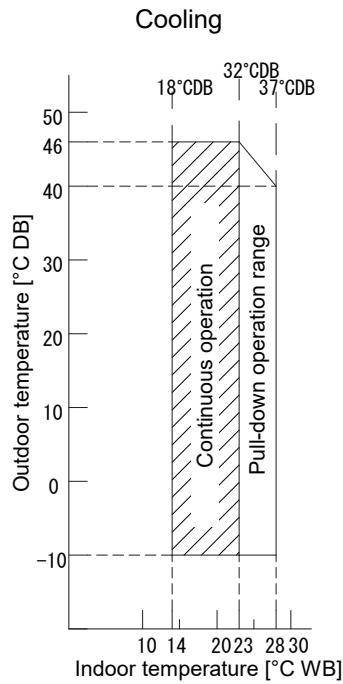


Notes

- The graph is based on the following conditions.
Corresponding refrigerant piping length: 5 m
Level difference: 0 m
Air flow rate High

3D101376D

Daikin Europe N.V. Naamloze Vennootschap · Zandvoordestraat 300 · 8400 Oostende · Belgium · www.daikin.eu · BE 0412 120 336 · RPR Oostende (Responsible Editor)



EEDEN23

02/2023



Daikin Europe N.V. participates in the ECP programmes for Fan Coil Units and Variable Refrigerant Flow systems. Daikin Applied Europe S.p.A. participates in the ECP programmes for Liquid Chilling Packages and Hydronic Heat Pumps. Check ongoing validity of certificate: www.eurovent-certification.com

The present leaflet is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V. Daikin Europe N.V. has compiled the content of this leaflet to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this leaflet. All content is copyrighted by Daikin Europe N.V.